



**Heartland  
AG SYSTEMS**

Heartland Agriculture, LLC

**NITROMASTER  
TOOLBAR  
8000 SERIES**

**OWNERS MANUAL  
ASSEMBLY INSTRUCTIONS  
AND PARTS LIST  
OM-8000**

**HEARTLAND AG SYSTEMS**  
1180 STATE HWY 7 EAST  
HUTCHINSON, MN. 55350  
(320) 587-4030

**ISSUE  
MARCH 2022**



# WARRANTY REGISTRATION

## TO THE DEALER:

Inspect the implement thoroughly after assembly to be certain it is functioning properly before delivering it to the customer. Check off each item as it is found satisfactory or after proper adjust is made.

### PRE -DELIVERY CHECKLIST

- 1. All hardware properly tightened.
- 2. Lubrication of grease fittings.
- 3. All decals properly located and readable.
- 4. Other adjustments, "level operation", "drawbar height", etc.
- 5. Proper tongue weight after all options are mounted.  
Adjustments made if required.
- 6. Overall condition. Touch-up paint any scratches. Clean and polish
- 7. Operator's manual.

Review the operator's manual with the customer. Explain the following:

- 1. Safe operation and service
- 2. Correct machine installation and operation.
- 3. Correct and periodic lubrication and maintenance.
- 4. Daily and periodic inspection.
- 5. Troubleshooting.
- 6. Storing machine.
- 7. Heartland AG Systems parts and service
- 8. Have the customer write the machine model and serial number in the space provided in the manual introduction
- 9. Give the customer the operator's manual and encourage the customer to read the manual carefully.

Customer Information	
Date delivered	
Customer name	
Customer address	
Signature	
Model number	
Serial number	

Seller Information	
Date set-up	
Signature	
Dealer name	
Address	
City, state, zip	
Phone	

PLEASE FILL OUT THIS SHEET AND RETURN TO HEARTLAND AG SYSTEMS  
1180 State Highway 7 East Hutchinson, MN 55350  
[www.heartlandag.com](http://www.heartlandag.com) | Heartland Agriculture, LLC dba Heartland AG Systems



# CONTENTS

ISSUE  
11/10/20

8000CNT08

Dealer Checklist (Fill out and return)	1	2014 High Trip Bundle Ass'y (Edge-bent Shank)	29A
Table of Contents	1	Stagger Bracket Assembly	30
To the Owner	2	AG36 Coulter (Bolt-on-Dust Cap) discontinued	31 & 32
Warranty	W1-8	AG3B Coulter (Bolt-on-Dust Cap) discontinued	33 & 34
Introduction	5	Coulter Service & Maintenance Procedure	35
Safety	6	AG36 Coulter, W/maintenance-free Hub	36 & 37
Decals	7	AG 38, Coulter Assembly, Generation Two	38 & 39
Assembly Procedure	8 to 10	AG 38, Coulter Assembly, Generation Three	40 & 41
Coulter and disk sealer mounting info	10A	Coulter Service Procedure	42
Operating Instructions & Warnings	11	Disk Sealer Assembly, with Flanged Hub	96-99
Trouble-Shooting	12	Disk Sealer Assembly, Spindle Type	43 to 45
Toolbar Illustration	13	Disk Sealer Assembly, 13 Inch W/bolt-on-hub	46 & 47
Toolbar Parts List	14	Disk Sealer Assembly, 18 inch W/bolt-on-hub	48
Secondary Wing Assembly	15	Disk Sealer W/ floating arms	49
Gauge Wheel – Mechanical	16	Disk Sealer Assembly Instructions	50
Hubs Illustration	17	–	51
Field Hitch Assembly, Standard	18	Safety Light Kit, Optional	52
Field Hitch Assembly, Hydraulic Leveling	19	NH3 Application Options	53
Field Hitch Assembly ((AG129XT) discontinued	20	NH3 Break-Away Coupling Device Information	54
Hydraulic Plumbing Schematics	21 to 24	NH3 Arm Style Quick Coupler Stand Kit 2015	55
Hydraulic Cylinders And Parts	25	NH3 Plumbing Schematic Illustration	55A
Coil Shank Assembly	26	Dickey-john Thermal Transfer Unit	55B
Spring Bundle Assembly (Yr 2000 to Present)	27	Shank Location Illustrations, Std. Shanks	56
Spring Bundle Assembly (Dual Spring)	28	Shank Locations with Hi-Trip Bundles	57 & 58
High Trip Spring Bundle Ass'y (Flat Shank)	29	Montag Cart Mount and Field Hitch	59 & 60
			61 & 62

## **TO THE OWNER**

This manual has been prepared to assist you in the assembly of your new equipment and contains information pertaining to safety, operating information and all its parts.

Our personnel in sales and service are always available to assist you when questions arise concerning the assembly and operation of your machine.

When ordering parts, please refer to part numbers and descriptions as listed throughout this book. All parts and whole goods will be shipped FOB Hutchinson, Minnesota. Always check merchandise immediately upon receipt for damage or shortage. Note any discrepancy on the carrier's bill of lading and notify Heartland AG Systems within 10 days.

Any returned goods will be subject to a 20 percent restocking charge.

Heartland AG Systems reserves the right to make improvements and modifications on equipment without obligation to change previously built equipment. All prices are subject to change without notice.



## **Warranty Policies and Terms**

The Heartland Agriculture, LLC warranty is a limited warranty that is provided to the retail purchaser in return for consideration paid as part of the purchase price for a product. The selling dealer must review the warranty coverage with the retail purchaser and obtain a signature on the Operators Manual for warranty verification.

The warranty described here is for Heartland Agriculture, LLC doing business as Heartland AG Systems and its product line Heartland AG Systems Equipment sold and registered in the United States and Canada and normally operated in the United States and Canada.

### **Warranty Period**

The warranty period for all coverage begins at the time that any person, dealer or agent first places the unit into service. At the latest, a unit is placed into service when purchased or delivered to a purchaser.

### **What's Covered**

If a defect in material or workmanship is found in a unit and reported during the Warranty period, Heartland AG Systems will pay parts and labor costs to repair the defects if the services are performed by an authorized Heartland AG Systems dealer. If parts are needed during the repair, Heartland AG Systems will, at its option, use genuine Heartland AG Systems, or remanufactured parts.

Heartland AG Systems provides no warranty, express or implied, for a component or other item that is separately warranted to the purchaser by its manufacturer, such as tires. Check with your local dealer for these details.

### **Exclusive Remedy**

The remedy of repairing a defect in material or workmanship at a Heartland AG Systems dealership under the terms of this warranty is the purchaser's exclusive remedy and is in lieu of any other remedy otherwise available.

### **No Modification or Extension of Warranty**

The Heartland AG Systems Warranty is limited to the written terms in the warranty statement. Heartland AG Systems does not authorize any person, dealer, or agent to change or extend the terms of this warranty in any manner. Any assistance to the purchaser in the repair or operation of any Heartland AG Systems product outside the terms or limitations or exclusions of this warranty will not constitute a waiver of the terms, limitations or exclusions of this warranty, nor will such assistance extend or re-establish the warranty.

The warranty is void if the unit is used in an application for which it is not designed or the unit has been scrapped, salvaged, stolen, junked or totaled.



## Limitations and Exclusions

The Heartland AG Systems warranty gives you specific legal rights and you may also have other rights, which vary from state to state. This section contains the entire Heartland AG Systems warranty. Heartland AG Systems makes no other representations or warranties, expressed or implied, and specifically excludes the implied warranties of merchantability and fitness for particular purpose. Heartland AG Systems will not be liable for incidental or consequential damages resulting from a breach of the written warranty or any implied warranty.

- These limitations and exclusions may not be allowed by some states or provinces and shall not apply to the extent such limitations or exclusions are not allowed by applicable state/provincial law.

## Owner's Responsibility

The Heartland AG Systems Warranty remains in effect during the warranty period if the owner performs the required maintenance at the recommended intervals outlined in the product's operator's manual and the unit is operated within its rated capacity. Genuine Heartland AG Systems service parts or Heartland AG Systems approved service parts that meet Heartland AG Systems specifications must be used for maintenance and repairs.

## What Is Not Covered

- Replacement of non-defective wear items expected to be replaced during the warranty period, including, but not limited to: lights, fuses, belts, drive sprockets and chains, hose, soil engaging tools, spray tips, fertilizer deflectors, spinner blades and accessories or items replaced due to customer demand.
- Normal maintenance parts and service, including, but not limited to lubrication, coolants, and filters.
- All travel costs associated with hauling or towing a customer's machine to and from a repair center related to any warranty repair unless specifically covered by a program or policy.
- Repairs arising from any unauthorized modification to the product.
- Repairs arising from service performed by agents not approved by Heartland AG Systems.
- Repairs arising from storage deterioration, failure to maintain the equipment, improper use of the equipment, collision or other accident, vandalism, or other casualty, or operation beyond the rated capacity or specifications.
- Repairs arising from abuse or neglect including, but not limited to operation without adequate lubricants or coolant, over-speeding, contaminated fluids, improper storage, starting, warm-up, or shutdown practices.
- Failure of the machine, its implements or attachments caused by improper field application or overloading.
- Premiums charged for over-time labor costs.
- Economic loss, including lost profits, crop loss, equipment rental or other expenses.
- Cost associated with cleaning of machine in preparation for service.
- Loss or damage during shipment.



- Cost of initial setup or installation of any optional equipment or attachments to a unit.
- Items used for repairs include, but are not limited to: solvents, cleaners, anti-seize lubricants, oil-dry, shop towels, shop supplies, special tools, etc.
- Included, but not limited to are checkups, adjustments, and shimming, tune-ups, spread pattern checks, etc.
- Unauthorized modification or field fixes.
- All costs of special tools or shop supplies incurred with repairs.
- Claims for stolen equipment or parts.
- Claims for replacing a complete assembly when the repair is less than the replacement.
- Claims involving the inspection or reconditioning of units.
- Shop comebacks: any duplicate, repeat, or comeback repair resulting from improper diagnosis, testing, or poor service work.
- Cost of removing or installing Non-Heartland AG Systems optional equipment or attachments.

#### **Base Warranty Coverage**

- Base Warranty is the factory warranty provided to the customer at no additional cost for a specific period covering the complete machine.

• Liquid Applicators, except tires	1 Year
• Spreaders and Tenders, except tires	1 Year
• Nh3 Wagons, except tires	1 Year
• Bumper Hitches	1 Year
• Disc Covers	1 Year
• Parts	90 Days
• Tandem Wagons (except tires and main frame)	1 year
o Tandem Wagon main frame	5 Years
• Nitromaster Toolbars shall carry the following pro-rated warranty:	
o Year one, all components except tires	100%
o Year two, center section and wings	80%
o Year three, center section and wings	50%
o Year four, center section and wings	25%
o Year five, center section and wings	10%



### Tires

Tires installed on all Heartland AG Systems Equipment are warranted and serviced by their manufacturer's service outlets. Some manufacturers have separate service outlets for off road agricultural and construction equipment. Service is available by contacting the tire manufacturer's local representative.

### Warranty Registration

All machinery items, which are invoiced by Heartland AG Systems on separate receivables, must be registered for warranty. The warranty period for all coverage begins at the time that any person, dealer, or agent first places the unit into service. New machine warranty coverage begins when the machine is registered. Registration is accomplished when a properly completed Warranty Registration is received and processed by Heartland AG Systems.

### Operator's Manual/Warranty Receipt Verification

The Heartland AG Systems New Equipment Limited Warranty for Agricultural Equipment statement must be filled out and signed by the customer indicating receipt and an understanding of the operator's manual and the warranty statement,

- The original form must be mailed to the address on the form.
- Make one copy for the Dealer. This copy must be retained by your dealership the same as any other legal document.
- Make a second copy for the customer.

### Heartland AG Systems Responsibility

If a defect in material or workmanship is found in a product during its warranty period, Heartland AG Systems will pay parts and labor costs to repair the defect when the service is performed by an authorized Heartland AG Systems dealer or agent. If parts are needed during the repair, Heartland AG Systems will, at its option, use genuine Heartland AG Systems new or remanufactured parts. These responsibilities include, but are not limited to:

- Costs for repairs that are the result of defects in material and workmanship
- Payment to dealers per policy in a timely manner
- Service information to dealers
- Identify product deficiencies and take corrective action by field campaigns
- Make determination of premature wear
- Provide unit that is free of defects in material & workmanship

### Dealer Responsibility



Heartland Agriculture, LLC



Heartland AG Systems dealers are responsible for providing prompt, courteous, and willing service to all Heartland AG Systems equipment owners. These responsibilities include but are not limited to:

- Equipment set-up and pre-delivery
- Sell the right product for the intended application
- Inspect the unit and initiate recovery action on any shipping damage and or shortages
- Instruct customer on proper use, maintenance, and safety features of machine
- Advise and explain warranty coverage to customer
- Diagnose the problem, repair the unit, and submit claims in accordance with the terms and conditions of the warranty claim policies
- Take responsibility for saying "NO" to customers on non-warranty failures
- Apply failure analysis to questionable repairs
- Complete product update campaigns
- Have properly trained technicians and adequate tools for the job
- Retain proper documentation of failure repaired

### **Owners Responsibility**

The Heartland AG Systems warranty remains in effect during the stated warranty period if the owner performs the required maintenance at the recommended times as outlined in the products operator's manual. Genuine Heartland AG Systems or Heartland AG Systems approved service parts must be used for maintenance. Additionally, the owner will pay for all transportation or travel expenses related to any warranty repair.

These responsibilities include, but are not limited to:

- Perform maintenance as indicated in the operator's manual
- Use the unit in the correct application (non-abusive)
- Notify dealer of failures and have the machine available for repair in a timely manner
- Training operators
- Travel cost, towing charges, and service calls
- Normal wear items
- Machine damage (accidental)
- Adjustments for application
- Machine inspection (daily walk-around)

### **Warranty Eligibility**

The dealer is responsible to determine that any Heartland AG Systems equipment is covered by Heartland AG Systems warranty before performing a repair and that the repair is a warrantable failure. Any dealer who is in doubt of the equipment's warranty eligibility may call Heartland AG Systems for verification.

### **Warranty Repairs Made by the Customer**



If a Heartland AG Systems dealer determines that the customer is capable, and the customer requests permission to perform select(warranty)repairs on his product, the Heartland AG Systems dealer is authorized to grant this customer request. The servicing dealer should provide the parts to the customer upon request, and to assure that customer is properly instructed on how to perform the repairs correctly.

The servicing dealer is responsible and accountable for claim accuracy and validity; specifically, in areas such as the parts replaced date, and assurances that the parts are installed as instructed by Heartland AG Systems. The comments section of the claim should clearly state that the customer installed the parts. The claim reimbursement will be for parts and applicable handling only. No labor is allowed! All replacement parts must be held for possible recall.

### **Parts Shortages on Whole-Goods**

Dealers may submit a claim for parts shortages discovered during pre-delivery or during final assembly at the dealer's location. All claims for shortages must be submitted 5 days from the original ship date from the plant and before the warranty start date.

### **Warranty Reimbursement Policies**

Heartland AG Systems provides for warranty reimbursement due to defects in material or workmanship only. Warranty does not include restoring any machine or portion thereof, which has accumulated hours of operation, to factory new condition. This includes customer owned and used equipment.

Except for only a few items not available through Heartland AG Systems, all Heartland AG Systems manufactured equipment warranty repairs must be performed using only Heartland AG Systems genuine new or remanufactured parts and accessories. Installation of non-Heartland AG Systems parts does not qualify for warranty reimbursement and can void the machine's warranty.

### **Parts**

It is fully expected that all claims be filed using part numbers from the applicable Heartland AG Systems equipment parts book whenever such part number exists. Heartland AG Systems shall reimburse the dealer at the dealer net price (cost) in effect on the parts replaced date.

### **Labor**

Heartland AG Systems shall reimburse the dealer at 80% of the dealer's posted retail shop labor rate. The retail shop labor rate shall be subject to verification by Heartland AG Systems from copies of actual dealer invoices to customers.

### **Outside Charges**

Specialized repair such as that done by a machine shop will be accepted as part of a warranty claim at actual cost. Explain the parts used and the service work performed in the description section of the claim and retain a copy of the receipt. Retain a copy of the invoice with the shop work order to support the claim. Outside repairs that exceed the cost of the same repair, if performed by the dealer, will be reimbursed at a lower rate.

### **Freight**



Heartland AG Systems will pay the freight charges when a warranty recalled part is to be returned to Heartland AG Systems.

#### **Travel**

Travel will only be reimbursed when authorized by a field campaign.

#### **Repairing or Replacing Parts and Components**

When performing a warranty repair, a complete part or component should not be replaced under warranty if the repair can be accomplished at a lower cost. If the total cost of the repair including the cost of parts, labor, and/or outside labor or materials is less than 75% of the cost of the parts, the part must be repaired.

#### **Filters and Lubricants**

Replacement of lubricants and filters do not qualify for warranty reimbursement unless damage caused by a defect in material or workmanship results in contamination or sudden loss of fluid. Lack of maintenance, operator misuse, or neglect will not qualify for warranty reimbursement.



Heartland Agriculture, LLC

## Claim Form Guidelines

### Claims Must Have

1. Product identification number (PIN) or serial number. All characters of the PIN must be used on the warranty claim.
  - Claims for parts warranty must use the word "PARTS" for the PIN. An invoice that shows date of sale or date of installation must be supplied for all parts claims.

2. Model Number

3. Date of failure – Claims must be submitted within 30 days or repair.

4. Date of repair

5. Warranty start date. Date the unit warranty starts or date the parts were sold for parts warranty.

6. Description of the problem. Describe all problems pertinent to the claim.

Comments should be as precise as possible, attach a separate sheet if necessary, to describe the problem.

7. Description of the work performed. List each significant action of the repair.

8. Itemize labor. Provide a breakdown of labor for each significant repair action in the "Describe Work Performed" column.

9. Shop order numbers. The shop order number field is used for recording your shop work order number that is related to the claim. The shop order number field can also be used to record the parts invoice number when claiming a parts warranty.

10. Customer information. Customer information includes the customer name, city, state, county, and postal code. It must match the warranty registration.

11. Warranty claim total. The total of all reimbursement costs requested.

12. Dealer signature and date. All claims must be signed and dated by the distributor to be validated.



## INTRO

## INTRODUCTION

---

Read this manual carefully. It will instruct you on how to operate and service your machine safely and correctly. Failure to do so could result in personal injury and/or equipment damage.

Right hand and left hand sides of the machine are determined by (standing behind the machine) facing in the direction the machine will travel when going forward.

## SAFETY INFORMATION

---

DANGER: This message denotes the most serious specific potential hazard. This sign will have the color combination of RED and WHITE.

WARNING: This message denotes a specific potential hazard.

CAUTION: This message denotes a reminder of safety practices.

NOTE: Indicates a special point of information.



\*\*\*\*\*  
\*\*\*\*\*  
Carefully read and follow all safety signs.  
Reinstall safety signs that are damaged  
or missing.

Warranty is provided for customers who operate and maintain their equipment as described in this manual. Warranty registration is accomplished by the dealer completing and forwarding the WARRANTY REGISTRATION FORM along with a copy of the dealer's invoice to Heartland Ag Systems. It is in your best interest to insure that this has been done.

WARRANTY does not cover the following.  
– 1. Cleaning, transporting, mailing and service call charges.

– 2. Depreciation or damage caused by normal wear, accidents, improper protection or improper use.

\*\*\*\*\* See complete WARRANTY for details


Record your machine model and serial number in the space provided. Your dealer needs this information to give you prompt, efficient service when you order parts.

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_  
DATE PURCHASED \_\_\_\_\_

\*\*\*\*\* SAFETY INFORMATION CONTINUED \*\*\*\*\*

#### RECOGNIZE SAFETY INFORMATION

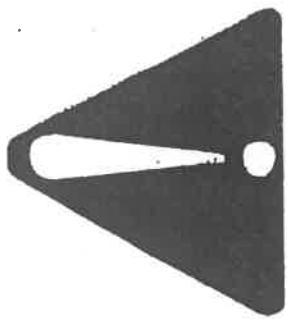

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury. Follow recommended precautions and safe operating practices.

#### FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.


Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instructions.

Keep your machine in proper working condition. Unauthorized modification to the machine may impair the function and/or safety and affect machine life.

#### PROTECT CHILDREN AND BYSTANDERS

Before you back, LOOK CAREFULLY behind for children.

Clear area of children, pets and bystanders.

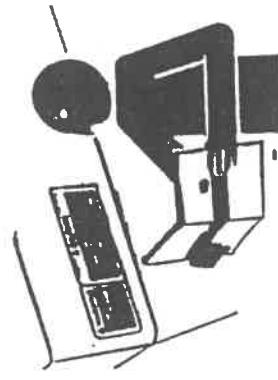

#### TRANSPORT SAFETY

- \* Always use safety chains during road transportation.
- \* Check wheel nuts daily.
- \* Use hydraulic cylinder transport lock-up during road transportation.
- \* Maximum recommended road speed is 25 mph.
- \* Clear machine of personnel and obstructions.

## DECALS


PART # 699107



PART # 9744503



PART #699105

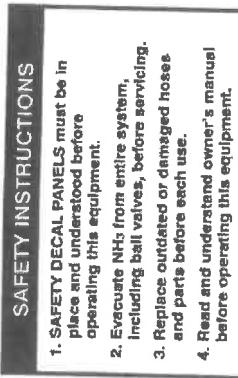

PART #699103



PART #699100



PART # 699100



PART #699104



PART #699106



# NITROMASTER 8000 SERIES

PART #699105

## **8000 NITROMASTER TOOLBAR ASSEMBLY PROCEDURE**

Your 8000 Nitromaster Toolbar is shipped with small parts and hardware packed in boxes marked for the different sections of the toolbar. If you find any items missing, please contact Ag Systems, Inc. immediately.

Note: In this manual "left hand" and "right hand" are determined by standing behind the toolbar looking in the direction of travel.

- Step 1 Select a smooth level surface for the assembly of your Nitromaster Toolbar.
- Step 2 Refer to the illustration on Page 13). Place the center section (item 1) upon (4) steel saw horses, one at each corner of the frame. Do not place the hinge plates on the saw horses.
- Step 3 Install the bogie arms (item 44) left hand and (item 45) right hand to the center section with the hinge pins (item 50) and appropriate hardware.
- Step 4 Install the walking wheel assembly (items 55-56) to the bogie arms with the hinge pins (item 51) and appropriate hardware.
- Step 5 Place the center section wheel lift cylinder (item 72) size 3 x 12 and (item 73) size 4 x 12 into position with the body towards the frame and the shaft on the bogie arms. Secure the cylinders with the appropriate pins.
- Step 6 Fully extend the wheel cylinders. Install the torsion tube (item 40) and (if required) the shim (item 41) with the appropriate hardware.
- Step 7 Install the poles (item 4) left hand and (item 5) right hand with the hitch mount (item 13) and appropriate hardware. Bolt the poles to the center section with the appropriate hardware.
- Step 8 Attach the hitch assembly (items 6, 7, or 8) with the hitch pin (item 12). If the pin adapter clevis (item 9) is used, make sure the hitch is installed with the clevis towards the bottom (as shown on page 13).
- Step 9 Attach the jack (item 18) to the pole and assemble the miscellaneous items, hose brackets (item 24) gauge bracket (item 23), depth control brackets (item 19), and selector valve bracket (item 29) with the u-bolts (item 20 & item 34) and appropriate hardware.
- Step 10 Place the primary wings (item 2) left hand and (item 3) right hand upon steel saw horses and assemble to the center section with the hinge pins (item 63) and appropriate hardware.
- Step 11 Install the wing bogie arms (item 47) left hand and (item 48) right hand to the wings with the hinge pins (item 50) and appropriate hardware.
- Step 12 Install the walking wheel assemblies. (Repeat step 4)
- Step 13 Place the wing wheel lift cylinders (item 77) size 3 3/4 x 12 and (item 78) size 3 1/2 x 12 into position on the wing frame with the body towards the frame and the shaft on the bogie arms. Secure the cylinders with the appropriate pins. Fully extend the cylinders.
- Step 14 Place the primary wing cylinders (item 67) size 4 x 36 onto the center section with the body on the center section and the shaft towards the wings. Secure the butt end with the pin (item 68). Do not secure the shaft end until the hydraulic system has been purged of air.

## ATTACHING THE SECONDARY WINGS

FOR A 42 FOOT TOOLBAR (reference the illustration on page 15)

- Step 15 Place the secondary wing (item 1) left hand and (item 2) right hand on suitable supports and assemble to the primary wings with the hardware (item 13 and item 14).
- Step 16 Mount the hydraulic cylinder (item 3) size 3 x 24 to the primary wings. Attach the link (item 5) and the rollers (item 11) with the pins (item 14) to the hydraulic cylinders. Do not attach the links to the secondary wings until the hydraulic system has been purged of air.
- Step 17 Install the wing hook assemblies (item 7) and retainer (item 6) with the u-bolts (item 8) and appropriate hardware. Adjust the locations after the hydraulics are operational.
- Step 18 Generously grease the hinge and pivot points.

FOR A 52 FOOT TOOLBAR (reference the illustration on page 15)

- Step 19 Place the secondary wing (item 1) left hand and (item 2) right hand on suitable supports and assemble to the primary wings with the hardware (item 13 and item 14).
- Step 20 Mount the hydraulic cylinder (item 3) size 3 1/2 x 24 to the primary wings. Attach the link (item 5) and the rollers (item 11) with the pins (item 14) to the hydraulic cylinders. Do not attach the links to the secondary wings until the hydraulic system has been purged of air.
- Step 21 Perform steps 17 and 18.
- Step 22 Install the hydraulic hoses and fittings etc. per the hydraulic systems schematic drawings on --  
page 21 for 34 foot toolbar without selector valve.  
page 22 for 42 ft. and 52 foot toolbar without selector valve.  
page 23 for 34 foot toolbar with selector vale.  
page 24 for 42 ft. & 52 foot toolbar with selector valve.

## PURGING THE AIR FROM THE HYDRAULIC SYSTEMS

- Step 23 Purging the air from the hydraulic system is best done with the toolbar on supports without the wheels mounted.  
**CAUTION:** If the wheels are mounted, the pole could lift up when hydraulic pressure is applied. To proceed safely firmly, anchor the pole to a heavy stationary object or attach it to a tractor.
  - (A) Pressurize the wheel lift hydraulic circuit. Fully extend all wheel lift cylinders and circulate the oil for approximately two minutes.
  - (B) Fully retract the wheel cylinders. All wheel cylinders should retract simultaneously. If there is significant lag , or if after retracting there is noticeable sag, this indicates there is air in the system.
  - (C) To correct, repeat steps A and B
  - (D) Pressurize the wing lift hydraulic circuit.  
**CAUTION:** The wing cylinders should be secured at the butt end only.  
Fully "RETRACT" all wing cylinders and circulate the oil for approximately two minutes.
  - (E) Extend the wing cylinders. Make sure the shafts of the cylinders do not hit any obstructions as they are extending.

- (F) Repeat steps D and E. This should purge all the air from the hydraulic system.
- (G) If in field operation you are noticing uneven lifting of the wheels or wings refer to the trouble shooting page following the operating instructions.

- Step 24 Refer to step 16. Attach the link (item5) to the secondary wing with the cylinder pin (item 15) and the retaining pins supplied.
- Step 25 Mount the rim and tire assemblies to the hubs on the center section and wings. The toolbar parts list indicates which tires are correct for your toolbar.
- Step 26 You may now remove the supports from the center section and wings.  
**CAUTION:** When the wheels are mounted, the pole could lift up when hydraulic pressure is applied. To proceed safely, firmly anchor the pole to a heavy stationary object or attach it to a tractor.

**IF YOUR TOOLBAR IS EQUIPPED WITH MECHANICAL GAUGE WHEELS  
INSTALL PER STEPS 27 TO 31.**

- Step 27 Refer to the illustration on page 16. Position the mounting bracket (item 1) on the secondary wing front tube and attach with (2) u-bolts (item 5) and appropriate hardware. Snug only.
- Step 28 Assemble the pivot arm (item 2) to the mounting bracket with the pivot pins (item 3) and appropriate hardware.
- Step 29 Install the turnbuckle jack (item 11) with the clevis pins (items 8 & item 12) and the hairpin (item 4) and cotter pin (item 10).
- Step 30 Mount the wheels with the tires to the hubs.
- Step 31 The gauge wheels should be located as far out to the end of the toolbar as is practical. Adjust the position of the gauge wheels to the desired track width and securely tighten the u-bolts.  
 Reference step 27.
- Step 32 Attach the knife shanks (and coulters) at the desired spacing. Offset extension brackets may be required for some applications. Refer to the tool arrangement illustrations on pages 30 to 35.
- Step 33 Assemble the knives (and disk covers) to the knife shanks.
- Step 34 **NH3 APPLICATION SYSTEM.** Refer to the illustration on page 54. Mount the brackets as indicated with the appropriate hardware. Attach the hoses and components per the kit supplied for your application . See the plumbing schematic drawing on page 55. Install th NH3 break-away coupling device per manufacturers instructions, see page 55A for basic operation and maintainence information.
- Step 35 Mount the field hitch (item 83) in the center of the center section with the appropriate hardware.  
 Refer to the illustration on page 18.
- Step 36 Fold the wings and raise the machine to the full transport height. Position the transport locks (item 69) on the extended shafts of the wheel lift cylinders on the center section and secure the transport locks with the pins (item 70 & item 71). Release the hydraulic pressure and lower the machine so that it is supported by the transport locks.  
**CAUTION: BEFORE MOVING THE MACHINE.** Read the operating instruction and warnings on the page following these assembly instructions.
- Step 37 Your 8000 Nitromaster Toolbar is now fully assembled and READY TO GO TO WORK.

## COULTER and DISK SEALER MOUNTING INFO

SPGBDLSHK

With the toolbar parked on hard level ground fold out the wings and lower the toolbar so that it is supported on the knives. The toolbar should be level. If necessary, unhitch the toolbar and adjust the jack as required.

**SETTING THE COULTER DEPTH:** Assuming a working depth for your knife of 8 inches (dim A), adjust one coulter blade to a distance of 4 inches (dim B) above the knife point. This will run the blade 4 inches in the ground. Measure the distance that the  $1 \times 3$  bar extends above the mounting bracket (dim C). Adjust all coulters to this dimension.


### SETTING THE DISK SEALER DEPTH:

When the working depth is 8 inches, position one disk sealer assembly on the shank so that the blades are 6 inches (dim D) above the knife point. Measure the distance from the spring bundle bracket to the disk sealer bracket (dim E). Adjust all disk sealers to this dimension. This will run the disk sealers 2 inches in the ground.

**OTHER WORKING DEPTH:** modify these dimensions in relation to your working depth. If your knife is 10 inches in the ground (dim A), the dimension from the coulter blade to the knife point (dim B) would be 6 inches. The distance to the disk sealer (dim D) would be 8 inches. This "knife to blade" relationship would apply regardless of what combination of "AgSystems" bracket, shank, knife, coulter and disk sealer is used.

### NOTE::

It is important that the coulter and disk sealer blades are not set excessively deep. The coulter blades should be set just deep enough to cut the surface trash. Coulters set too deep will cause the toolbar to float on the coulters and not allow your gauge wheels to contact the ground. Intermittent contact with the ground will cause excessive wear on the hydraulic cylinder clevises and the mounting lugs. Coulters running too deep could also form a trench that will not seal properly and allow excessive NH<sub>3</sub> to escape into the atmosphere (smoking).

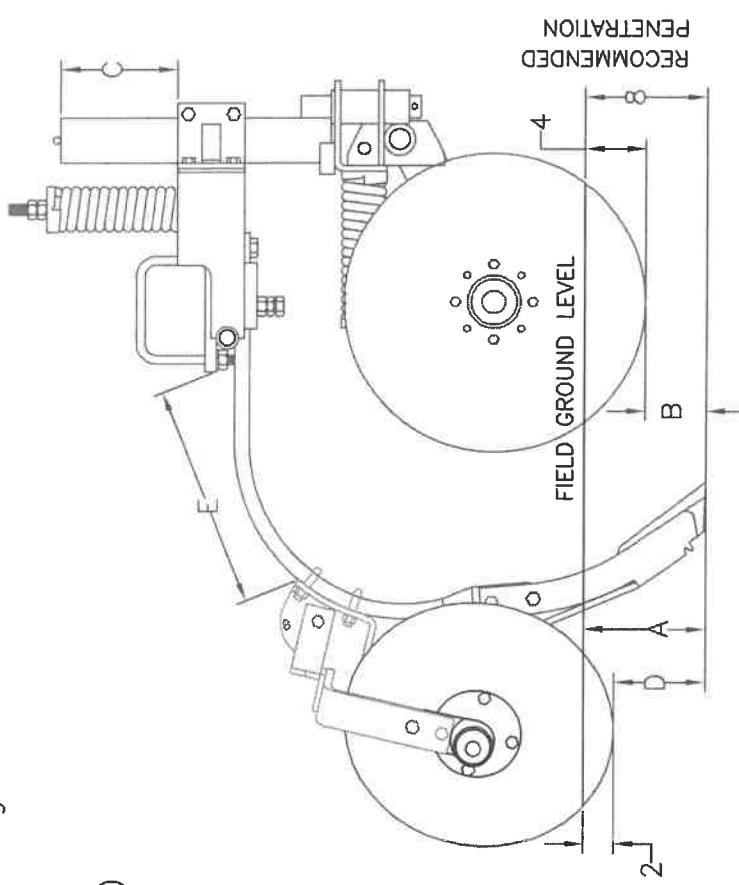

AG SYSTEMS INC.	HUTCHINSON MN.	55350
DRAWN BY J.N.	NAME COULTER/SEALER ADJUSTMENT	DATE 07/01/06
FIRST USED REV.	DATE	
PART NUMBER SPGBDLSHK		

## OPERATING INSTRUCTIONS

### USE OF DEPTH CONTROL SPACERS

**WARNING:**

Failure to use, or incorrect use of the depth control spacers on the center section lift cylinders will result in voiding the equipment warranty.

Correct use of the lift cylinder depth control spacers is needed to maximize equipment performance. Incorrect use will cause the equipment to operate at uneven depths and even result in equipment damage.

To gain maximum performance from your equipment, the depth control spacers that have been provided with your equipment must be used when you place your equipment in the field. It is imperative that an equal number of spacers of equal size are placed on each of the center section lift cylinders before placing your equipment in service. Failure to do so may cause damage and result in voiding the equipment warranty. Use of stroke control spacers (depth control spacers) on the wing lift cylinders is not recommended, or necessary when spacers are properly placed on the center section lift cylinders.

To set the equipment to the proper depth for your field conditions, place the toolbar in the field to the desired tillage depth. Using the cylinder spacers provided with your equipment, place an equal number of spacers of equal size on both of the center section lift cylinders. It is very important that both center section lift cylinders are functioning with the same size of cylinder spacers before you continue to operate your equipment. If you require deeper depth, lift the equipment, remove and replace a spacer with a thinner spacer. If you require a shallower depth, remove a spacer and replace it with a thicker spacer. Once the equipment has been set to your desired tillage depth by using the correct depth control spacers you will not need to change them.

### USE OF TRANSPORT LOCK

**WARNING:**


Failure to use the transport locks may result in equipment damage or personal injury. Equipment transport locks are provided for safety when transporting equipment over the road and should remain with the equipment. The transport locks also prevent the equipment from settling or dropping when the equipment is disconnected from the hydraulic power source. When you are finished with a field and you find it necessary to move the equipment to a new location, simply raise the toolbar out of the ground and place the transport locks provided on to the lift cylinder. You do not need to remove the spacers for transport. Slide the spacers up on the cylinder rod far enough so that the transport lock will pass below and around the spacers. Then secure the transport locks with the pins provided. When you are finished with the equipment and it is to be parked, it is imperative to place the transport locks around the lift cylinder rods to prevent the equipment from settling.

When operating your equipment in the field the lift wheels must be in contact with the ground at all times. Operating the equipment with the lift wheels retracted until the wheels are completely off the ground will be considered misuse of the equipment and may result in voiding the equipment warranty.

**TROUBLE-SHOOTING**  
SERIES 8000 TOOLBAR FIELD OPERATIONS

INFO TO FOLLOW

## 8000 SERIES TOOLBAR

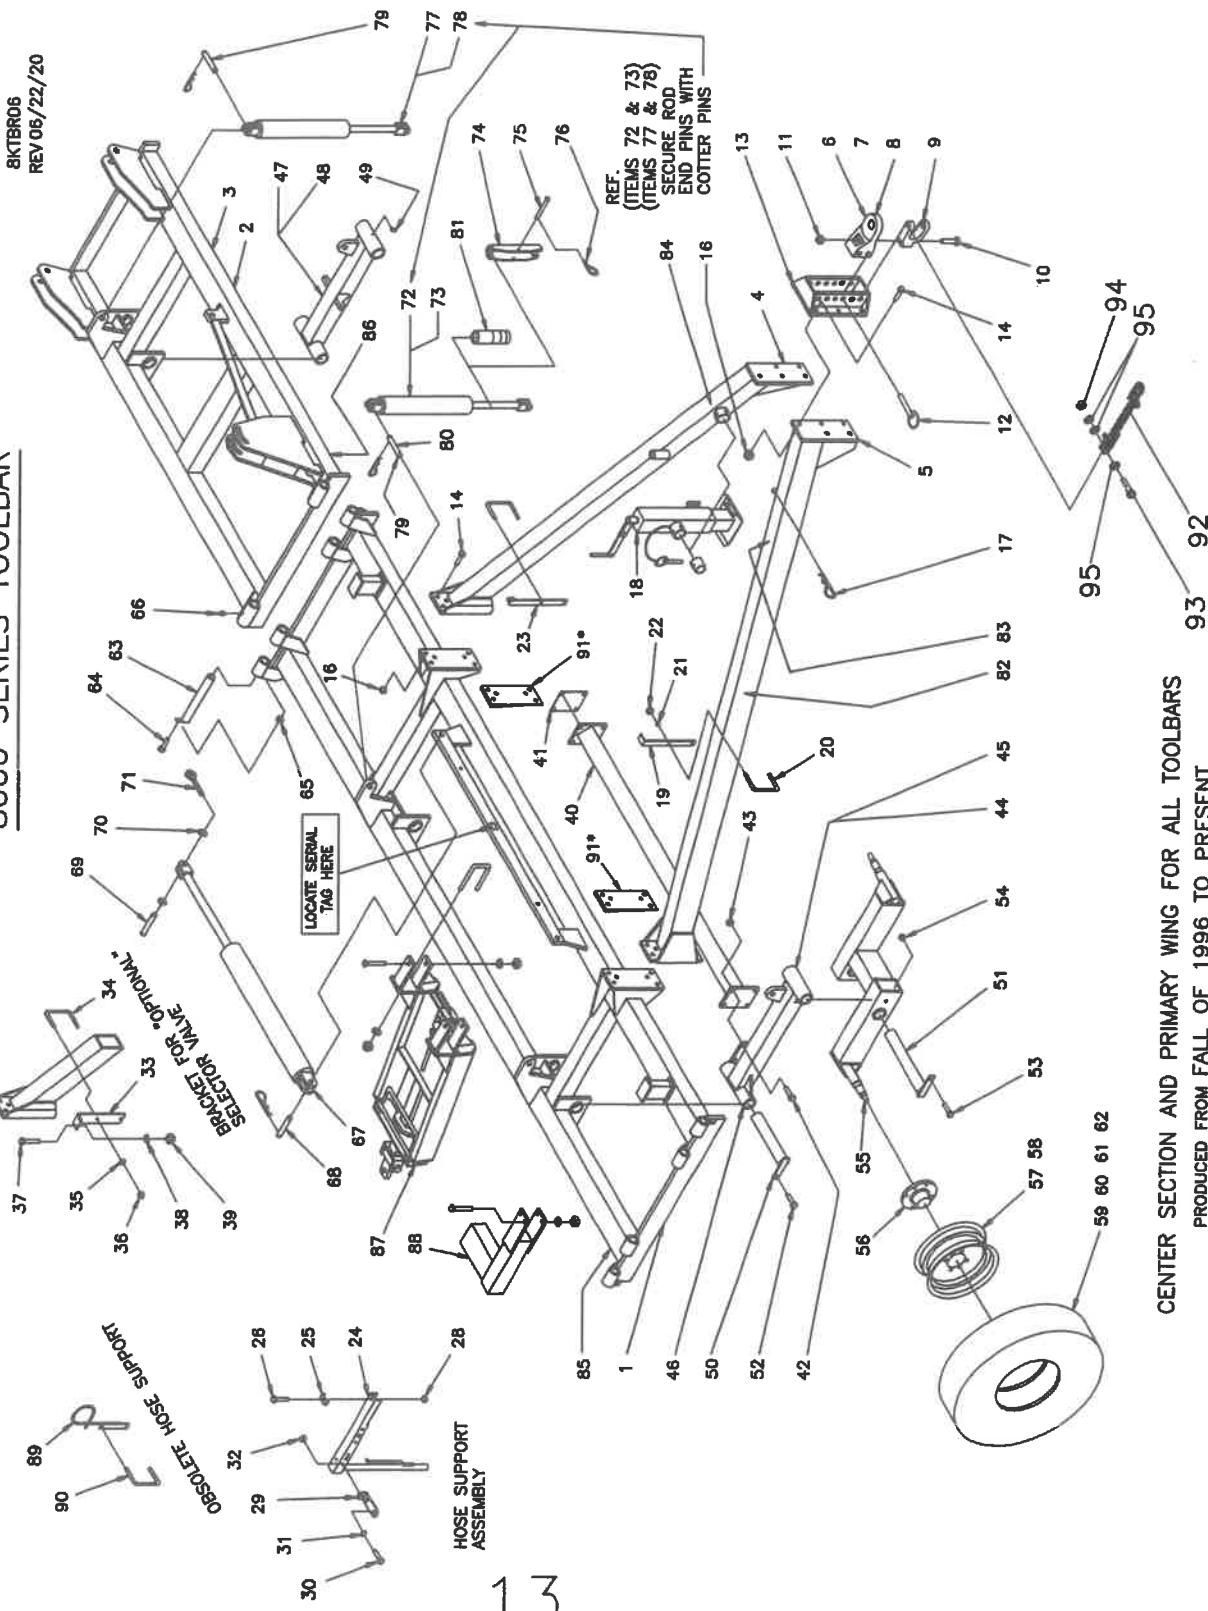


**8000 SERIES TOOLBAR PARTS LIST**  
**CENTER SECTION & PRIMARY WINGS**

8KTBRO6LST  
 REV 06/30/20

ITEM	PART NO.	DESCRIPTION	QTY.	ITEM	PART NO.	DESCRIPTION	QTY.
1	47010049	CENTER SECTION	1	57	47005589	WHEEL RIM, 15 X 8	8
2	47010086	PRIMARY WING, LEFT HAND	1	58	20120012	VALVE STEM	8
3	47010087	PRIMARY WING, R.H. (NOT SHOWN)	1	59	20121114	TIRE, 11L X 6 PLY	QUANTITIES AND
4	47008349	POLE, LEFT HAND	1	60	10261	TIRE, 11L X 8 PLY	WHERE USED
5	47008350	POLE, RIGHT HAND	1	61	20111510	TIRE, 11L X 10 PLY	AS NOTED
6	PPI-421V3	PERFECT HITCH, (2" DRAWPIN)	1	62	20121115	TIRE, 11L X 12 PLY	
7	Pi-301V3C	PERFECT HITCH ASSY. (1 1/2" D'PIN)	1	ITEM 59	USE ON WINGS, ALL UNITS		4
		INCLUDES ITEMS 8 TO 11			USE ON CENTER SECTION ONLY (34 FT.)		
8	PPI-301V3	PERFECT HITCH, BASE HITCH	1	ITEM 59	30" SPACING, NO COULTERS		4
9	PPI-208VR	PERFECT HITCH CLEVIS (1 1/4" D'PIN)	1	ITEM 60	30" SPACING, WITH COULTERS		4
10	18058452	BOLT, 3/4-10NC. X 5 GR. 8	1	ITEM 60	15" SPACING, NO COULTERS		4
11	18458452	LOCKNUT, 3/4-10NC. GR. 8	1	ITEM 61	15" SPACING, WITH COULTERS		4
12	600182	HITCH PIN, 1 X 6	2		ON CENTER SECTION ONLY (42 FT.)		
13	47008355	HITCH MOUNT	1	ITEM 60	30" SPACING, NO COULTERS		4
14	18098435	BOLT, 3/4-10NC. X 2 1/2 GR.8	22	ITEM 61	30" SPACING, WITH COULTERS		4
15	--	-	-	ITEM 61	15" SPACING, NO COULTERS		4
16	18458452	LOCK NUT, 3/4-10NC.	22	ITEM 62	15" SPACING, WITH COULTERS		4
17	18590094	HAIRPIN BRIDGE, (#8) 3/16 DIA.	1		ON CENTER SECTION ONLY (52 FT.)		
18	70924	JACK COMPLETE, (FINISH PAINTED)	1	ITEM 61	30" SPACING, NO COULTERS		4
				ITEM 62	30" SPACING, WITH COULTERS		4
				ITEM 62	15" SPACING, NO COULTERS		4
				ITEM 62	15" SPACING, WITH COULTERS		4
19	47010170	BRACKET, DEPTH CONTROLS	2	63	47010132	HINGE PIN, PRIMARY WING	4
20	47001028	U-BOLT, 3/8-16NC	2	64	18057424	BOLT, 1/2-13NC. X 1 1/4	4
21	18891200	LOCKWASHER, 3/8	4	65	18497400	NUT, FLANGED 1/2-13NC.	4
22	18436800	HEX. NUT, 3/8-16NC.	4	66	18901805	GREASE ZERK, STRAIGHT	4
FOR 2006 ITEM	23	REPLACED BY ITEMS 29 TO 32		67	47300095	HYD. CYLINDER, CENTER (4 X 36)	2
23	47010168	PRESSURE GAUGE BRACKET		68	47003514	CYLINDER PIN KIT (1 X 4) (2 PINS)	1
24	47005087	PIVOTING HOSE BRACKET	1	69	18549054	CLEVIS PIN, (1 X 5)	2
25	47005091	HOSE CLAMP	4	70	18852200	FLATWASHER 1" I.D.	4
26	18056832	BOLT, 3/8-16NC. X 2 1/4	2	71	18560826	COTTER PIN (3/16 X 1 1/2)	2
27	OMITTED	-		72	47005414	HYD. CYLINDER, CENTER WHEELS	
28	18459200	LOCKNUT "NYLOK" 3/8-16NC.	2		PLAIN (3 X 12) 1 3/8 SHAFT		
29	47005092	GAUGE BRACKET,	1	73	47005459	HYD. CYLINDER, CENTER WHEELS	1
30	18056824	BOLT, 3/8-16NC. X 1 1/4	1		REPHASING (4 X 12) 1 3/8 SHAFT	1	
31	18811200	FLAT WASHER, 3/8	1	74	47010150	TRAVEL LOCK- 1 3/8 SHAFT	2
32	18496800	FLANGE NUT, 3/8-16NC.	1	75	18541254	CLEVIS PIN, TRANSPORT LOCK	2
ITEMS 33 TO 39		USED FOR OPTIONAL SELECTOR VALVE		76	18590916	HAIRPIN BRIDGE, TRANSPORT LOCK	2
33	47010171	SELECTOR VALVE BRACKET	1	77	47005449	HYD. CYLINDER, WING WHEELS	1
34	47001028	U-BOLT, 3/8-16NC	1		REPHASING (3 3/4 X 12)		
35	18891200	LOCKWASHER, 3/8	2	78	47005056	HYD. CYLINDER, WING WHEELS	1
36	18436800	HEX. NUT, 3/8-16NC.	2		REPHASING (3 1/2 X 12)		
37	18056469	BOLT, 5/16-18NC. X 3 1/4	2	79	47003514	CYLINDER PIN KIT (1 X 4) (2 PINS)	3
38	18811100	LOCKWASHER, 5/16	2	80	47003513	CYL. PIN KIT (1 X 3 1/2) (2 PINS)	1
39	18406400	HEX. NUT, 5/16-18NC.	2		USE WITH 3" CYLINDER ITEM 72		
40	47008345	TORSION TUBE, (SQ. TUBING)	1	81	47005455	SET, DEPTH CONTROLS, 1 3/8 SHAFT	2
41	47010159	SHIM PLATE, (TORSION TUBE)	AS REQ'D.	82	699106	DECAL, NITROMASTER 8000	2
42	18058436	BOLT, 3/4-10NC. X 3	8	83	699100	DECAL, WARNING-CLEAR TONGUE	1
43	18418400	HEX. NUT, 3/4-10NC.	16	84	699104	DECAL, CAREFUL-CLEAR MACHINE	1
44	47008025	BOGGIE ARM, L. H. (CENTER)	1	85	699107	DECAL, AG-SYSTEMS INC	2
45	47008026	BOGGIE ARM, R. H. (CENTER)	1	86	699101	DECAL, DANGER-FALLING WINGS	2
46	18901806	GREASE ZERK, 90 DEG.	4	87	AS NEEDED	FIELD HITCH ASSEMBLY, SEE SEPARATE ILLUSTRATION	
47	47010161	BOGGIE ARM, L. H. (WING)	1	88	AS NEEDED	STAGGER BRACKET SEE SEPARATE ILLUSTRATION	
48	47010160	BOGGIE ARM, R. H. (WING)	1			OBSOLETE FOR 2006	
49	18901806	GREASE ZERK, 90 DEG.	4	89	47010165	HOSE BRACKET	1
50	47010134	HINGE PIN, BOGGIE ARM	4	90	47001028	U-BOLT, 3/8-16NC	1
51	47010136	HINGE PIN, BOGGIE FRAME	4	91*	47008269	POLE WEDGES (OPTIONAL*) MAY BE NEEDED WITH SHALLOW APPLICATION & LOW TRACTOR DRAWBAR HEIGHT	2
52	18057430	BOLT, 1/2-13NC. X 2	4	92	PPSC4156BS	CHAIN, SAFETY 1/2" X 56" LG	1
53	18057426	BOLT, 1/2-13NC. X 1 1/2	4	93	18059061	BOLT HX CAP GR5 NC ZC 1 X 4	1
54	18497400	NUT, FLANGED 1/2-13NC.	8	94	18459002	NUT NYLOCK 1 GR 5	1
				95	18852200	WASHER FLAT 1" SAE ZC	3
						(ITEMS 92-5 CAN BE ORDERED AS A KIT P/N:47990314)	

SECONDARY WING ASSEMBLY  
FOR 42 FT. AND 52 FT. TOOLBARS

ISO7

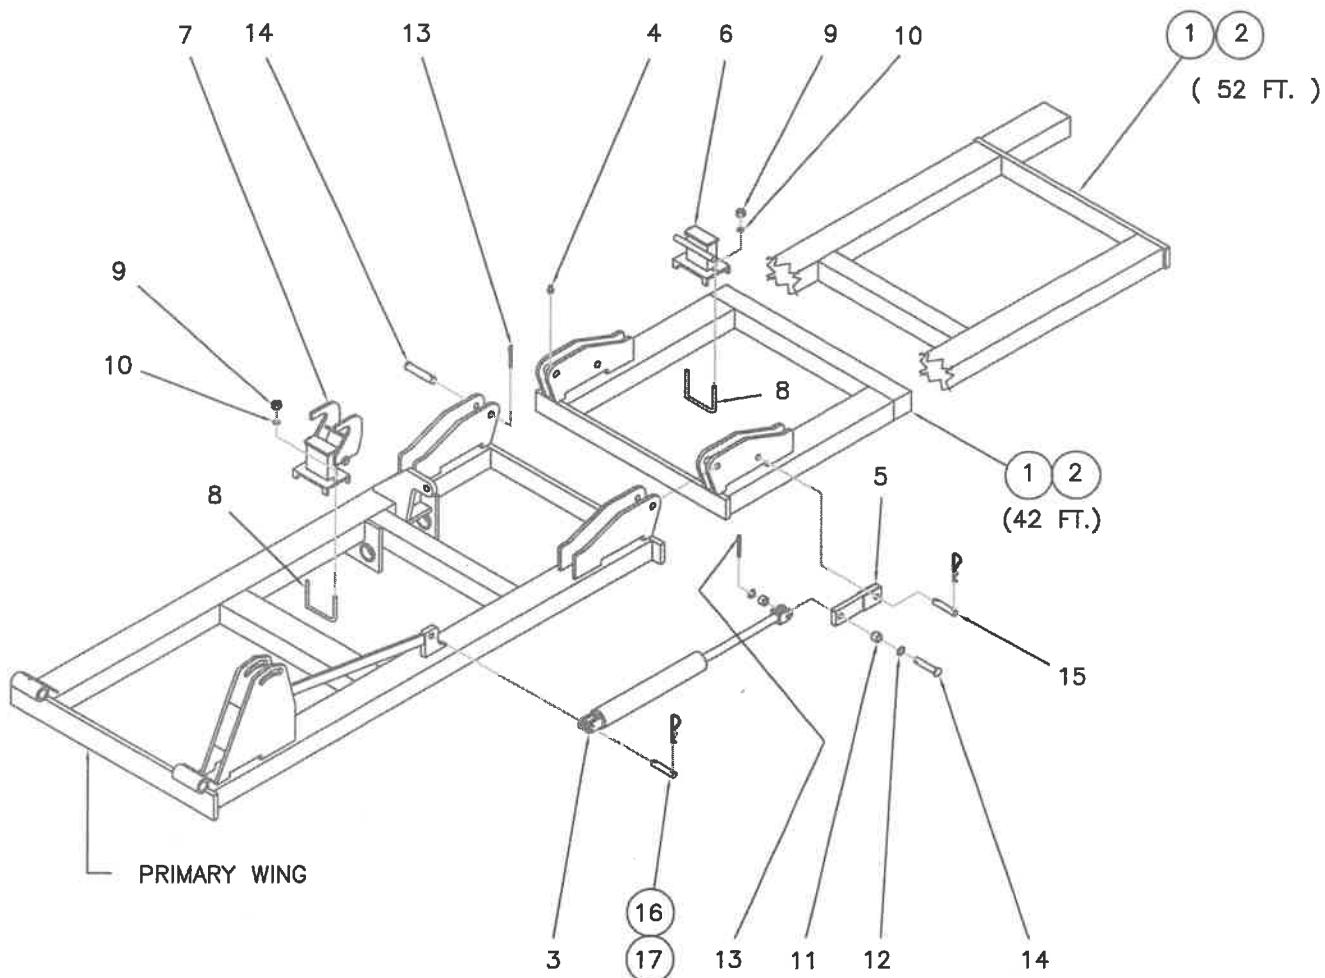


<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	47010178	SECONDARY WING - LEFT (42 FT.)	1
2	47010179	IDENTICAL TO 47010178 (NOT SHOWN)	1
1	47010176	SECONDARY WING - LEFT (52 FT.)	1
2	47010177	SECONDARY WING - RIGHT (NOT SHOWN)	1
3	47300093	HYDRAULIC CYL.-(FOR 42 FT.) 3 X 24	2
3	47300094	HYDRAULIC CYL.-(FOR 52 FT.) 3 1/2 X 24	2
4	18901805	GREASE ZERK	4
5	47010163	LINK, HYDRAULIC CYLINDER	2
6	47010151	WING HOOK RETAINER	2
7	47010149	WING HOOK ASSEMBLY	2
8	47010154	5/8-11 NC U-BOLT	4
9	18417900	5/8-11 HEX. NUT	8
10	18891600	5/8 LOCKWASHER	8
11	47010032	ROLLER, CYL. LINK-(FOR 42 FT.)	4
11	47010441	ROLLER, CYL. LINK-(FOR 52 FT.)	4
12	18852200	1" FLAT WASHER	4
13	18560826	COTTER PIN, (3/16 X 1 1/2)	4
14	18549054	CLEVIS PIN, (1 X 5)	6
15	47003514	CYL. PIN KIT, (1 X 4) (2 PINS)	1
16	47003513	CYL. PIN KIT, (1 X 3 1/2) (2 PINS) USE WITH 3 X 24 CYL. (FOR 42 FT.)	1
17	47003514	CYL. PIN KIT, (1 X 4) (2 PINS) USE WITH 3 1/2 X 24 CYL. (52 FT.)	1

# MECHANICAL GAUGE WHEEL ASSEMBLY

MCHGAWHL  
REV C

REV 6-10-14

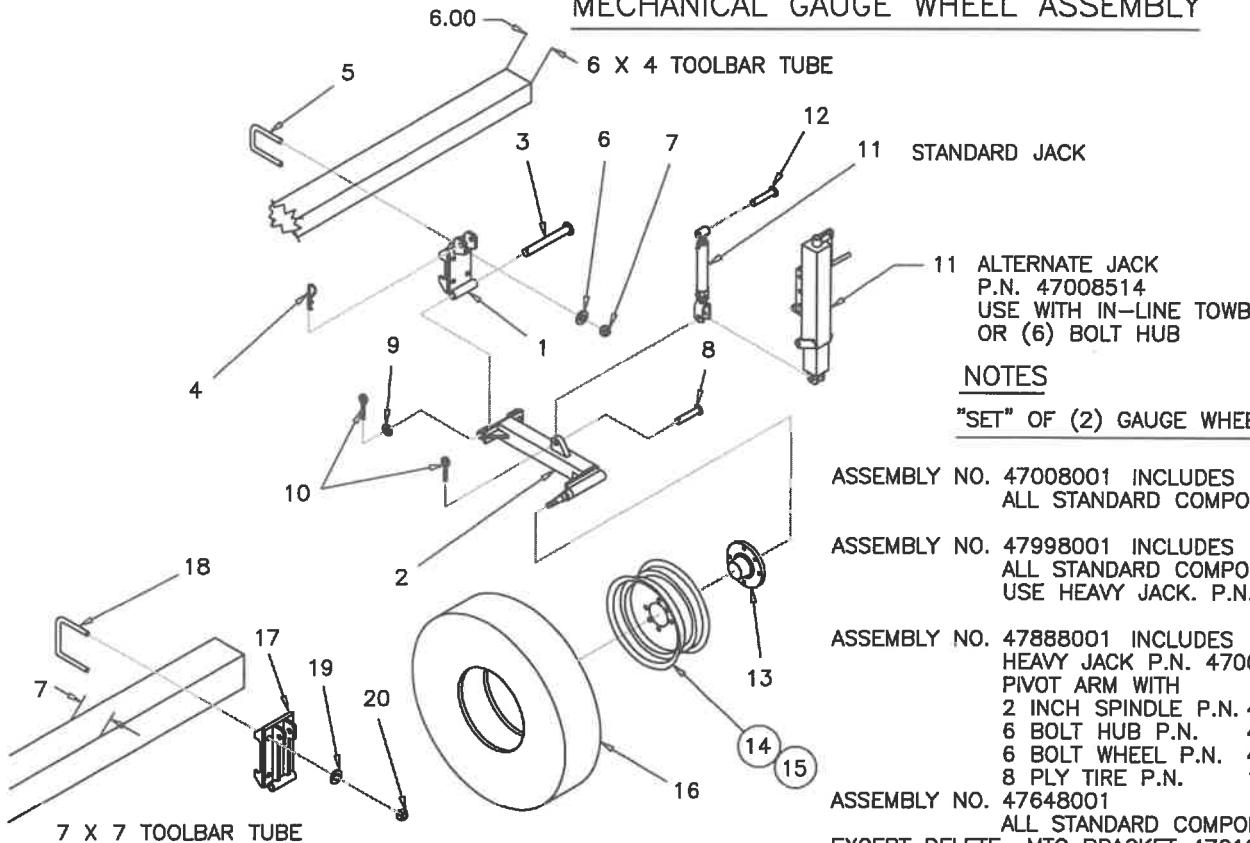

## NOTES

"SET" OF (2) GAUGE WHEEL ASSEMBLIES

ASSEMBLY NO. 47008001 INCLUDES  
ALL STANDARD COMPONENTS


ASSEMBLY NO. 47998001 INCLUDES  
ALL STANDARD COMPONENTS EXCEPT  
USE HEAVY JACK. P.N. 47008514

ASSEMBLY NO. 47888001 INCLUDES  
HEAVY JACK P.N. 47008514  
PIVOT ARM WITH  
2 INCH SPINDLE P.N. 47019335  
6 BOLT HUB P.N. 47009611  
6 BOLT WHEEL P.N. 47005589  
8 PLY TIRE P.N. 10261

ASSEMBLY NO. 47648001  
ALL STANDARD COMPONENTS  
EXCEPT DELETE MTG BRACKET 47010412 AND  
HARDWARE ITEMS 5, 6, AND 7  
REPLACE WITH MTG BRACKET 47004742 AND  
HARDWARE ITEMS 18, 19 AND 20

ITEM	PART NO.	DESCRIPTION	QTY FOR ASSY. NO. 47008001	QTY FOR ASSY. NO. 47998001	QTY FOR ASSY. NO. 47888001	QTY FOR ASSY. NO. 47648001
1	47010412	MOUNTING BRACKET	2	2	2	-
	47000413	PIVOT ARM COMPLETE, STANDARD	2	2	-	2
	47999335	PIVOT ARM COMPLETE, HEAVY DUTY INCLUDES ITEMS 2 AND 13	-	-	2	-
2	47010413	PIVOT ARM, STANDARD	2	2	-	2
	47019335	PIVOT ARM, HEAVY DUTY (2" SPINDLE)	-	-	2	-
3	47010425	PIVOT PIN	2	2	2	2
4	18560826	COTTER PIN, 3/16 X 1 1/2	2	2	2	2
5	47007286	U-BOLT, 3/4-10NC.	4	4	4	-
6	18891800	LOCKWASHER, 3/4	8	8	8	-
7	18418400	HEX. NUT, 3/4-10NC.	8	8	8	-
8	18541835	CLEVIS PIN, 3/4 X 2 1/2	2	2	2	2
9	18852200	FLATWASHER, 1" SAE ZC	2	2	2	2
10	18560726	COTTER PIN, 5/32 X 1 1/2	4	4	4	4
11	690063	JACK, TURNBUCKLE TYPE (STANDARD)	2	-	-	2
(ALT)	47008514	JACK COMPLETE, SQUARE BODY USE WITH HEAVY DUTY PIVOT ARM, OR WITH IN-LINE TOW BAR OPTION	-	2	2	-
12	18541566	CLEVIS PIN, 3/4 X 3 1/2	2	2	2	2
13	47005348	HUB ASSEMBLY COMPLETE, (5) BOLT	2	2	-	2
	47009611	HUB ASSEMBLY COMPLETE, (6) BOLT	-	-	2	-
14	47005590	WHEEL, 15" X 5 BOLT (STANDARD)	2	2	-	2
	47005589	WHEEL, 15" X 6 BOLT	-	-	2	-
15	20120012	VALVE STEM	2	2	2	2
16	20067015	TIRE, 670 X 15 (STANDARD) (32 PSI)	2	2	-	2
	10261	TIRE, 11L X 15, 8-PLY (36 PSI)	-	-	2	-
17	47004742	MOUNTING BRACKET (7 X 7 TUBE ONLY)	-	-	-	2
18	47005002	U-BOLT, 5/8-11NC. (FOR 7 X 7 BAR)	-	-	-	4
19	18891600	LOCK WASHER, 5/8 ZC	-	-	-	8
20	18417900	HEX. NUT, 5/8-NNC. ZC	-	-	-	8

## HUB ASSEMBLIES

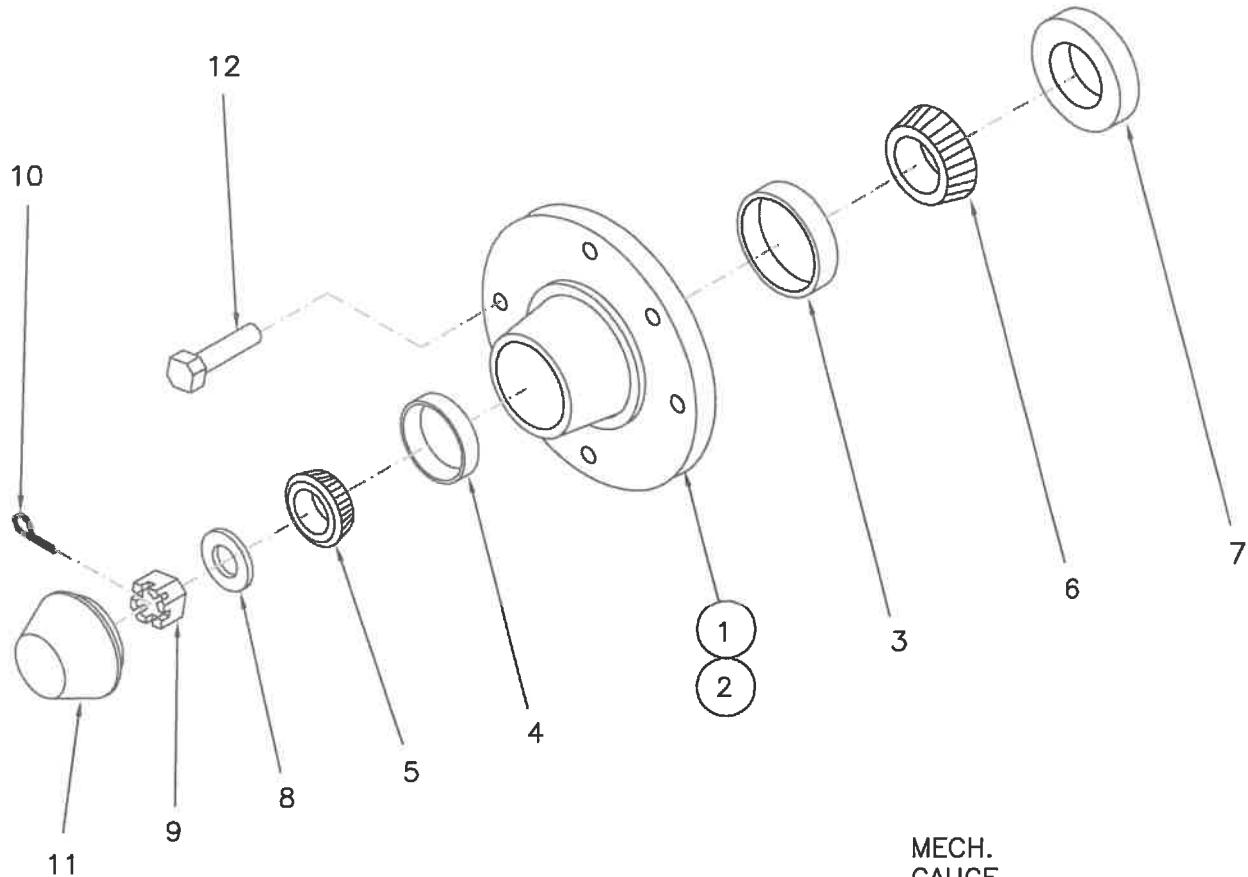


ITEM	DESCRIPTION	5 BOLT	6 BOLT	6 BOLT	QTY.
		HUB PART NO.	HUB PART NO.	HUB PART NO.	
1	HUB COMPLETE INCLUDES ITEMS 2 THRU 7 AND 11 THRU 12 ONLY MFGR. PART NUMBER	47005348 HA511	47009618 H618	47009611 H611	1
2	HUB WITH RACES	47006348	47005618	47005511	1
3	INNER BEARING RACE	47005010	47005520	47005710	1
4	OUTER BEARING RACE	44501910	47005510	47005010	1
5	OUTER BEARING CONE	44501949	47005548	47005048	1
6	INNER BEARING CONE	47005048	47005580	47005749	1
7	GREASE SEAL	47006011	47005030	47005013	1
8	SPINDLE WASHER		18000017	18000017	1
9	SPINDLE NUT	18488600	18489100	18489100	1
10	COTTER PIN	18560826	18560828	18560828	1
11	DUST CAP	47005297	47005515	47005513	1
12	LUG BOLT	47005014	47005012	47005014	6
					5

AG26 FIELD HITCH ASSEMBLY (1998 to present)

RIGID MOUNT FITS 6 X 4 TUBULAR FRAME EXCEPT 3000


(FOR 3000 MODELS SEE DIAGRAM AG263000)

NOTE 1  
WHEN REPLACING THE  
DRAWBAR (ITEM 3)  
ON UNITS MADE PRIOR  
TO FALL 2000 ALSO  
REPLACE ITEMS  
10 & 11 & 13 &  
13A TO 13D

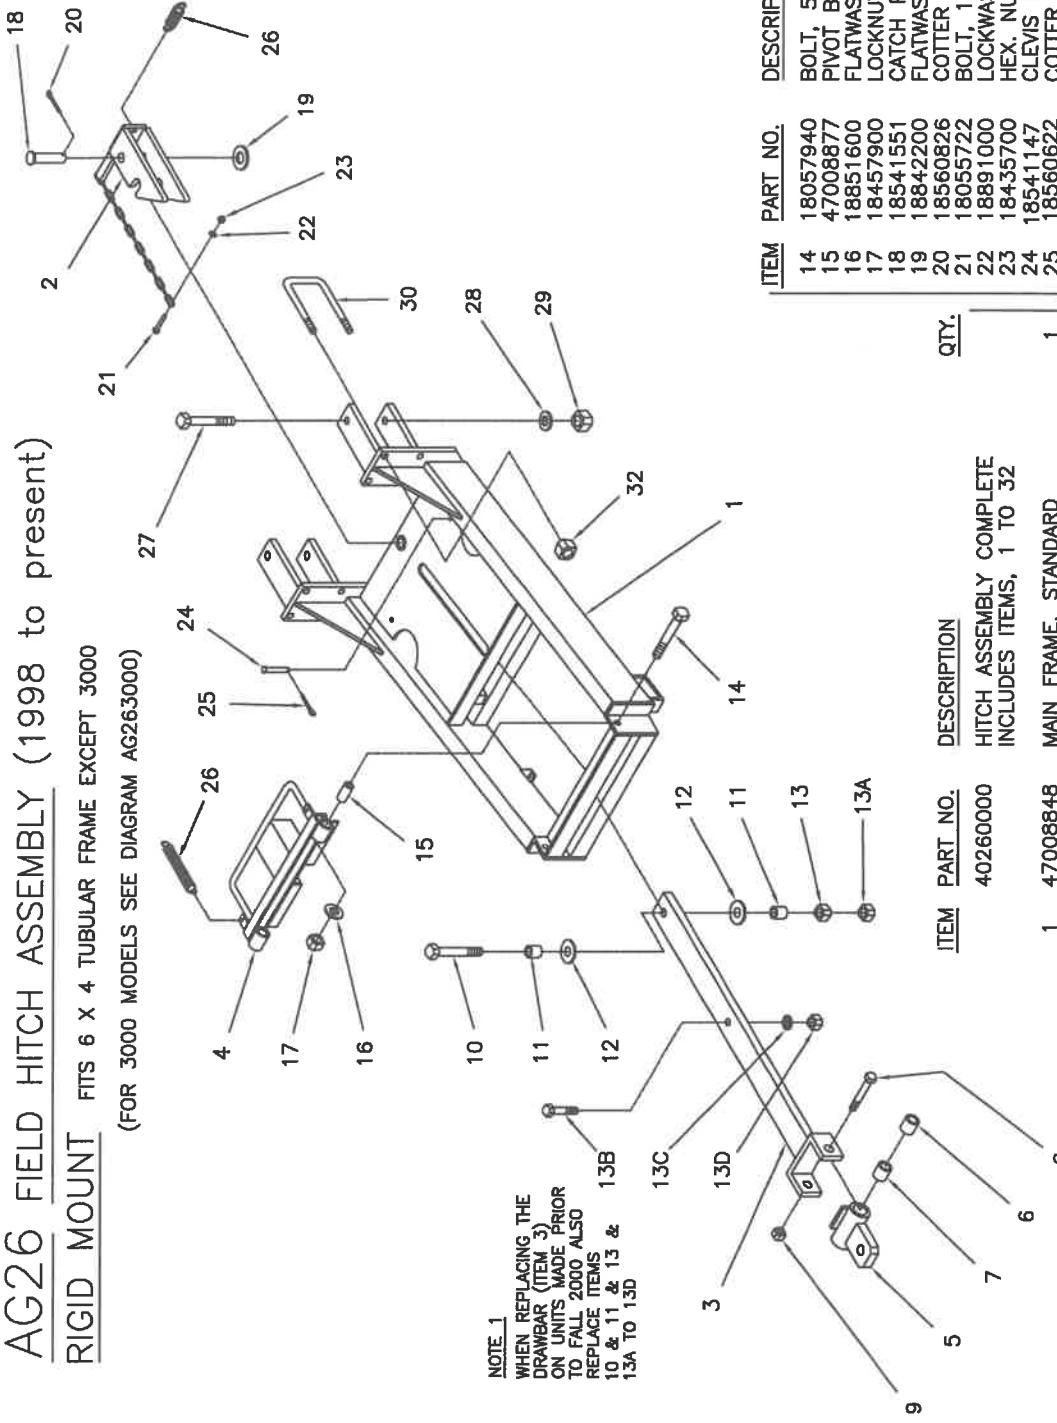

ITEM	PART NO.	DESCRIPTION	QTY.
14	18057940	BOLT, 5/8-11NC, X 3 1/2	2
15	47008877	PIVOT BUSHING, 5/8 I.D.	2
16	18851600	FLATWASHER, 5/8 NOM. I.D. SAE.	2
17	18457900	LOCKNUT, 5/8-11NC.	2
18	18541551	CATCH PIVOT PIN, 1 X 4	1
19	18842200	FLATWASHER, 1" SAE	1
20	18560826	COTTER PIN, 3/16 X 1 1/2	1
21	18055722	BOLT, 1/4-18NC. X 1	1
22	18891000	LOCKWASHER, 1/4 NOM. I.D.	1
23	18435700	HEX. NUT, 1/4-18NC.	1
24	18541147	CLEVIS PIN, 5/16 X 2 1/4	1
25	18560622	COTTER PIN, 1/8 X 1	1
26	000018	EXTENSION SPRING	3
27	47992600	BOLT PKG. INCL. ITEMS, 27 TO 32	2
28	18058460	BOLT, 3/4-10NC. X 6 1/2	2
29	18891800	LOCKWASHER, 3/4 NOM. I.D.	2
30	47006951	HEX. NUT, 3/4-10NC.	2
31	18457900	U-BOLT, 5/8-11NC.	4
32	18457900	NUT, CENTER LOCK 5/8	8

**AG26 FIELD HITCH ASSEMBLY**  
**HYDRAULIC LEVELING**

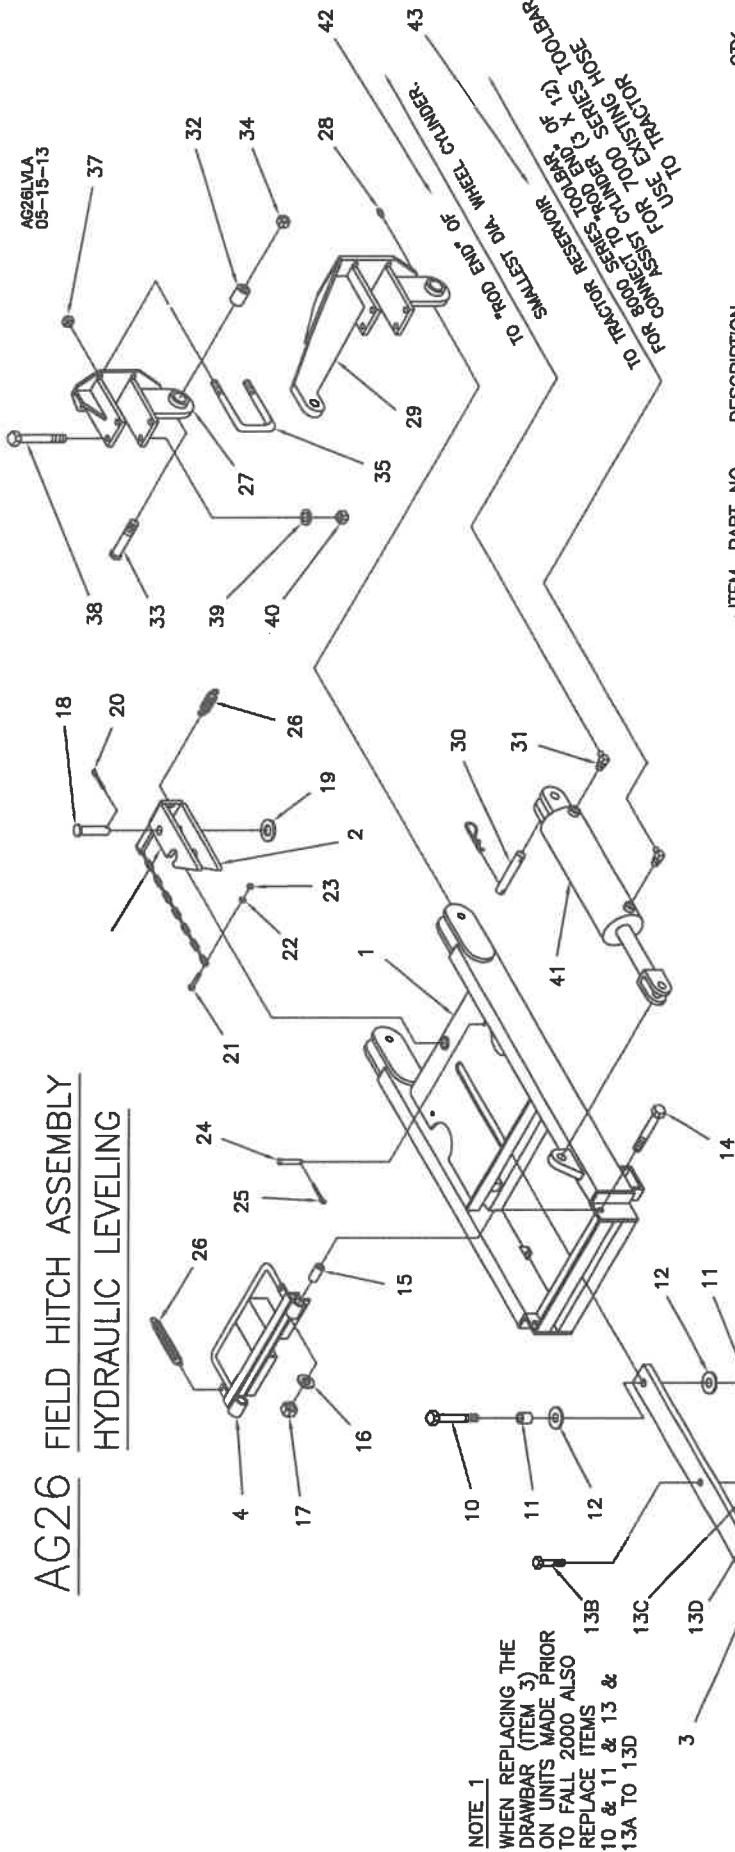


ITEM	PART NO.	DESCRIPTION
21	18055722	BOLT, 1/4-18NC X 1
22	18891000	LOCKWASHER, 1/4 NOM. I.D.
23	18435700	HEX. NUT, 1/4-18NC
24	18541147	CLEVIS PIN, 5/16 X 2 1/4
25	18586062	COTTER PIN, 1/8 X 1
26	0000018	EXTENSION SPRING
27	47009301	HITCH MOUNT, L.H. INCL. ITEM 28
28	18901806	GREASE ZERK, STRAIGHT
29	47019302	HITCH MOUNT, R.H. INCL. ITEM 28
30	47003513	HARDWARE PKG INCL. ITEM 28
31	6801-6-8	CYLINDER PIN KIT, (.1 X 3 1/2)
32	47008633	ADAPTER ELBOW (#6 MILIC X #8 O-RING)
33	18058443	HINGE BUSHING
34	18458400	BOLT, 3/4-10NC, X 4
35	47006951	LOCK NUT, 3/4-10NC
		U-BOLT, 5/8-11NC.
37	18457900	NUT, HEX CENTER LOCK 5/8-11NC.
38	18891791	BOLT, 5/8-11NC X 6 1/2
39	18891600	LOCKWASHER, 5/8
40	18417900	HEX. NUT, 5/8-11NC.
41	47005054	FOR 8000 SERIES TOOLBAR HYDRAULIC CYL. (3 1/4 X 12)
42	609648	HOSE 3/8 X 48" ADD TO EXISTING HOSE P.N. 609170 (210)
43	609684	HOSE 3/8 X 84" CONNECT TO ROD 1 END OF "CENTER ASSIST CYL." (3 X 12)
		FOR 7000 SERIES TOOLBAR HYDRAULIC CYL. (3 X 12)
41	47005490	HOSE 3/8 X 44" W/O HYD. GA. WHLS 1
42	609120	HOSE 3/8 X 48" WITH HYD. GA. WHLS 1
		PLUS 609648 HOSE 3/8 X 210" ADD TO 609648 1
		USE EXISTING HOSE TO TRACTOR

**NOTE 1**  
WHEN REPLACING THE  
DRAWBAR (ITEM 3)  
ON UNITS MADE PRIOR  
TO FALL 2000 ALSO  
REPLACE ITEMS 10 & 11 &  
13 & 13A TO 13D

# AG29 FIELD HITCH ASSEMBLY


AG29IS0

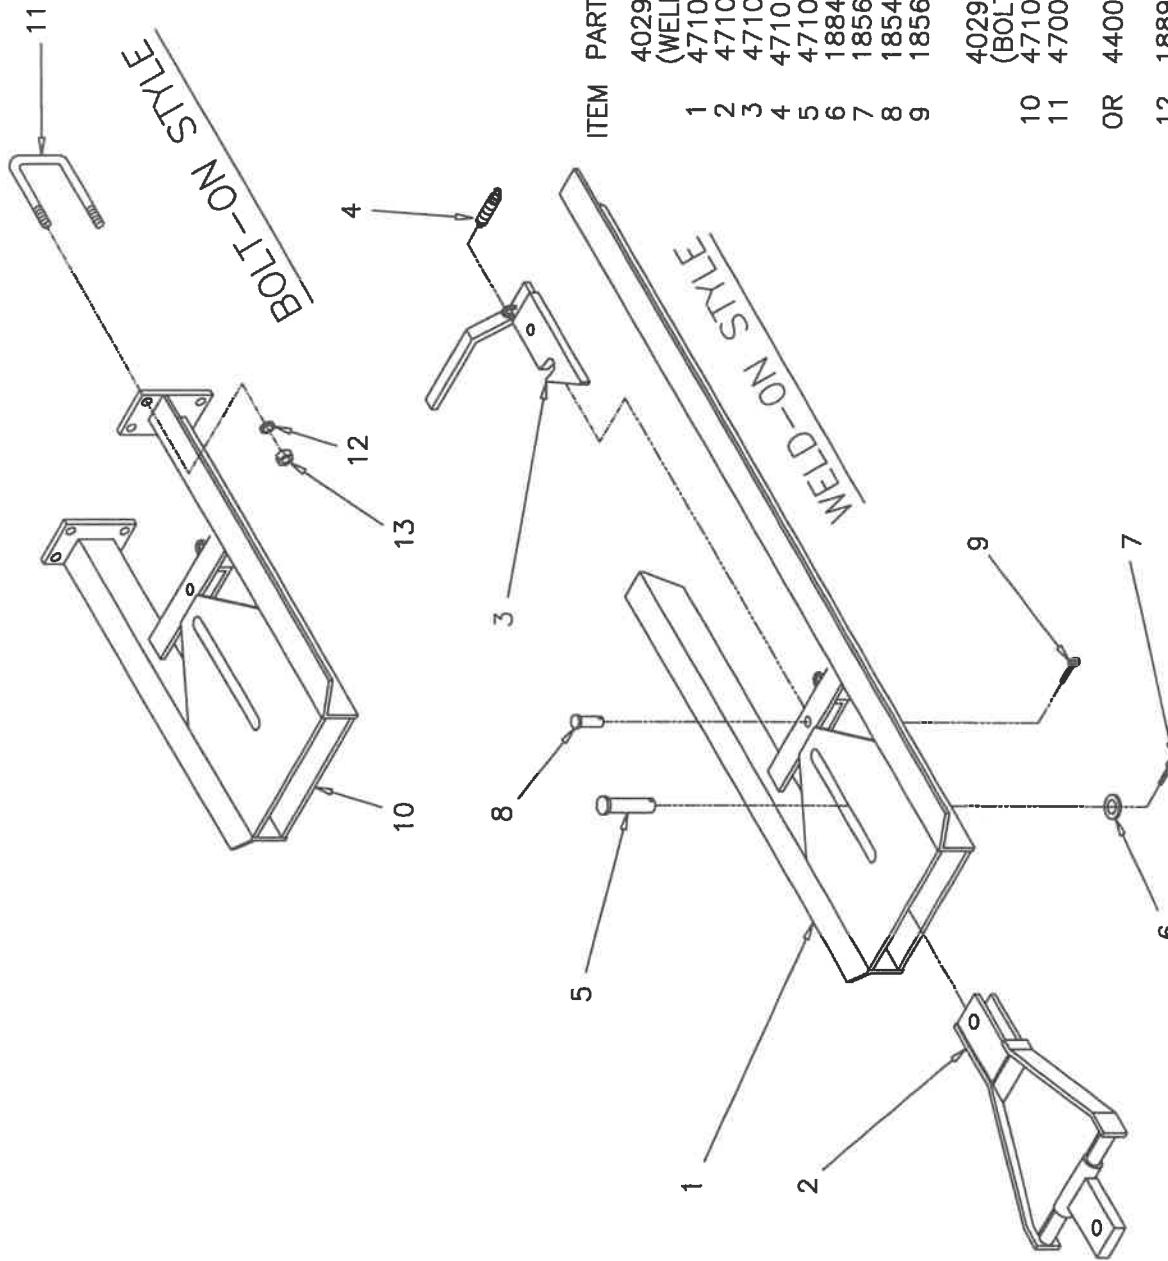

**HYDRAULIC PLUMBING SCHEMATIC**  
**8000 SERIES, WITHOUT SELECTOR VALVE**  
**FOR 34 FT. TOOLBAR**

80PMB97A  
REV 8-29-07

TO TRACTOR (ROUTE ON RH SIDE POLE)

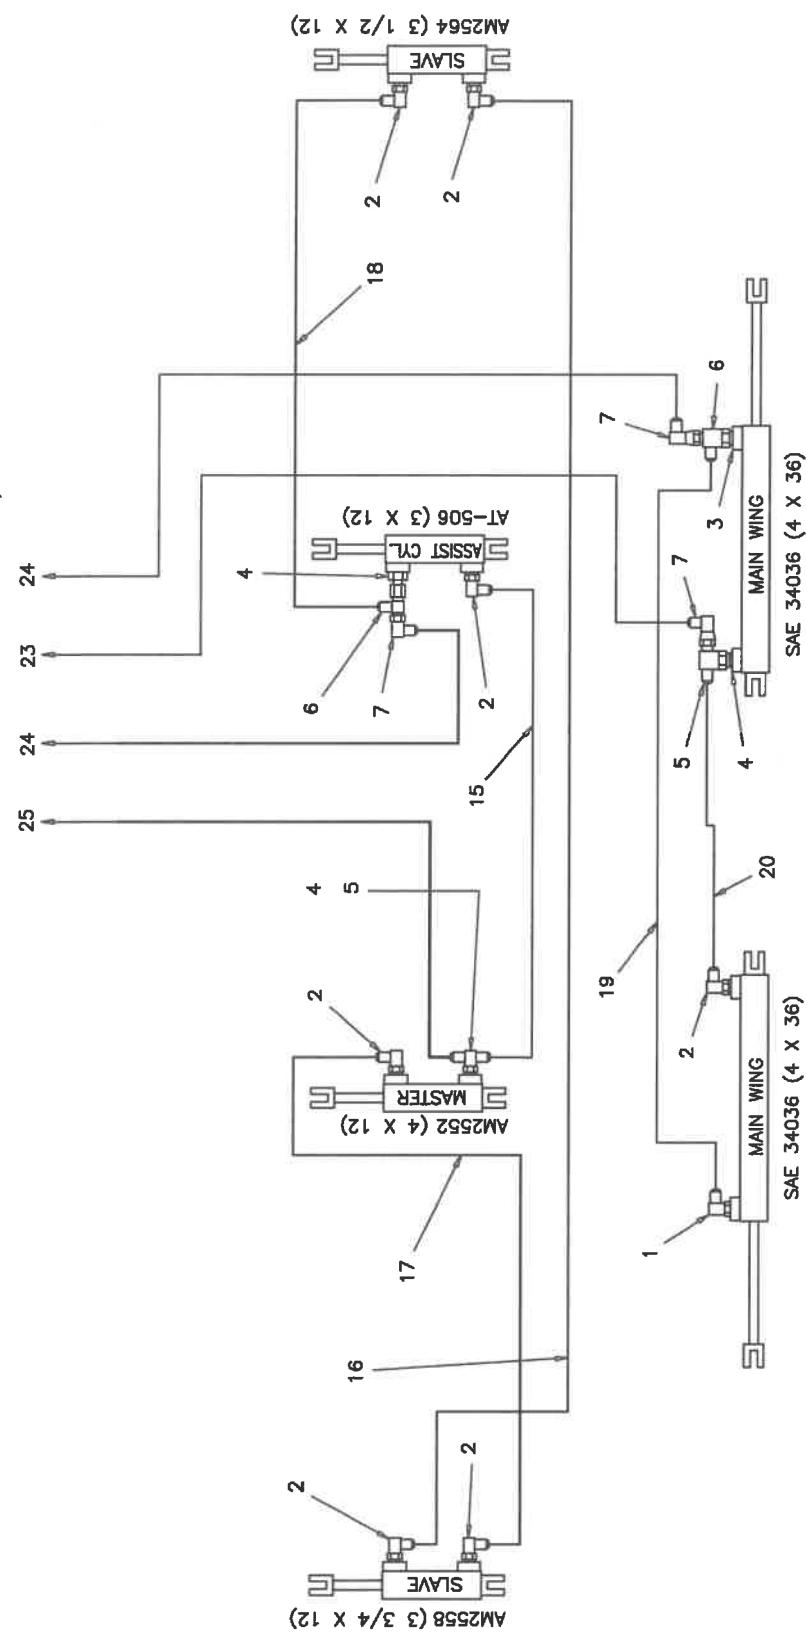

HOSE PACKAGE NO. 608000

ITEM	PART NO.	DESCRIPTION	QTY
15	609011	HOSE, 3/8 X 132 - #6 JICFS BOTH ENDS	1
16	609320	HOSE, 3/8 X 420 - #6 JICFS BOTH ENDS	1
17	609152	HOSE, 3/8 X 182 - #6 JICFS BOTH ENDS	1
18	609170	HOSE, 3/8 X 210 - #6 JICFS BOTH ENDS	1
19	609128	HOSE, 3/8 X 152 - #6 JICFS BOTH ENDS	1
20	609060	HOSE, 3/8 X 72 - #6 JICFS BOTH ENDS	1
23	609161	HOSE, 3/8 X 213 - 1/2 MPT X #6 JICFS	1
24	609228	HOSE, 3/8 X 228 - 1/2 MPT X #6 JICFS	2
25	609380	HOSE, 3/8 X 380 - 1/2 MPT X #6 JICFS	1
609220		HOSE, 1/4 X 264 - 1/2 MPT X 1/4 MPT	2
		NOT SHOWN	

ITEM	PART NO.	DESCRIPTION	QTY
1	6801-6-8R	ADAPTER ELBOW #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	1
2	6801-6-8	ADAPTER ELBOW #6 MJIC X #8 M O-RING	7
3	6400-6-8R	CONNECTOR, #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	1
4	6400-6-8	CONNECTOR, #6 MJIC X #8 M O-RING	3
5	6600-6	BRANCH TEE, #6 MJIC X #6 FJIC SWIVEL	2
6	6602-6	RUN TEE, #6 MJIC X #6 FJIC SWIVEL	2
7	6500-6	ELLBOW, #6 MJIC X #6 FJIC SWIVEL	3


# HYDRAULIC PLUMBING SCHEMATIC

8000 SERIES, WITHOUT SELECTOR VALVE

FOR 42 FT. TO 52 FT. TOOLBAR

TO TRACTOR (ROUTED ON RH SIDE POLE)

80PMB97B  
REV 8-29-07

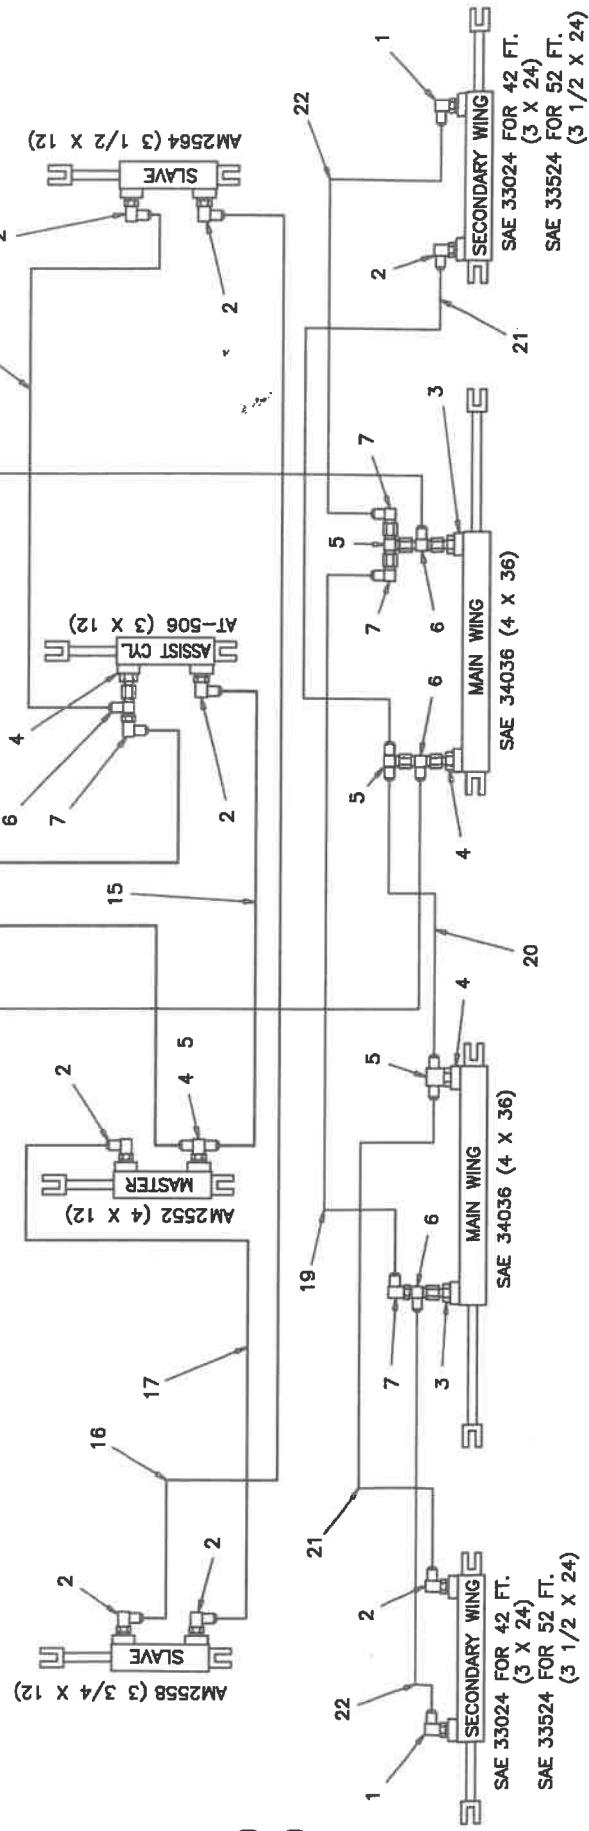

HOSE PACKAGE NO. 608001  
CONSISTS OF HOSE PKG. 608000 AND 608112

ITEM	PART NO.	DESCRIPTION	QTY
15	609011	HOSE, 3/8 X 132 - #6 JCFS BOTH ENDS	1
16	609320	HOSE, 3/8 X 420 - #6 JCFS BOTH ENDS	1
17	609152	HOSE, 3/8 X 182 - #6 JCFS BOTH ENDS	1
18	609170	HOSE, 3/8 X 210 - #6 JCFS BOTH ENDS	1
19	609128	HOSE, 3/8 X 152 - #6 JCFS BOTH ENDS	1
20	609060	HOSE, 3/8 X 72 - #6 JCFS BOTH ENDS	1
21	609109	HOSE, 3/8 X 129 - #6 JCFS BOTH ENDS	2
22	609096	HOSE, 3/8 X 114 - #6 JCFS BOTH ENDS	2
23	609161	HOSE, 3/8 X 213 - 1/2 MPT X #6 JCFS	1
24	609228	HOSE, 3/8 X 228 - 1/2 MPT X #6 JCFS	2
25	609380	HOSE, 3/8 X 380 - 1/2 MPT X #6 JCFS	1
609220	HOSE, 1/4 X 264 -	1/2 MPT X 1/4 MPT	2


FITTING PACKAGE NO. 608300

ITEM	PART NO.	DESCRIPTION	QTY
1	6801-6-8R	ADAPTER ELBOW #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	2
2	6801-6-8	ADAPTER ELBOW #6 MJIC X #8 N O-RING	8
3	6400-6-8R	CONNECTOR, #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	2
4	6400-6-8	CONNECTOR, #6 MJIC X #8 M O-RING	4
5	6600-6	BRANCH TEE, #6 MJIC X #6 FJIC SWIVEL	4
6	6602-6	RUN TEE, #6 MJIC X #6 FJIC SWIVEL	4
7	6500-6	ELBOW, #6 MJIC X #6 FJIC SWIVEL	4

**HYDRAULIC PLUMBING SCHEMATIC**  
**8000 SERIES WITH SELECTOR VALVE**  
**FOR 34 FT. TOOLBAR**

80PMB97C

REV 8-24-07

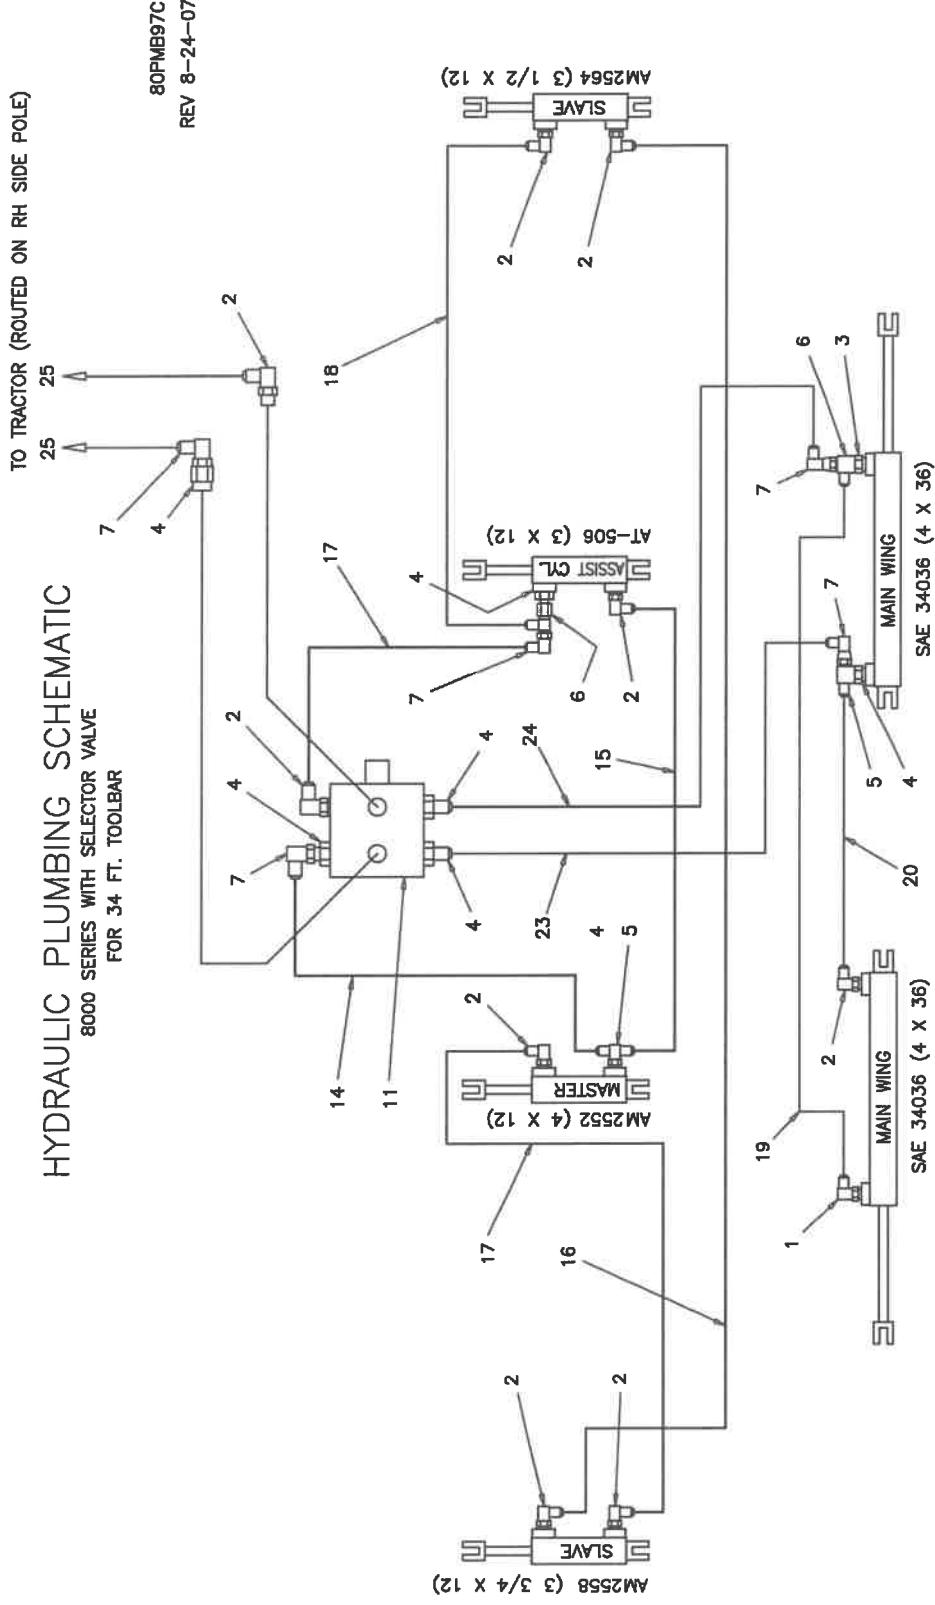


23


ITEM	PART NO.	HOSE PACKAGE NO.	DESCRIPTION	QTY	FITTING PACKAGE NO.	DESCRIPTION	QTY
14	609040	HOSE, 3/8 X	#6 JICFS BOTH ENDS	1	608200SV		
15	609111	HOSE, 3/8 X	132 - #6 JICFS BOTH ENDS	1			
16	609320	HOSE, 3/8 X	420 - #6 JICFS BOTH ENDS	1	6801-6-8R	ADAPTER ELBOW #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	1
17	609152	HOSE, 3/8 X	182 - #6 JICFS BOTH ENDS	2	6801-6-8	ADAPTER ELBOW #6 MJIC X #8 M O-RING	9
18	609170	HOSE, 3/8 X	210 - #6 JICFS BOTH ENDS	1	6400-6-8R	CONNECTOR, #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	1
19	609128	HOSE, 3/8 X	152 - #6 JICFS BOTH ENDS	1	6400-6-8	CONNECTOR, #6 MJIC X #8 M O-RING	7
20	609060	HOSE, 3/8 X	72 - #6 JICFS BOTH ENDS	1	6600-6	BRANCH TEE, #6 MJIC X #6 FJIC SWIVEL	2
23	609310	HOSE, 3/8 X	46 - #6 JICFS BOTH ENDS	1	6602-6	RUN TEE, #6 MJIC X #6 FJIC SWIVEL	2
24	609026	HOSE, 3/8 X	26 - #6 JICFS BOTH ENDS	1	6500-6	ELBOW, #6 MJIC X #6 FJIC SWIVEL	5
25	609150	HOSE, 3/8 X	180 - 1/2 MPT X #6 JICFS	2	11	SELECTOR VALVE ASSEMBLY	1
			NOT SHOWN				

**HYDRAULIC PLUMBING SCHEMATIC**  
WITH SELECTOR VALVE  
FOR 42 FT. TO 52 FT. TOOLBAR

80PMB97D  
REV 8-28-07

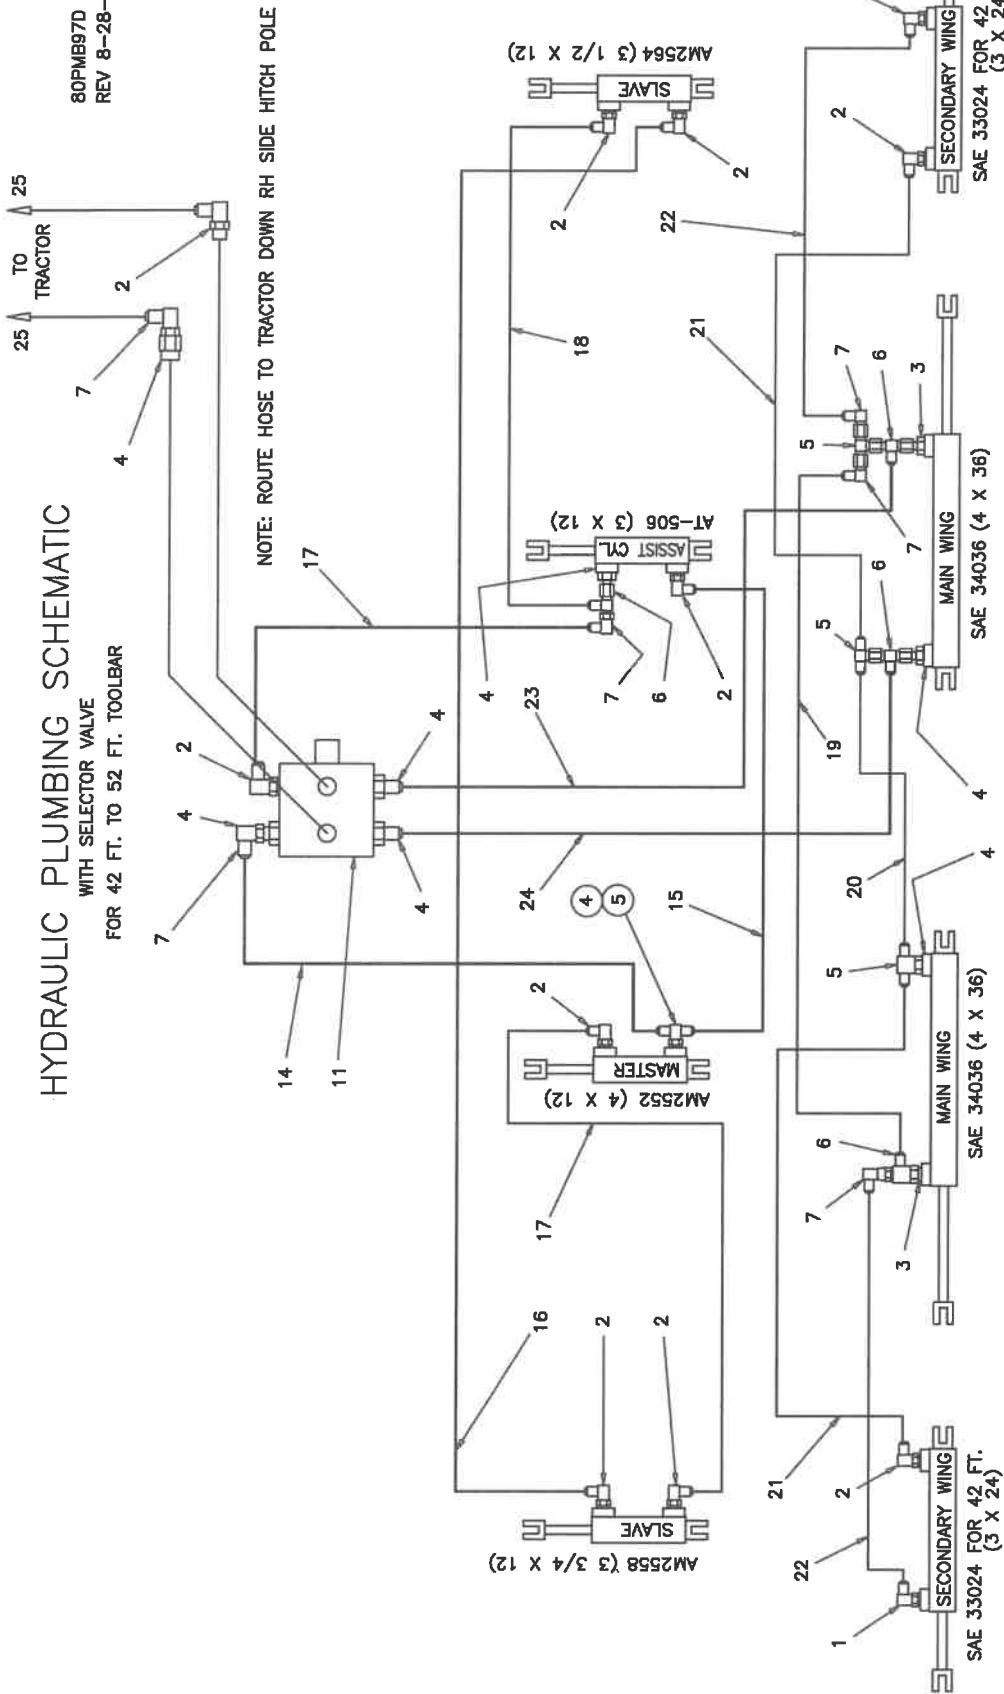

ITEM	PART NO.	DESCRIPTION	QTY
14	609040	HOSE, 3/8 X 48 - #6 JICFS BOTH ENDS	1
15	609011	HOSE, 3/8 X 132 - #6 JICFS BOTH ENDS	1
16	609320	HOSE, 3/8 X 420 - #6 JICFS BOTH ENDS	1
17	609152	HOSE, 3/8 X 182 - #6 JICFS BOTH ENDS	2
18	609170	HOSE, 3/8 X 210 - #6 JICFS BOTH ENDS	1
19	609128	HOSE, 3/8 X 152 - #6 JICFS BOTH ENDS	1
20	609060	HOSE, 3/8 X 72 - #6 JICFS BOTH ENDS	1
21	609109	HOSE, 3/8 X 129 - #6 JICFS BOTH ENDS	2
22	609096	HOSE, 3/8 X 114 - #6 JICFS BOTH ENDS	2
23	609310	HOSE, 3/8 X 46 - #6 JICFS BOTH ENDS	1
24	609026	HOSE, 3/8 X 26 - #6 JICFS BOTH ENDS	1
25	609150	HOSE, 3/8 X 180 - 1/2 MPT X #6 JICFS	2
	609220	HOSE, 3/4 X 264 - 1/2 MPT X 1/4 MPT	2
		NOT SHOWN	
ITEM	PART NO.	DESCRIPTION	QTY
1	6801-6-8R	ADAPTER ELBOW #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	2
2	6801-6-8	ADAPTER ELBOW #6 MJIC X #8 M O-RING	10
3	6400-6-8R	CONNECTOR, #6 MJIC X #8 M O-RING WITH .045 ORIFICE (BLACK FINISH)	2
4	6400-6-8	CONNECTOR, #6 MJIC X #8 M O-RING	8
5	6600-6	BRANCH TEE, #6 MJIC X #6 FJIC SWIVEL	4
6	6602-6	RUN TEE, #6 MJIC X #6 FJIC SWIVEL	4
7	6500-6	ELBOW #6 MJIC X #6 FJIC SWIVEL	6
11	100902	SELECTOR VALVE ASSEMBLY	1

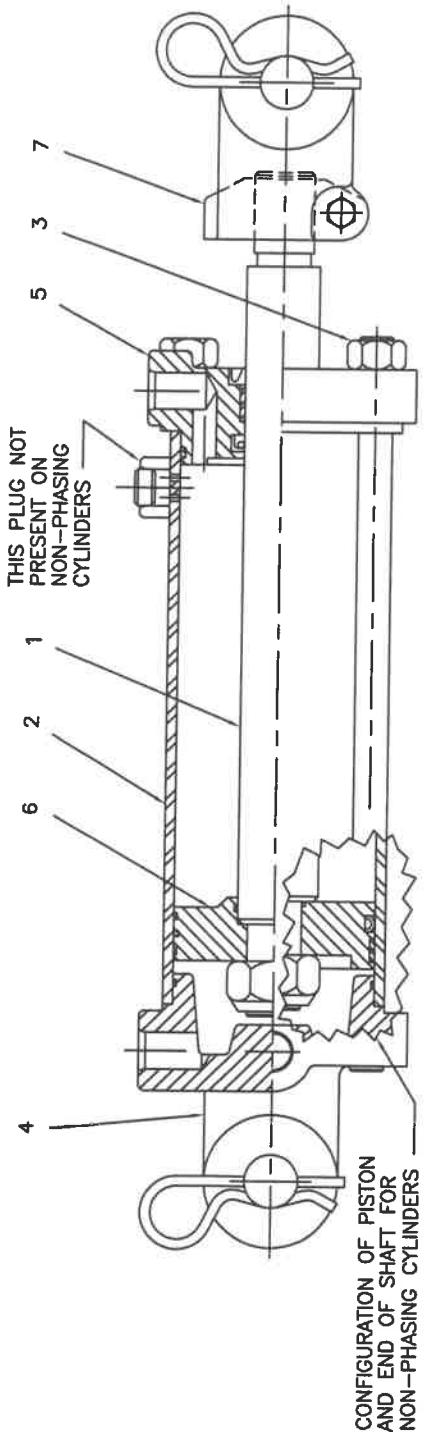

ITEM NO.	DESCRIPTION	MAIN CYL. CNTR. SCNTN.	WING CYL. 32-42 FT. BAR 3 X 36	WING CYL. CNTR, MASTER ASSIST 4 X 1/2 X 24	WHEEL CYL. CNTR, ASSIST 4 X 12	WHEEL CYL. WING, SLAVE 3 X 12	WHEEL CYL. WING, SLAVE 3 3/4 X 12	WHEEL CYL. WING, SLAVE 3 1/2 X 12
1	SHAFT	011041438A	010729750A	010729750B	010700698	010600379	010600379	010600379
2	TUBE	051938563A	051526063A	051726063A	061900598	0515000708	061800022	061700366
3	TIE ROD ASSM.	170301414	170201282	170201283	170301173	170201163	170301173	170201163
4	BUTT	1419005SF	1415005SF	1417005SF	141900037	141500043	141800009	141700023
5	GLAND ASSM.	0819BBGSF	0817BBGSF	081900374	082500337	081800022	081700269	081700269
6	PISTON	071900260	071500244	071900174	071900273	071800021	071700208	071700208
7	CLEVIS ASSM. REPAIR KIT	100000326 47034000	100000423 47033000	100000577 47002552	100000423 4700AT506	100000577 47032558	100000423 47002564	100000423 47002564
	Repair kit items not available individually.							

#### TE ROD DISASSEMBLY - / ASSEMBLY PROCEDURE.


With the cylinder removed from the machine, cleaned, drained of oil and fully retracted, proceed as follows.  
DISASSEMBLY.

- Secure the cylinder in a vice or other method to prevent rotation. Clean the immediate area so the parts can be laid out.
- Remove the tie rod nuts. Pull the shaft assembly from the cylinder. Remove the tube item (2).
- Loosen the clevis nut and remove the clevis item (7) from the shaft assembly.
- Place the shaft assembly in a vice with brass or copper jaws so as not to damage the shaft.
- Remove all seals from the butt, (item 4) gland assembly, (item 5) and piston (item 6) for replacement. Clean and inspect all parts for damage, (nicks, scratches, cracks etc.). Replace as necessary. If you have any question please contact Prince Engineering (712-277-4061)

#### REASSEMBLY.

- Replace all the seals on items (4), (5), and (6) except, for non-phasing cylinders do not replace the small o-ring on the ID of the piston item (6) until you are ready to attach the shaft item (1).
- For non-phasing cylinders, place the small o-ring seal for the piston over the shaft turndown. Apply a light coat of grease to the seal. Slip the piston item (6) onto the turndown with the o-ring counterbore towards the shaft shoulder. Take care not to pinch the o-ring between the piston and the shoulder.
- Replace the shaft end nut and secure.
- Apply a light coat of grease to the seals on the gland item (5) and slip the gland over the shaft end. Be very carefull not to damage the seals. Slip the entire assembly into the lightly oiled tube, item (2) with the piston first making sure the tube slips over the OD seals of the gland.
- Take the entire assembly from step 4 and slip the tube over the OD seal on the butt item (4). Align the ports in the butt and the gland and assemble the nuts to the tie rods and torque uniformly.
- Test the reassembled cylinder for leaks and install in your machine. If you have any problems please contact Prince Engineering (712-277-4061)


# STANDARD UNIVERSAL MOUNT

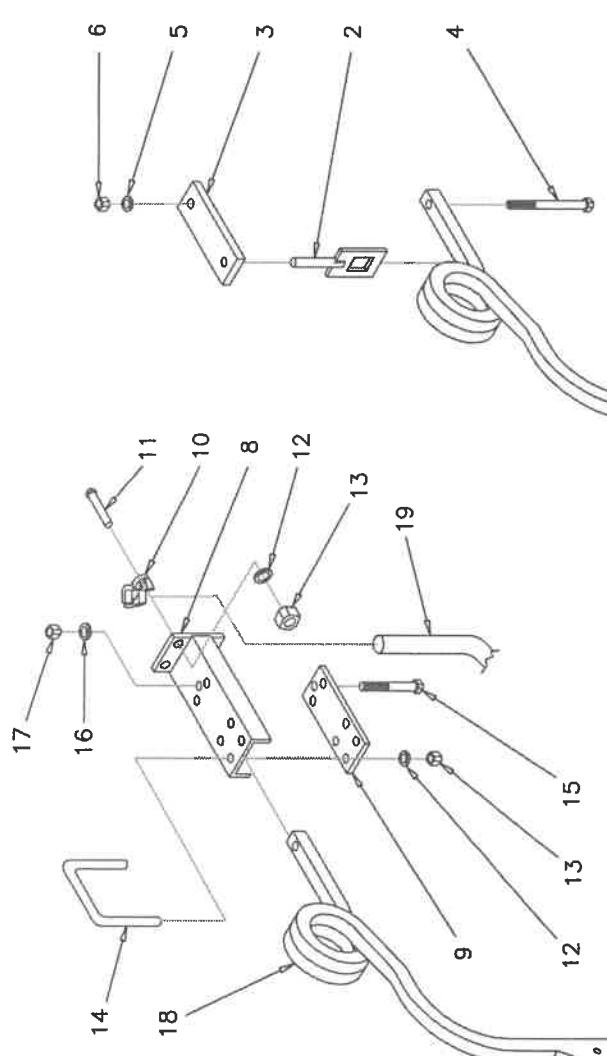

ITEM 1  
COIL SHANK MOUNT ASSEMBLY  
(NO COULTER)

ITEM 7  
COIL SHANK MOUNT ASSEMBLY  
(FOR COULTER)

12  
6

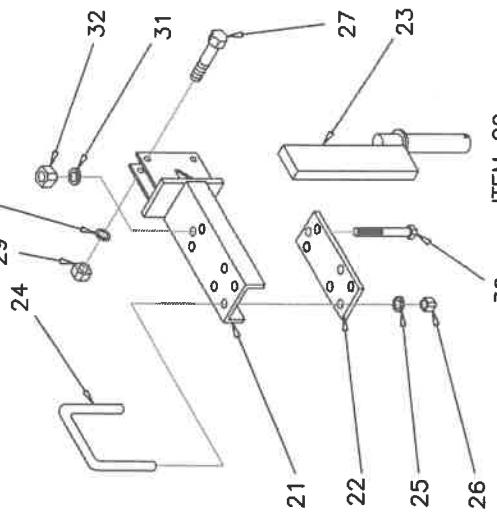

SHANK MOUNT ASSEMBLY for 1 X 2 FLAT KNIFE SHANK  
AND COULTER MOUNTED WITH 1 X 3 FLAT BAR COULTER SHANK

## COIL SHANK MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
1	40511000	SHANK CLAMP SET, (6 X 4 BAR)	1
1	40512000	SHANK CLAMP SET, (4 X 4 BAR) INCLUDES ITEMS 2 TO 6	1
2	44009306	LOLLIPOP, FOR SQUARE SHANK	1
2	602083	LOLLIPOP, FOR 1 X 2 SHANK WITH LOCKWASHER & NUT	1
3	44006685	TOP PLATE, (6 X 4 BAR)	1
3	44006685	TOP PLATE, (4 X 4 BAR)	1
4	18058470	BOLT, 3/4-10NC. X 7	1
5	18891800	LOCKWASHER, 3/4	2
6	18418400	HEX. NUT, 3/4-10NC.	2
7	47309184	SHANK MOUNT ASS'Y. (SQUARE SHANK)	1
		INCLUDES ITEMS 8 TO 14	
		SHANK MOUNT ASS'Y. (1 X 2 SHANK)	
7	47309177	ON 6 X 4 BAR	1
7	47308184	SHANK MOUNT ASS'Y. (1 X 2 SHANK)	1
		ON 4 X 4 BAR	
8	47309406	SHANK HOLDER, (SQUARE SHANK)	1
8	47302890	SHANK HOLDER, (1 X 2 SHANK)	1
9	47306005	CLAMP PLATE, (SQUARE SHANK)	1
9	47006832	CLAMP PLATE, (1 X 2 SHANK)	1
10	47301538	CLAMP, COULTER SHANK	2
11	18057940	BOLT, 5/8-11NC. X 3 1/2	4
12	18891600	LOCKWASHER, 5/8	8
13	18417900	HEX. NUT, 5/8-11NC.	8
14	47006950	U-BOLT, 5/8-11NC. (6 X 4 BAR)	2
14	47006951	U-BOLT, 5/8-11NC. (4 X 4 BAR)	2
15	18057938	BOLT, 5/8-11NC. X 3	1
16	18891600	LOCKWASHER, 5/8	1
17	18417900	HEX. NUT, 5/8-11NC.	1
18	80310	COIL SHANK (OR AS SPECIFIED)	1
19	4036000	COULTER ASSEMBLY, AG36	1
		W/STRAIGHT OR BENT COULTER SHANK AS SPEC'D.	
20	47999370	SHANK MOUNT ASSEMBLY COMPLETE	1
21	47309370	INCLUDES ITEMS 21 TO 29	
21	47309370	SHANK HOLDER, (1 X 2 SHANK)	1
22	47006832	CLAMP PLATE, (1 X 2 SHANK)	1
23	47303811	FLAT BAR COULTER SHANK, 18"	1
23	47309811	FLAT BAR COULTER SHANK, 12"	1
24	47006950	U-BOLT, 5/8-11NC. (6 X 4 BAR)	2
24	47006951	U-BOLT, 5/8-11NC. (4 X 4 BAR)	2
25	18891600	LOCKWASHER, 5/8	4
26	18417900	HEX. NUT, 5/8-11NC.	4
27	18057434	BOLT, 1/2-13NC. X 2 1/2	2
28	18891400	LOCKWASHER, 1/2	2
29	18417400	HEX. NUT, 1/2-13NC.	2
30	18057938	BOLT, 5/8-11NC. X 3	1
31	18891600	LOCKWASHER, 5/8	1
32	18417900	HEX. NUT, 5/8-11NC.	1


ISO14B

# SPRING BUNDLE ASSEMBLY

FOR 6 X 4 BAR  
AND 6 X 6 BAR

YEAR 2000 TO PRESENT

SPECIFY U-BOLT SIZE (ITEM 15)

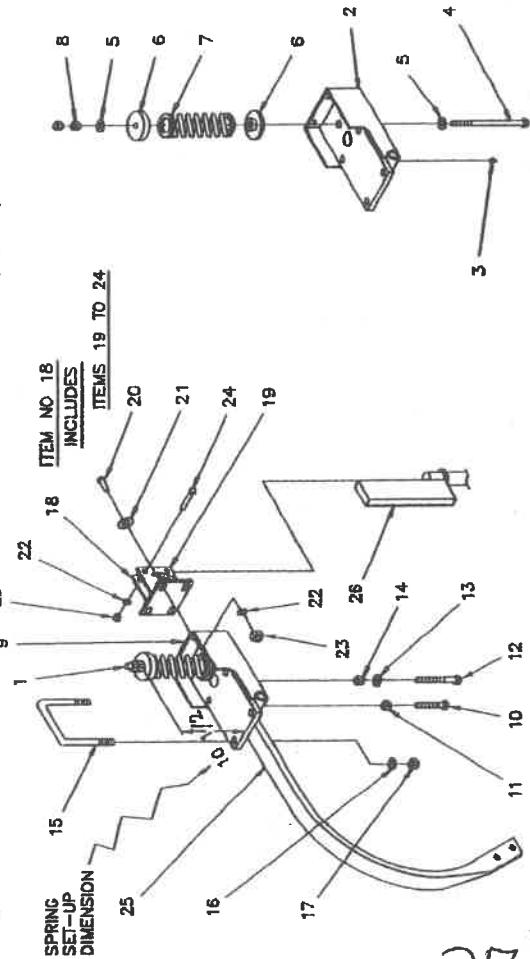

ITEM NO. 9  
INCLUDES ITEM 1  
AND 10 TO 17


ITEM NO. 1  
INCLUDES ITEMS 2 TO 8

SPRING BUNDLE ASSEMBLY COMPLETE  
INCLUDES AT ITEMS (1 TO 25)  
DOES NOT INCLUDE THE SHANK OR COULTER

ITEM	PART NO.	DESCRIPTION	QTY
1	47029413	SPRING SHANK MOUNT ASSEMBLY INCLUDES ITEMS 2 TO 8	1
2	47019413	SHANK MOUNTING BASE	1
3	18801805	GREASE, ZERK	1
4	47007766	BOLT, 3/4-10NC, X 15	1
5	18811800	FLATWASHER, 3/4	2
6	47007085	END COLLAR	2
7	47007285	COMPRESSION SPRING	2
8	18448880	HEX. NUT, 3/4-10NC. GR. 5	2
9	47039413	SPRING LOADED SHANK MOUNT COMPLETE ( NO COULTER )	1
10	18058429	INCLUDES ITEMS 1 AND 10 TO 17	1
11	18448803	HEX. JAM NUT, 3/4-10NC. X 1 3/4	1
12	18058436	BOLT, 3/4-10NC. X 3	1
13	18891800	LOCKWASHER, 3/4	1
14	18418400	HEX. NUT, 3/4-10NC.	1
15	47007083	U-BOLT, 5/8-11INC. ( 4 X 6 BAR )	2
16	47009847	U-BOLT, 5/8-11INC. ( 6 X 6 BAR )	2
17	18891800	LOCKWASHER, 5/8	4
18	47029417	COULTER MOUNTING BRACKET ASSEMBLY	1
19	47019417	INCLUDES ITEM 19 TO 24	1
20	18057426	COULTER MOUNTING BRACKET	1
21	18891400	BOLT, 1/2-13NC, X 1 1/2	4
22	18891400	FLATWASHER, 1/2	4
23	18417400	LOCKWASHER, 1/2	6
24	18057434	HEX. NUT, 1/2-13NC.	6
25	103471	SPRING SHANK ( OR AS SPECIFIED )	1
26		REFER TO COULTER ILLUSTRATIONS ( AG36 OR AG38 ) FOR ITEM PART NUMBERS AND SPECIFY BLADE ASSEMBLY NUMBER AND SWIVEL BAR NUMBER	1


## SPRING LOADED SHANK MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
1	470100B2	SPRING SHANK MOUNT ASSEMBLY	1
2	470101B9	INCLUDES ITEMS 2 TO 8	1
3	18801805	SHANK MOUNTING BASE	1
4	47007766	BOLT, 3/4-10NC, X 15	1
5	18851800	FLATWASHER, 3/4	2
6	47007085	END COLLAR	2
7	47007585	COMPRESSION SPRING	1
8	18448890	HEX. NUT, 3/4-10NC. GR. 5	2
9	470200B2	SPRING LOADED SHANK MOUNT COMPLETE ( NO COULTER )	1
10	18058429	INCLUDES ITEMS 1 AND 10 TO 17 ( SHIPPING INFO ) HARDWARE PACKAGE	1
11	18448003	INCLUDES ITEMS 10 TO 17	1
12	18058436	BOLT, 3/4-10NC, X 3	1
13	18891800	LOCKWASHER, 3/4	1
14	18418400	HEX. NUT, 3/4-10NC.	1
15	47007083	U-BOLT, 5/8-11INC. ( 4 X 6 BAR )	2
16	18891600	LOCKWASHER, 5/8	4
17	18417400	HEX. NUT, 5/8-11INC.	4

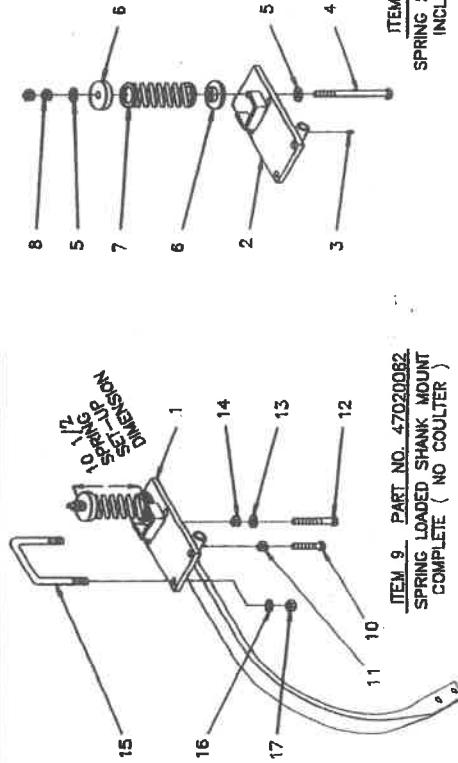

ITEM 1 ( REPAIR PARTS )  
SPRING SHANK MOUNT ASSEMBLY  
INCLUDES ITEMS 2 TO 8

**SPRING BUNDLE ASSEMBLY  
WITH DUAL SPRINGS  
AND HEAVY SHANK**

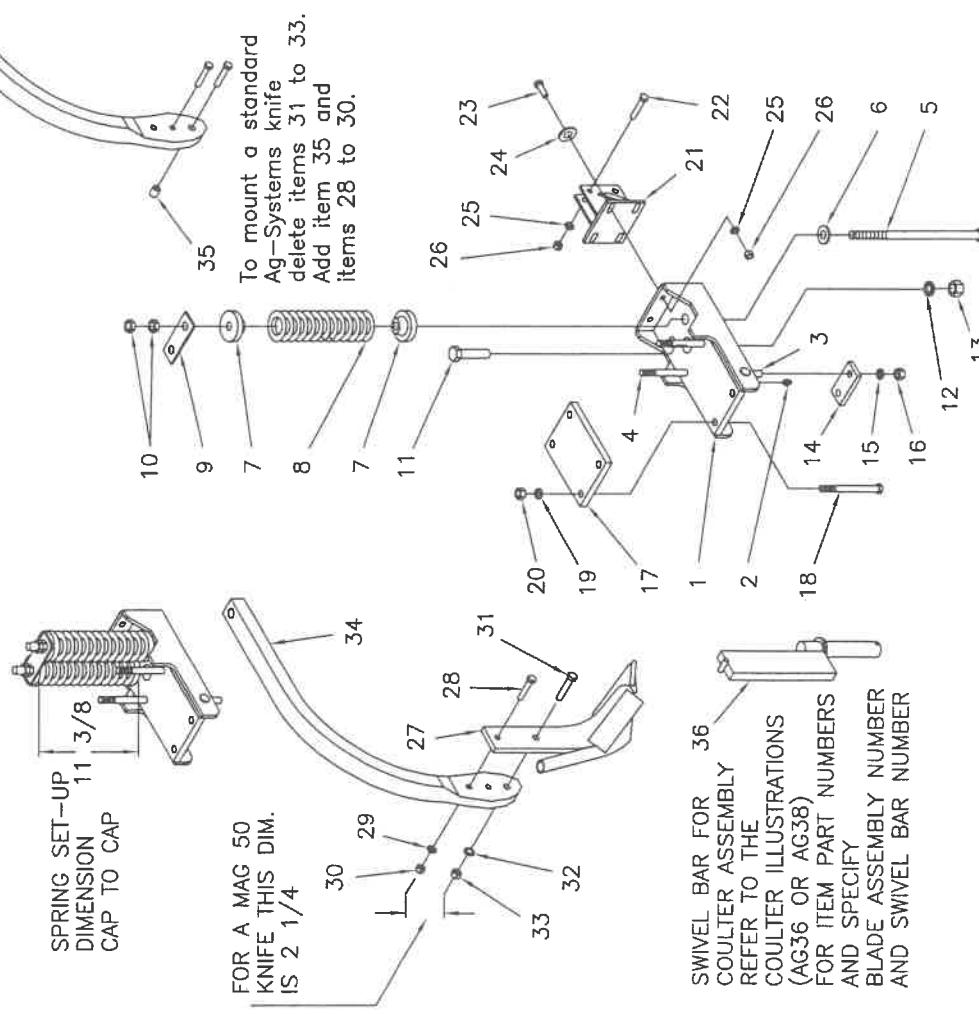

ITEM	PART NO.	DESCRIPTION	QTY
	47009661	SPRING BUNDLE COMPLETE INCLUDES ITEMS 1 TO 20 PREASSEMBLED	1
1	47019661	SPRING BUNDLE BRACKET	1
2	18901805	GREASE ZERK, 1/4-28NF	2
		ITEMS 3 AND 4 ARE CAPTURED IN THE ASSEMBLY WHEN THE SPRINGS ARE INSTALLED.	
3	18057942	BOLT, 5/8-11NC. X 3 3/4	2
4	18057971	BOLT, 5/8-11NC. X 6 1/2	2
6 X 6 TUBE	18057976	BOLT, 5/8-11NC. X 8 1/2	OPT
5	47007766	SPRING BOLT, 3/4-10NC. X 15 1/2	2
6	18811800	FLAT WASHER, 3/4	2
7	47007085	SPRING CAP	2
8	47007565	COMPRESSION SPRING, 5/8 WIRE	4
9	47019672	TOP WASHER PLATE	1
10	18446890	HEX. NUT, 3/4-10NC	4
11	18058501	BOLT, 7/8-9NC. X 3 3/4	1
12	18892000	LOCK WASHER, 7/8	1
13	18417800	HEX. NUT, 7/8-9NC.	1
14	47009671	CLAMP PLATE-SHANK	1
15	18891600	LOCK WASHER, 5/8	2
16	18417900	HEX. NUT, 5/8-11NC.	2
17	47009678	CLAMP PLATE-TOOLBAR	1
18	18057971	BOLT, 5/8-11NC. X 6 1/2	2
6 X 6 TUBE	18057976	BOLT, 5/8-11NC. X 8 1/2	OPT
19	18891600	LOCK WASHER, 5/8	4
20	18417900	HEX. NUT, 5/8-11NC.	4
47029417		COULTER MOUNTING BRACKET	
21	47019417	COULTER MOUNTING BRACKET	1
22	18057434	BOLT, 1/2-13NC. X 2 1/2	2
23	18057426	BOLT, 1/2-13NC. X 1 1/2	4
24	18811400	FLATWASHER, 1/2	4
25	18891400	LOCKWASHER, 1/2	6
26	18417400	HEX. NUT, 1/2-13NC.	6
27	201996	KNIFE, MAG 50 W/3/8 NH3 TUBE	
28	201997	KNIFE, GOPHER W/1/2 LIQ. TUBE	
29	201998	KNIFE, GOPHER W/1 1/4 DRY TUBE	
30	201999	KNIFE, GOPHER for DUAL SHOOT	
		1/2 NH3 TUBE & 1 1/4 DRY TUBE	
		3/8 NH3 TUBE & 1 1/4 DRY TUBE	
	202999	KNIFE, GOPHER for DUAL SHOOT	
31	203998	KNIFE, GOPHER W/ 1" DRY TUBE	
32	47309997	KNIFE, MAG 50 W/ 1" DRY TUBE	
28	18037433	BOLT, 1/2-13NC. X 2 1/2 GR2	1
29	18891400	LOCK WASHER, 1/2	1
30	18417400	HEX. NUT, 1/2-13NC.	1
31	18057934	BOLT, 5/8-11NC. X 2 1/2	1
32	18891600	LOCK WASHER, 5/8	1
33	18417900	HEX. NUT, 5/8-11NC.	1
34	200999	KNIFE SHANK 1 1/4 THK (TO SPRING 2007)	1
35	201000	KNIFE SHANK 1 1/2 THK (FALL 07 TO PRESENT)	1
36	47009960	COULTER SWIVEL BAR, (SEE NOTE)	OPT.




NQ

SPRING BUNDLE ASSEMBLY (FOR EDGE-BENT SHANK) 2014 & NEWER

HIGHTRIP2014  
REV 01/28/22

ITEM PART NO. DESCRIPTION QTY

( COMPLETE W/ SHANK P.N. 47953973	4"	X	6"	MOUNTING BRKT) [NO COULTER]	1	47013973 HI-TRIP SPRING BUNDLE COMPLETE INCLUDES ITEMS 1 TO 18 (PREASSEMBLED)	
( COMPLETE W/ SHANK P.N. 47983973	6"	X	6"	MOUNTING BRKT) [NO COULTER]	1	47004530 MAIN BRACKET, (6 X 6 BAR) OR	
26	FOR 6 X 4 TUBE HORIZONTAL	26A	FOR 4 X 4 SQ TUBE	27A	FOR 6 X 6 SQ TUBE	1	47015003 MAIN BRACKET, (7 X 7 BAR) SHANK PIVOT BRACKET (2014)
27B	FOR 7 X 7 SQ TUBE	27C	FOR 6 X 4 TUBE HORIZ.	27D	FOR 6 X 4 TUBE VERTICAL (USE ON DM BAR)	2	47003973 SPRING FRAME ASSEMBLY
9	ASSEMBLY	10	ITEMS 1 TO 45	11	INCLUDES ITEMS 3 TO 9	1	
12	ITEMS 4 TO 10	13	ITEMS 1 TO 9	14	ITEMS 1 TO 9	1	

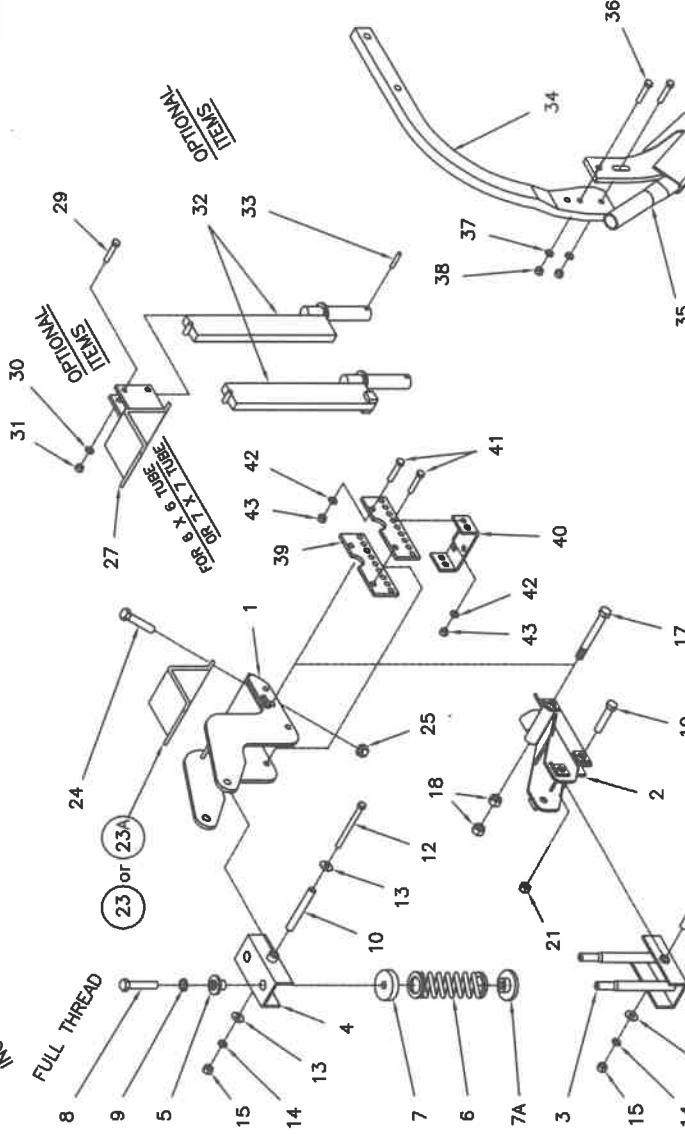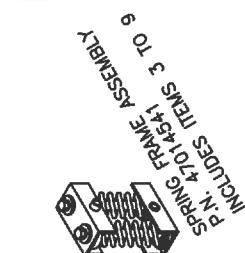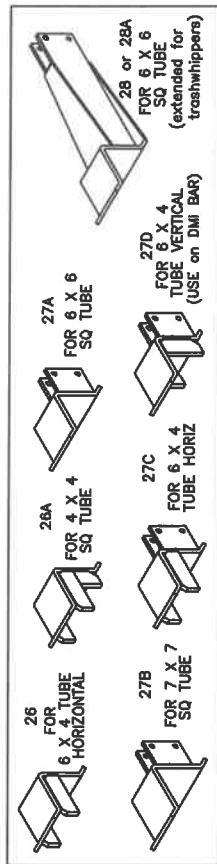

LIST OF KNIVES TO SUIT THIS SHANK



- 47005564 KNIFE, GOPHER W 1.5" DRY TUBE  
47005565 KNIFE, GOPHER DUAL-SHOOT WITH 3/8" OPEN TUBE AND 1.50" DRY TUBE  
47005567 KNIFE, MAG 50 DUAL-SHOOT WITH 3/8" OPEN TUBE AND 1.50" DRY TUBE

ITEM PART NO. DESCRIPTION QTY

34	47003977 KNIFE SHANK, 1 1/4 THK EDGE-BENT 1 (2014 AND NEWER)	1
35	KNIFE, SEE LIST OF KNIVES LISTED ON LEFT	2
36	18057434 BOLT, 1/2 - 13NC X 2 1/2 GR5	2
37	18891400 LOCK WASHER, 1/2 HEX. NUT, 1/2 - 13NC.	1
38	18417400 COULTER SWIVEL BAR (INCL. ITEM 33)	1
39	47005891 PLATE, TRASHWHIPPER MOUNTING	2
40	47005892 MOUNT, CHANNEL, TRASHWHIPPER	1
41	18057147 BOLT, 7/16NC X 1 1/2 GR5	8
42	18891300 LOCKWASHER, 7/16 ZC NUT, HEX 7/16NC ZC	8
43	18437100 (with optional coulters order option item 28)	8

SPRING BUNDLE ASSEMBLY (PRE 2014)

HI-TRIP SHANK ASSEMBLY (HTS ASSEMBLY)  
(COMPLETE W/ SHANK & KNIFE P.N. 4703650H)

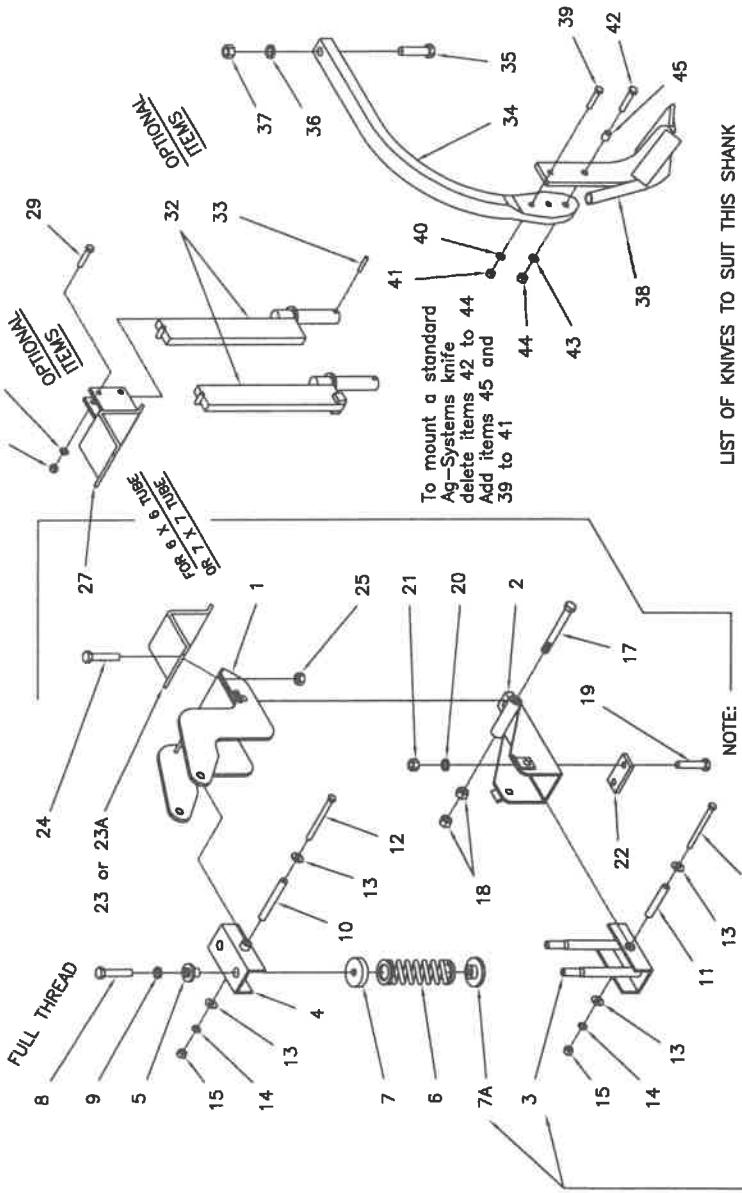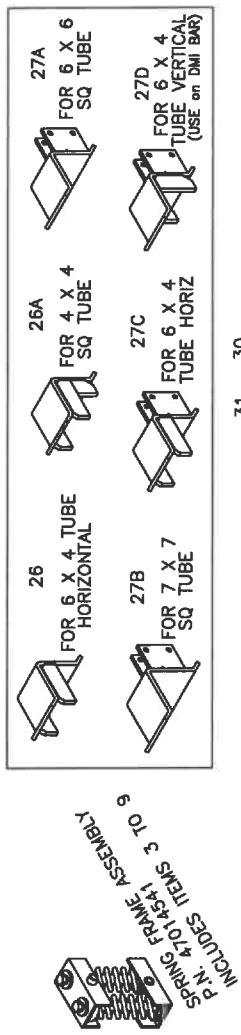

**NOTE:** ITEM 7A IS NEW FOR FALL 2008. WHEN REPLACING SPRING FRAME ITEM 3, ALSO ORDER ITEM 7A OR DRILL OUT EXISTING SPRING CAPS ITEM 7 TO 1.260 DIA. (SCREW CAPS ONLY).

NOT  
ITEM  
FALL  
SPR  
ORD  
EXIST  
TO  
(82)

38 184-7800 HEX. NUT. /6-9NC.  
 38 SEE LIST OF KNIVES AT LEFT  
 THESE ARE HEAVY KNIVES WITH 9/16 X 3 BODY  
 39 18037432 BOLT, 1/2 - 13NC. X 2 1/4 GR.2 1  
 40 18891400 LOCK WASHER, 1/2  
 41 18474400 HEX. NUT, 1/2 - 13NC.  
 42 18057934 BOLT, 5/8 - 11NC. X 2 1/2  
 43 18891600 LOCK WASHER, 5/8  
 44 1847900 HEX. NUT, 5/8 - 11NC.  
 45 47009960 KNIFE MOUNT BUSHING  
 OPT.


SPBNDLHTS  
REV 01/28/22

QTY

ITEM	PART NO.	DESCRIPTION	QTY
1	47014530	SPRING BUNDLE COMPLETE INCLUDES ITEMS 1 TO 19 (PREASSEMBLED)	1
1	47004530	MAIN BRACKET, (STANDARD)	1
1	47015003	MAIN BRACKET, (7 X 7 BAR)	1
2	47004533	SHANK PIVOT BRACKET	1
2	47014541	SPRING FRAME ASSEMBLY INCLUDES ITEMS 3 TO 9	1
3	47004541	SPRING FRAME, BOTTOM	1
4	47004538	SPRING FRAME, TOP	1
5	47004544	SPRING RETAINER	2
6	47007565	COMPRESSION SPRING, 5/8 WIRE	2
7A	47005330	SPRING CAP, TOP	2
7A	47005330	SPRING CAP, BOTTOM	2
NEW FOR 2008	SEE NOTE RE ITEM 7A (ON ILLUSTRATION)		
8	47004547	BOLT, 5/8-11NC. X 3 3/4 (SPECIAL)	2
9	18891600	LOCK WASHER, 5/8	2
10	47004551	INNER BUSHING, (TOP) 5 13/16	1
11	47004551	INNER BUSHING, (BOTTOM) 5	1
12	18057464	BOLT, 1/2-13NC. X 7	1
13	18811400	FLAT WASHER, 1/2	4
14	18891400	LOCK WASHER, 1/2	2
15	18474700	HEX. NUT, 5/8-11NC	2
16	18057462	BOLT, 1/2-13NC. X 6	1
17	18058422	BOLT, 3/4-10NC. X 7 1/2 GR 5	1
18	18418400	HEX. NUT, 3/4-10NC	2
19	18057946	BOLT, 5/8-11NC. X 4	2
20	18891600	LOCK WASHER, 5/8	2
21	18471900	HEX. NUT, 5/8-11NC	2
22	47006671	SHANK CLAMP PLATE	1
23	47004532	SPRING BUNDLE CLAMP (6X6 BAR)	1
23A	47015004	SPRING BUNDLE CLAMP (7X7 BAR)	1
24	18098453	BOLT, 5/8-11NC. X 3 GR 8	4
25	18454511	TOP LOCK NUT, 5/8-11NC	4
26	47004555	SPRING BUNDLE CLAMP (6X4 HORIZ)	1
26A	47004555S	SPRING BUNDLE CLAMP (4X4 BAR)	1
27A	47004553	CLAMP W/CLTR MOUNT (6X6 BAR)	1
27B	47015005	CLAMP W/CLTR MOUNT (7X7 BAR)	1
27C	47004557	CLAMP W/CLTR MOUNT (6X4 BAR)	1
27D	47004557D	CLAMP W/CLTR MNT DMI (6X4 VERT)	1
29	18057434	BOLT, 1/2-13NC. X 2 1/2	2
30	18891400	LOCK WASHER, 1/2	2
31	18747400	HEX. NUT, 1/2-13NC.	2
32	47308111	COUPLER SWIVEL BAR (INCL ITEM 33)	1
33	18511032	SPRING PIN, 1/4 X 2 1/4 (STD)	1
OPTIONAL		COUPLER BAR WITH RESTRICTED SWING 10 DEG. AND 15 DEG. AVAILABLE.	
38	18478000	CALL AG SYSTEMS FOR INFO.	1
SEE AG37	GENERATION THREE COUPLER ILLUSTRATION		
32	47304522	COUPLER SWIVEL BAR (SPECIAL)	1
34	200999	KNIFE SHANK, 1 1/4 THK (TO SPRING 2007)	1
201000	KNIFE SHANK, 1 1/2 THK (FALL 07 TO PRESENT)	1	
35	18058501	BOLT, 7/8-9NC. X 4	1
36	18892000	LOCK WASHER, 7/8	1
37	18478000	HEX. NUT, 7/8-9NC.	1
38	SEE LIST OF KNIVES AT LEFT		
THESE ARE HEAVY KNIVES WITH 9/16 X 3 BODY			
39	18037432	BOLT, 1/2 -13NC. X 2 1/4 GR.2	1
40	18891400	LOCK WASHER, 1/2	1
41	18417400	HEX. NUT, 1/2-13NC.	1
42	18057934	BOLT, 5/8-11NC. X 2 1/2	1
43	18891600	LOCK WASHER, 5/8	1
44	18009790	HEX. NUT, 5/8-11NC.	1
45	47009960	KNIFE MOUNT BUSHING	1

STGBKISO


## STAGGER BRACKET ASSEMBLY

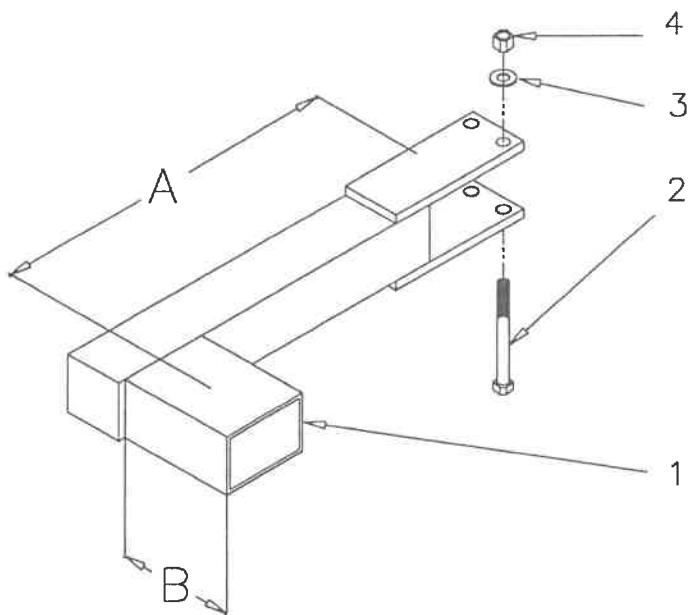

ITEM	PART NO.	DESCRIPTION	DIM. A	DIM. B	QTY.
1	47010182	STAGGER BRACKET - SHORT	18	12	1
	47010234	STAGGER BRACKET - MEDIUM	24	12	1
	47010181	STAGGER BRACKET - LONG	30	8	1
	47010434	STAGGER BRACKET - XT. LONG	36	8	1
	47009431	STAGGER BRACKET - 2-XT. LONG	40	8	1
	47010235	STAGGER BRACKET - SPECIAL	24	15	1
2	18058460	BOLT, 3/4-10NC. X 6 1/2	---	---	2
3	18891800	LOCKWASHER, 3/4	---	---	2
4	18418400	HEX. NUT, 3/4-10NC.	---	---	2

304

## AG36 COUNTER ASSEMBLY

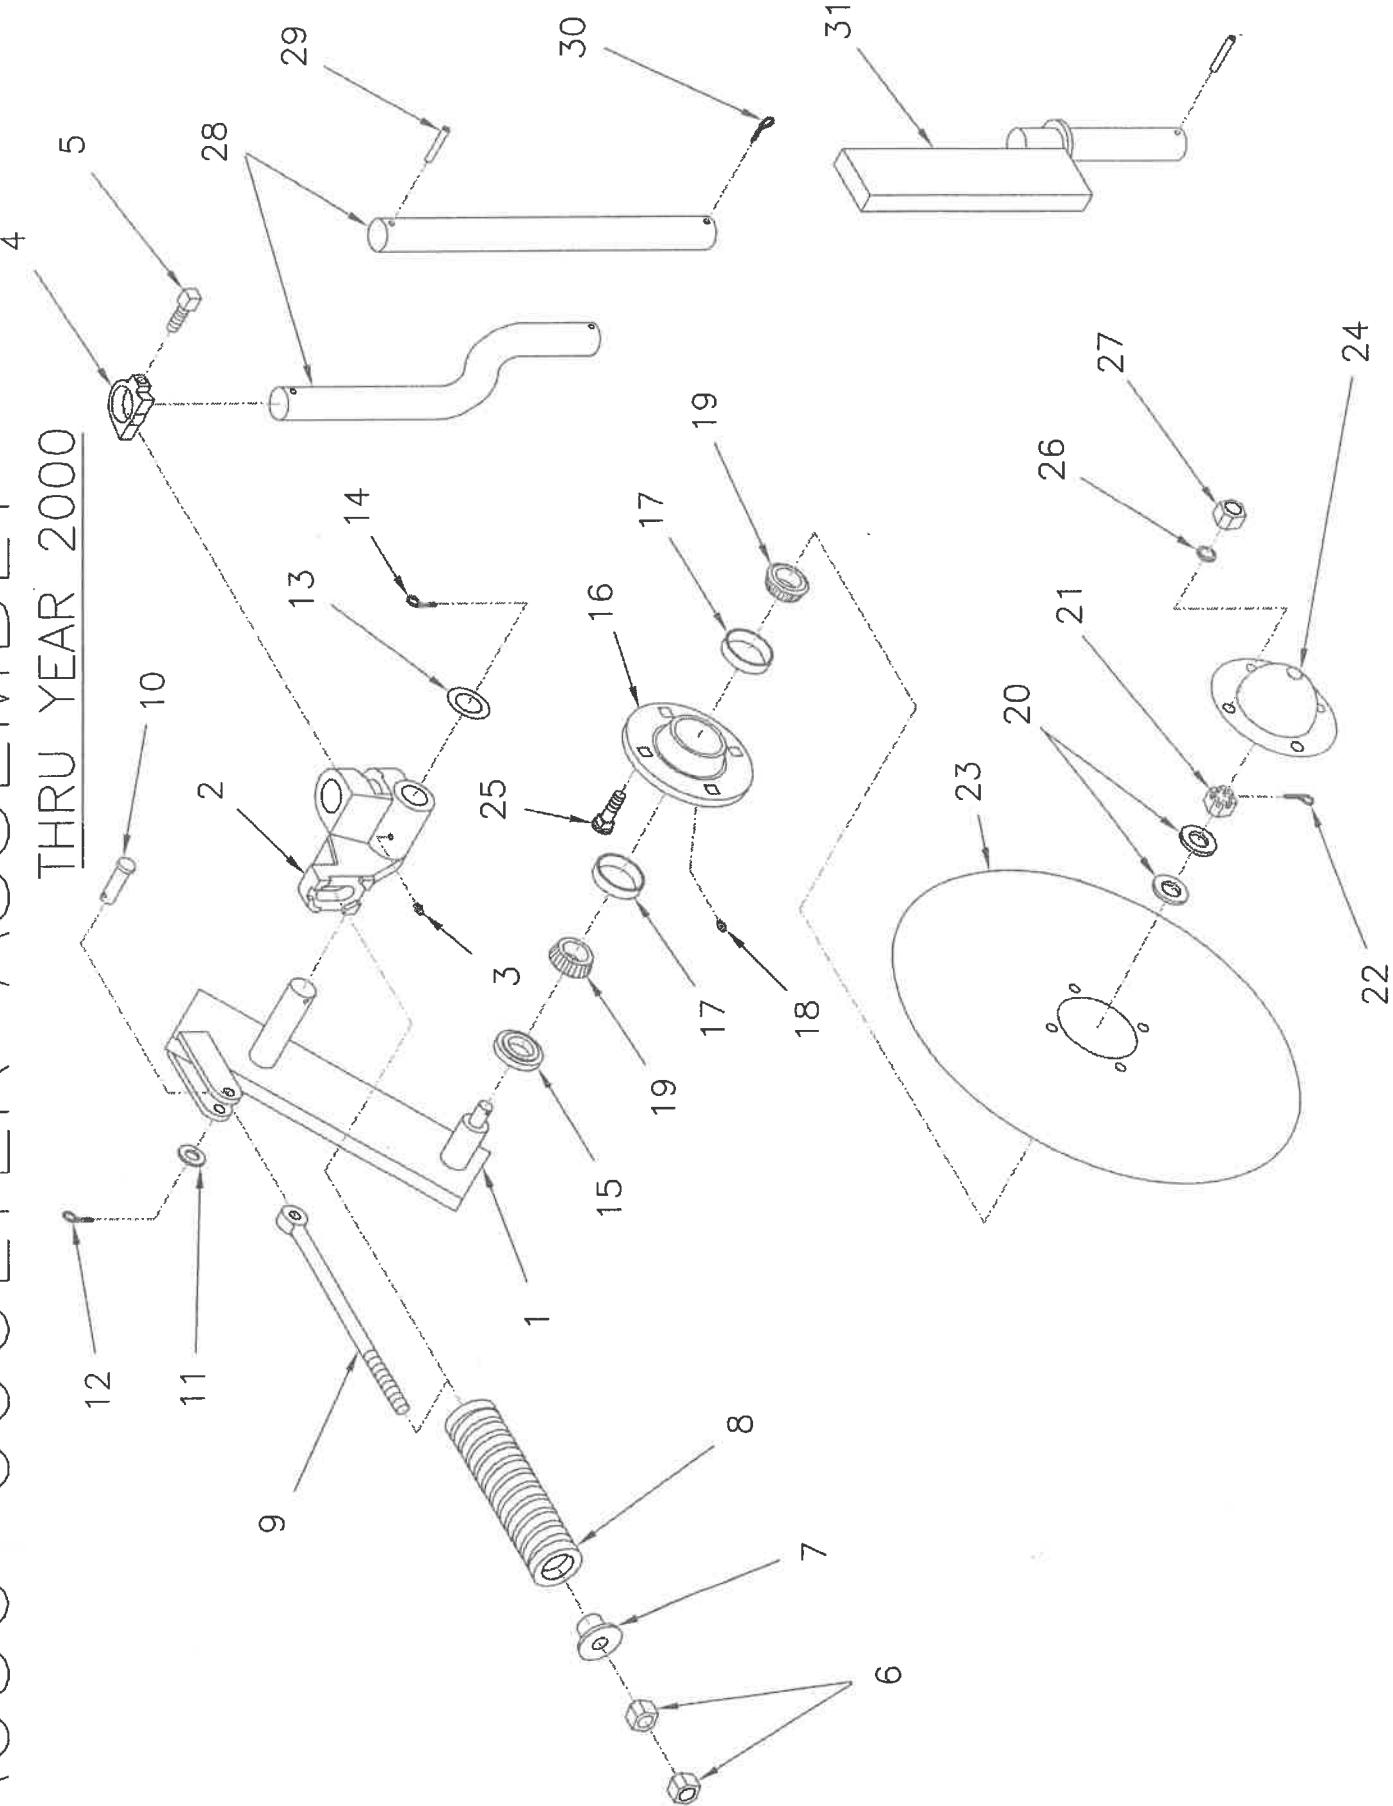THRU YEAR 2000

## AG36 COULTER ASSEMBLY

### Mounting Instructions and Parts List

1. Your AG36 coulter blade and main bracket are pre-assembled at the factory, and the trip spring is pre-loaded to provide 250 pound blade pressure. This should be adequate for normal field conditions. The coulter arm should trip up only when hitting a solid obstruction. During your field operation, check to make sure the coulter arm is staying rigid most of the time. Excessive flexing will cause premature spring failure. If repeated tripping is occurring tighten the spring tension till rigid operation is achieved.
2. Assemble the shank (item 28) bracket casting (item 2), and the coulter stop (item 4).
3. Install the cotter pin (item 30) at the lower end of the shank (item 28).
4. Install the set screw (item 5) finger tight only.
5. Position the coulter mounting brackets at the desired spacing and fasten securely. The mounting brackets are not shown in this illustration. NOTE: There are several types mounting brackets listed.
6. Adjust the coulter blade to the desired depth and securely tighten the set screw (item 5).
7. Install the upper roll pin (item 29). Grease the bracket casting (item 2).
8. During field operation, grease the coulter blade hubs daily with one shot of good quality grease. Do not over grease so that grease is forced past the seal. This will roll-over the sealing lip, damage the seal and allow contaminants to enter the hub and damage the bearing.

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
47309189		BLADE AND ARM ASSEMBLY INCLUDES ITEMS 1 TO 27	1	22	18560722	COTTER PIN, 5/32 X 1	1
47309415		ARM ASSEMBLY	1	23	47305027	COULTER BLADE, 20" RIPPLED	1
2	47305037	BRACKET, DUCTILE CASTING	1	24	47305227	DUST CAP, (BOLT ON)	1
3	18901805	GREASE ZERK, STRAIGHT	1	25	18177131	CARRIAGE BOLT, 1/2-13NC. X 1 1/2	4
4	47301531	COULTER STOP CASTING	1	26	18891400	LOCKWASHER, 1/2	4
5	18767324	SET SCREW, SQ. HEAD, 1/2-13NC. X 1 1/4	1	27	18417400	HEX NUT, 1/2-13NC.	4
6	18407900	HEX. NUT, 5/8-11NC.	2	28	47301904	SHANK, 1 1/2 DIA. STRAIGHT	STD.
7	47301530	SPRING CAP	1	29	47304131	SHANK, 1 1/2 DIA. BENT	OPT.
8	47301524	COMPRESSION SPRING	1	30	18511032	ROLL PIN, 1/4 X 2 1/4	1
9	47301547	EYE BOLT, SPRING RETAINER	1	31	18561030	COTTER PIN, 1/4 X 2	1
10	18541428	CLEVIS PIN 1/2 X 1 3/4	1	31	47303811	FLAT BAR COULTER SHANK, 18"	OPT.
11	18841600	FLATWASHER, SAE, 1/2	1	47309811	FLAT BAR COULTER SHANK, 12"	OPT.	
12	18560722	COTTER PIN, 5/32 X 1	1			INCLUDES ROLL PIN SHOWN	
13	18302403	MACHINERY BUSHING, (NARROW) 1 1/4	2			MOUNTING BRACKETS NOT SHOWN	
14	18561026	COTTER PIN, 1/4 X 1 1/2	1	47309180	BRACKET, UNIVERSAL SIDE MOUNT		
15	47301999	BEARING BUSHING	1	47309182	BRACKET, TOP MOUNT		
16	47302400	HUB WITH CUPS & GREASE ZERK INCL. ITEMS 17 AND 18	1	47309184	BRACKET, STD. UNIVERSAL MOUNT		
17	47005010	BEARING CUP	2	47999370	BRACKET, UNIVERSAL MOUNT for 1 X 2 KNIFE SHANK AND FLAT BAR COULTER SHANK		
18	18901805	GREASE ZERK, STRAIGHT	1	47309185	BRACKET, CENTER FRONT MOUNT		
19	47305035	BEARING CONE, 1 1/4 I.D.	2	47309186	BRACKET, TITAN EXTENSION MOUNT		
20	18801600	FLATWASHER, 5/8	2	47309187	BRACKET, TITAN PULL		
21	18488000	SLOTTED NUT, 5/8-18NF.	1	47309179	BRACKET, DMI, CENTER MOUNT		

20

## AG38 COULTER ASSEMBLY

### MOUNTING INSTRUCTIONS AND PARTS LIST

1. Your AG38 coulter blade and main bracket are pre-assembled at the factory, and the trip springs are pre-loaded to provide 525 pounds blade pressure. This should be adequate for normal field conditions. The coulter arm should trip up only when hitting a solid obstruction. During your field operation, check to make sure the coulter arm is staying rigid most of the time. Excessive flexing will cause premature spring failure. If repeated tripping is occurring tighten the spring tension till rigid operation is achieved
2. Assemble the swivel bar (item 22) to the main bracket (item 1). Make sure that the  $1 \times 3$  flat bar is positioned between the half moon stops on top of the main bracket. Install the roll pin (item 23).
3. Position the mounting brackets (item 30) at the desired spacing and fasten with the U-bolts (item 27) and hardware (items 25 and 26). Assemble the hardware snug only.
4. Install the coulter assemblies to the mounting brackets (item 30) and fasten with the bolts (item 24) and hardware (items 28 and item 29).
5. Adjust the coulter blades to the desired depth and tighten hardware (item 24, item 25 and item 26) securely.
6. Make sure all hardware is tightened securely.
7. During field operation, grease the coulter blade hubs daily with one shot of good quality grease. Do not over grease so that grease is forced past the seal lip. This will roll-over the sealing lip, damage the seal and allow contaminants to enter the hub and damage the bearing.

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
47308805	BLADE AND BRACKET ASSEMBLY			27	47006951	WHEN ORDERING, PLEASE SPECIFY SIZE OF TUBE	1
	INCLUDES ITEMS 1 TO 21				U-BOLT, 5/8-11NC.	(4 X 6 BAR) STD.	
1	47308729	MAIN BRACKET	1		U-BOLT, 5/8-11NC.	(2 X 1/2" BAR)	OPT.
2	18901805	GREASE ZERK, STRAIGHT	2		U-BOLT, 5/8-11NC.	(3" BAR)	OPT.
3	18407900	HEX. NUT, 5/8-11NC.	2		U-BOLT, 5/8-11NC.	(4 X 4 BAR)	OPT.
4	47301530	SPRING CAP	2		U-BOLT, 5/8-11NC.	(6" BAR)	OPT.
5	47301524	COMPRESSION SPRING	2		U-BOLT, 1/2-13NC.	(7" BAR)	OPT.
6	47301547	EYE BOLT, SPRING RETAINER	2	28	18891600	LOCKWASHER, 5/8	2
7	18541428	CLEVIS PIN, 1/2 X 1 3/4	2		WITH OPT. 5/8" U-BOLT	(4) REQ'D.	
8	18560722	COTTER PIN, 5/32 X 1	2		LOCKWASHER, 1/2	WITH OPT. 1/2" U-BOLT	(4) REQ'D.
9	47301999	BEARING BUSHING	1		HEX. NUT, 5/8-11NC.	WITH OPT. 5/8" U-BOLT	2
10	47302400	HUB WITH CUPS & GREASE ZERK	1	29	18417900	WITH OPT. 5/8" U-BOLT	4
	INCLUDES ITEMS 11 AND 12				HEX. NUT, 1/2-13NC.	WITH OPT. U-BOLT	1
11	47005010	BEARING CUP	2		LOCKWASHER, 4"	MOUNTING BRACKET, 4" BAR (OFFSET)	OPT.
12	18901805	GREASE ZERK, STRAIGHT	1	30	18417400	MOUNTING BRACKET, 2 1/2" BAR	
13	47305035	BEARING CONE, 1 1/4 I.D.	2			(JOHN DEERE)	
14	18801600	FLATWASHER, 5/8	2	31	47999370	BRACKET, UNIV. MT FOR 1 X 2 COMP.	
15	18488000	SLOTTED NUT, 5/8-18NF.	1		LOCKWASHER, 3"	MOUNTING BRACKET, 3" BAR	OPT.
16	18560722	COTTER PIN, 5/32 X 1	1		LOCKWASHER, EXTENDED	OPTION FOR 6 X 4 OR 4 X 4 BAR	OPT.
17	47305027	COULTER BLADE, 20" RIPPLED	1		LOCKWASHER, 6"	MOUNTING BRACKET, 6" BAR	OPT.
18	47305227	DUST CAP, (BOLT ON)	1		LOCKWASHER, 7"	MOUNTING BRACKET, 7" BAR	OPT.
19	18177131	CARRIAGE BOLT, 1/2-13NC. X 1 1/2	4		LOCKWASHER, 1/2	UNIV. MT FOR 1 X 2 COMP.	
20	18891400	LOCKWASHER, 1/2	4		LOCKWASHER, 1/2	OPTION FOR 6 X 4 OR 4 X 4 BAR	
21	18417400	HEX NUT, 1/2-13NC.	4		LOCKWASHER, 1/2	BRACKET, UNIV. MT FOR 1 X 2 COMP.	OPT.
22	47303811	COULTER SWIVEL BAR, 18"	1		LOCKWASHER, 1/2	OPTION FOR 6 X 4 OR 4 X 4 BAR	
23	47309811	COULTER SWIVEL BAR, 12"	1		LOCKWASHER, 1/2	ITEMS SHOWN EXCEPT ITEMS 32, 33 & 34	
24	18511032	ROLL PIN, 1/4 X 2 1/4	1	32	18058436	BOLT, 3/4-10NC. X 3	1
25	18057434	BOLT, 1/2-13NC. X 2 1/2	2	33	18891800	LOCKWASHER, 3/4	1
26	18891400	LOCKWASHER, 1/2	2	34	18418400	HEX. NUT, 3/4-10NC.	1

W4

WHEN USING THIS BRACKET DELETE ITEMS 24 TO 30.

PROCEDURE TO SERVICE A COULTER HUB  
(WITH BOLT-ON DUST CAP)

The factory procedure to assemble the coulter hub has been developed to obtain maximum life and eliminate damage to components. IT IS IMPORTANT to understand and follow this procedure when servicing the coulter hub. If possible, obtain an illustration of the coulter before proceeding.


**ASSEMBLE THE COULTER HUB AS FOLLOWS:**

Refer to the illustration for the AG37 coulter. (AG36 and AG38 are similar).

1. Assemble the steel pr-seal (item 9) on the spindle so that the flat surface is next to the arm and the machined shoulder is facing the inner bearing cone. This performs as a dust and dirt pre-seal.
2. CAUTION: Do not put the bearing cone on the spindle at this time.
3. Pack the inner bearing cone with grease and install it into the hub. You will note that the bearing has the grease seal molded to the outer edge. The seal has two sealing surfaces. The inner surface (nearest the rollers) is the grease seal. The outer surface is the dust seal. Hold the bearing as square as possible to the hub and with hand pressure only, push the bearing into the hub until the inner seal is seated squarely against the bearing cup and the outer seal is approximately 3/16 inch inside the casting.
4. Hold the bearing in place and install the hub on the spindle. Note: It is not recommended that you put the bearing on the spindle and then push the hub over the bearing. There is a possibility that you might roll-over the inner seal and damage the seal.
5. Pack the hub and outer bearing cone with grease. With the hub firmly in place on the spindle install the outer bearing cone into the hub. Push the bearing into the hub until the inner seal is seated squarely against the bearing cup inside the hub. Refer to step 3.
6. Install the two flat washers (item 14) and the spindle nut (item 15) and while rotating the hub by hand, tighten the nut until the hub locks up. Then back off the nut until the hub rotates freely. Check to make sure the seals do not rotate on the spindle. The hub rotates around the seal. Then install the cotter pin (item 16).
7. Pack the dust cap with grease and assemble the blade and the dust cap to the hub.
8. With a grease gun, fill up the hub with grease. PROPER GREASING is as important as Proper seal installation. Over greasing could "roll-over" the inner seal and allow dirt and moisture to enter the bearing. Watch the outer lip of the seal. Grease the hub until you notice some lifting of the sealing lip. Rotate the hub. This will re-distribute the grease and you may be able to add some grease. DO NOT over grease so that the grease is forced out past the grease seal. If this happens, disassemble and make sure the seal lips are in the proper position, not rolled-over. Reassemble and readjust.
9. During field operation, adding one shot of grease per day should be adequate. Check the coulter blades periodically for wobble. This could be the result of hitting rocks and/or normal wear. Readjust the bearing tension (refer to step 6) Wobble in the hub could damage the seal and cause bearing failure.

35 A

**AG36 COULTER ASSEMBLY**  
 (GENERATION II)  
 MAINTENANCE-FREE HUB  
 FROM 2001 TO PRESENT

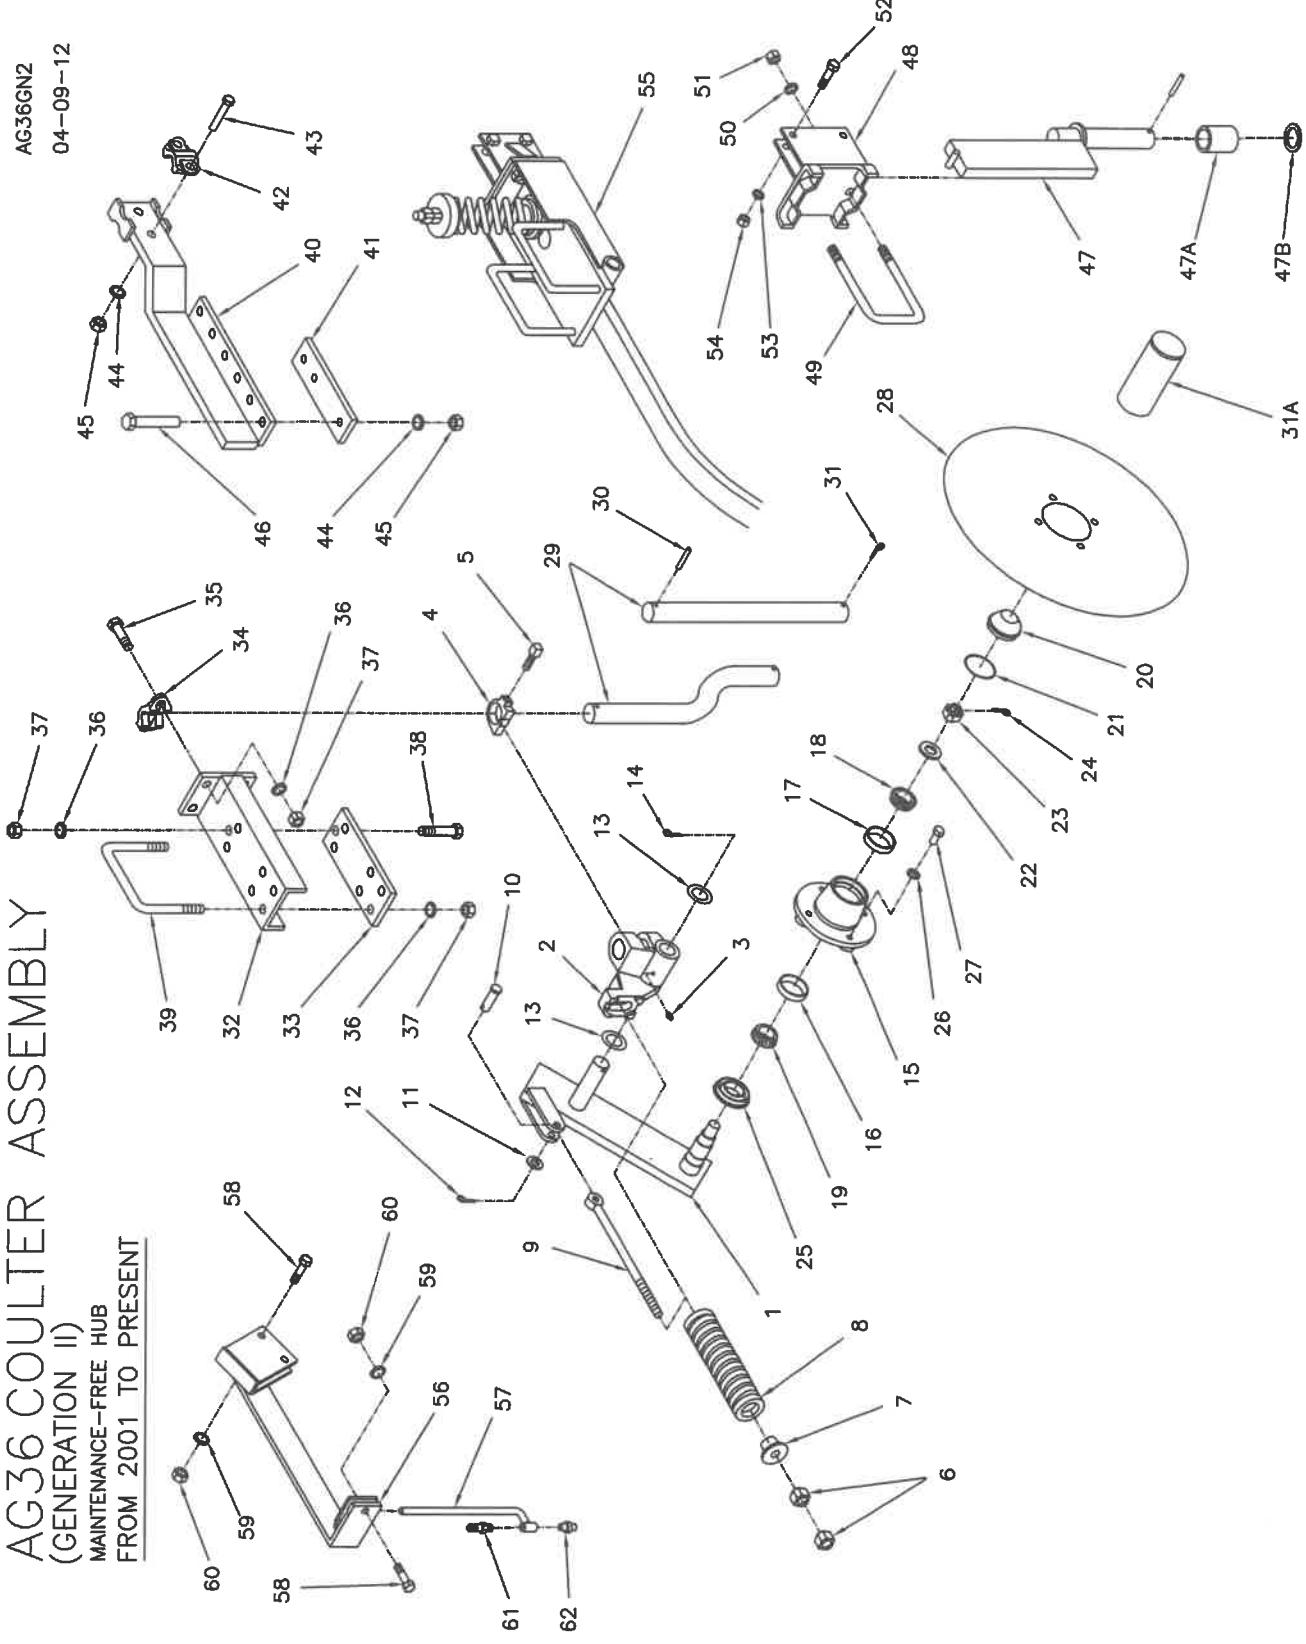

**AG36 COULTER ASSEMBLY (GENERATION II)**  
**MAINTENANCE-FREE HUB**  
**MOUNTING INSTRUCTIONS AND PARTS LIST**

AG36GN2LS  
 01/28/22

1. Your AG36 main bracket and hub are pre-assembled at the factory, and the trip spring is pre-loaded to provide 250 pounds blade pressure. This should be adequate for normal field conditions. The coulter arm should trip up only when hitting a solid obstruction. During your field operation check to make sure the coulter arm is staying rigid most of the time. Excessive flexing will cause premature spring failure. If repeated tripping is occurring, tighten the spring tension until rigid operation is achieved.
2. Assemble the blade (Item 28) to the hub.
3. Round Type Coulter mount. Insert the shank (Item 29) into the castings (item 2) and (item 4) simultaneously and insert cotter pin (item 31) Positions the shank so not rub on the casting and securely tighten the set screw.
4. Position the coulter mounting brackets at the desired spacing and fasten securely. NOTE: There are a number of types and styles of brackets shown.
5. Assemble the coulter shank to the mounting bracket. Adjust the blade to the desired depth and tighten the hardware. Make sure all hardware is securely tightened.
6. Install the upper roll pin on round shank types (item 30) Grease the bracket casting (item 2). During field operation grease this casting weekly. And grease for end-of-season storage.
7. The coulter hub is greased-for-life and should need no regular maintenance. Check for damage to the dust cap and grease seal daily.


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY	
47309189	BLADE AND ARM ASSEMBLY	STANDARD UNIVERSAL MOUNT COMPLETE	1	47309184	FOR SQUARE KNIFE SHANK AND ROUND COULTER BAR	1	47309182	OTHER BRACKETS COMPLETE (FOR RND. COULTER BAR)	1	47309185	NOT SHOWN	1
47109189	ARM AND HUB ASSEMBLY (W/O BLADE)	INCLUDES ITEMS 1 TO 28	1	47309184	ON 4 X 6 TOOLBAR FOR 1 1/4" SHANK	1	47309185	BRACKET, TOP MOUNT	1			
1	47309567	ARM ASSEMBLY	INCLUDES ITEMS 1 TO 27	1	47309184	ON 4 X 6 TOOLBAR FOR 1 1/4" SHANK	1	47309182	BRACKET, CENTER FRONT MOUNT	1		
2	47305037	BRACKET, DUCTILE CASTING	1	47309406	ON 4 X 4 TOOLBAR WITH 1 1/4" SHANK	1	47308311	FLAT BAR COULTER SHANK, 18"	1			
3	18901805	GEAR, ZERK, STRAIGHT	1	47309406	ALL ITEMS IDENTICAL EXCEPT ITEM 39	1	47308311	FLAT BAR COULTER SHANK, 12"	1			
4	47301531	COULTER STOP CASTING	1	47309406	SHANK HOLDER, 1 1/4" SQUARE SHANK	1	47305287	INCLUDES ROLL PIN SHOWN	1			
5	18767324	SET SCREW, SQ. HEAD, 1/2-13NC. X 1 1/4	1	47306005	CLAMP PLATE, 1 1/4" SQUARE SHANK	1	47B	CASTING SPACER BUSHING	1			
6	18407900	HEX. NUT, 5/8-11NC.	2	47301538	CLAMP, COULTER SHANK	2	18503523	RETAINING WASHER 1 1/2" ID	1			
7	47301520	SPRING CAP	1	35	18691600	BOLT, 5/8-11NC. X 3 1/2	4					
8	47301524	COMPRESSION SPRING	1	36	18691600	LOCKWASHER, 5/8"	9					
9	47301547	EYE BOLT, SPRING RETAINER	1	37	18417900	HEX. NUT, 5/8-11NC.	9					
10	18541428	CLEVIS PIN 1/2" X 1 3/4	1	38	18657938	BOLT, 5/8-11NC. X 3	9					
11	18841600	FLATWASHER, SAE, 1/2"	1	39	47006950	U-BOLT, 5/8-11NC. (4 X 6 BAR)	2					
12	18560722	COTTER PIN, 5/32" X 1	1	39	47006951	U-BOLT, 5/8-11NC. (4 X 4 BAR)	2					
13	18302403	MACHINERY BUSHING, (NARROW) 1 1/4	2									
14	18651026	COTTER PIN, 1/4" X 1 1/2"	1									
	47300350	HUB COMPLETE, (W/O SEAL & BOLTS)	1									
15	47303511	HUB WITH CUPS, ITEMS 16 & 17	1	47309177	STANDARD UNIVERSAL MOUNT COMPLETE	1	48	MOUNTING BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1			
16	47005510	BEARING CUP, INNER	1	47308177	STANDARD UNIVERSAL MOUNT COMPLETE	1	49	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1			
17	47005010	BEARING CUP, OUTER	1	47308177	INCLUDES ITEMS 32 TO 39	1	49	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1			
18	47005048	BEARING CONE, OUTER	1	47302890	STANDARD UNIVERSAL MOUNT COMPLETE	1	49	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1			
19	47005548	BEARING CONE, INNER	1	47306832	STANDARD UNIVERSAL MOUNT COMPLETE	1	49	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1			
20	47005513	DUST CAP	1	33	47301538	SHANK HOLDER, (1 X 2 KNIFE SHANK)	1	50	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1		
21	47300351	O-RING DUST SEAL	1	34	47301538	CLAMP PLATE, (1 X 2 KNIFE SHANK)	1	51	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1		
22	47300352	SPINDE WASHER	1	35	18657940	BOLT, 5/8-11NC. X 3	2	52	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1		
23	47300353	SLOTTED NUT, 7/8-14UNF	1	36	18657940	LOCKWASHER, 5/8-11NC. X 3	2	53	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1		
24	18560724	COTTER PIN, 5/32 X 1 1/4	1	37	18417900	HEX. NUT, 5/8-11NC.	9	54	ITEMS 48 TO 54 INCLUDES ITEMS 32 TO 39	1		
25	40030326	GREASE SEAL	1	38	18657938	BOLT, 5/8-11NC. X 3	9					
26	18691400	LOCKWASHER, 1/2"	4	39	47006951	U-BOLT, 5/8-11NC. (4 X 4 BAR)	2					
27	18057522	WHEEL BOLT, 1/2"-20NF. X 1	4									
28	47305027	COULTER BLADE, 20° RIPPLED	1									
29	47301904	SHANK, 1 1/2" DIA. STRAIGHT STD. 1	1									
	47304131	SHANK, 1 1/2" DIA. BENT (" OFFSET) OPT.	1	40	47309239	MOUNTING BRACKET, L.H. SHOWN	1	55	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		
	47304248	SHANK, 1 1/2" DIA. BENT (" OFFSET) OPT.	1	39	47006951	MOUNTING BRACKET, R.H. OR R.H. MNTG. BRKT. DESIRED	1	56	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		
30	18611032	ROLL PIN, 1/4" X 2 1/4	4	41	47301576	CLAMP PLATE	1	57	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		
31	18561030	COTTER PIN, 1/4" X 2	1	42	47301538	DUCTILE CLAMP, COULTER BAR	1	58	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		
31A	47005500	DUSTCAP INSTALLATION TOOL (OPTIONAL)	1	43	18657940	BOLT, 5/8-11NC. X 3 1/2	2	59	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		
				44	18691600	LOCKWASHER, 5/8"	4	60	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		
				45	18417900	HEX. NUT, 5/8-11NC.	4	61	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		
				46	18057982	BOLT, 5/8-11NC. X 6	2	62	ITEMS 52, 53, & 54 (3) RECD. WITH 6 X 6 TUBE OTHER BRACKETS COMPLETE (FOR 1 X 3 COULTER BAR)	1		

REF 47300300 SPINDLE ONLY

# AG38 COULTER ASSEMBLY

GENERATION II  
WITH MAINTENANCE-FREE HUB  
FROM 2001 TO PRESENT

AG38GN2  
REV 10-22-09

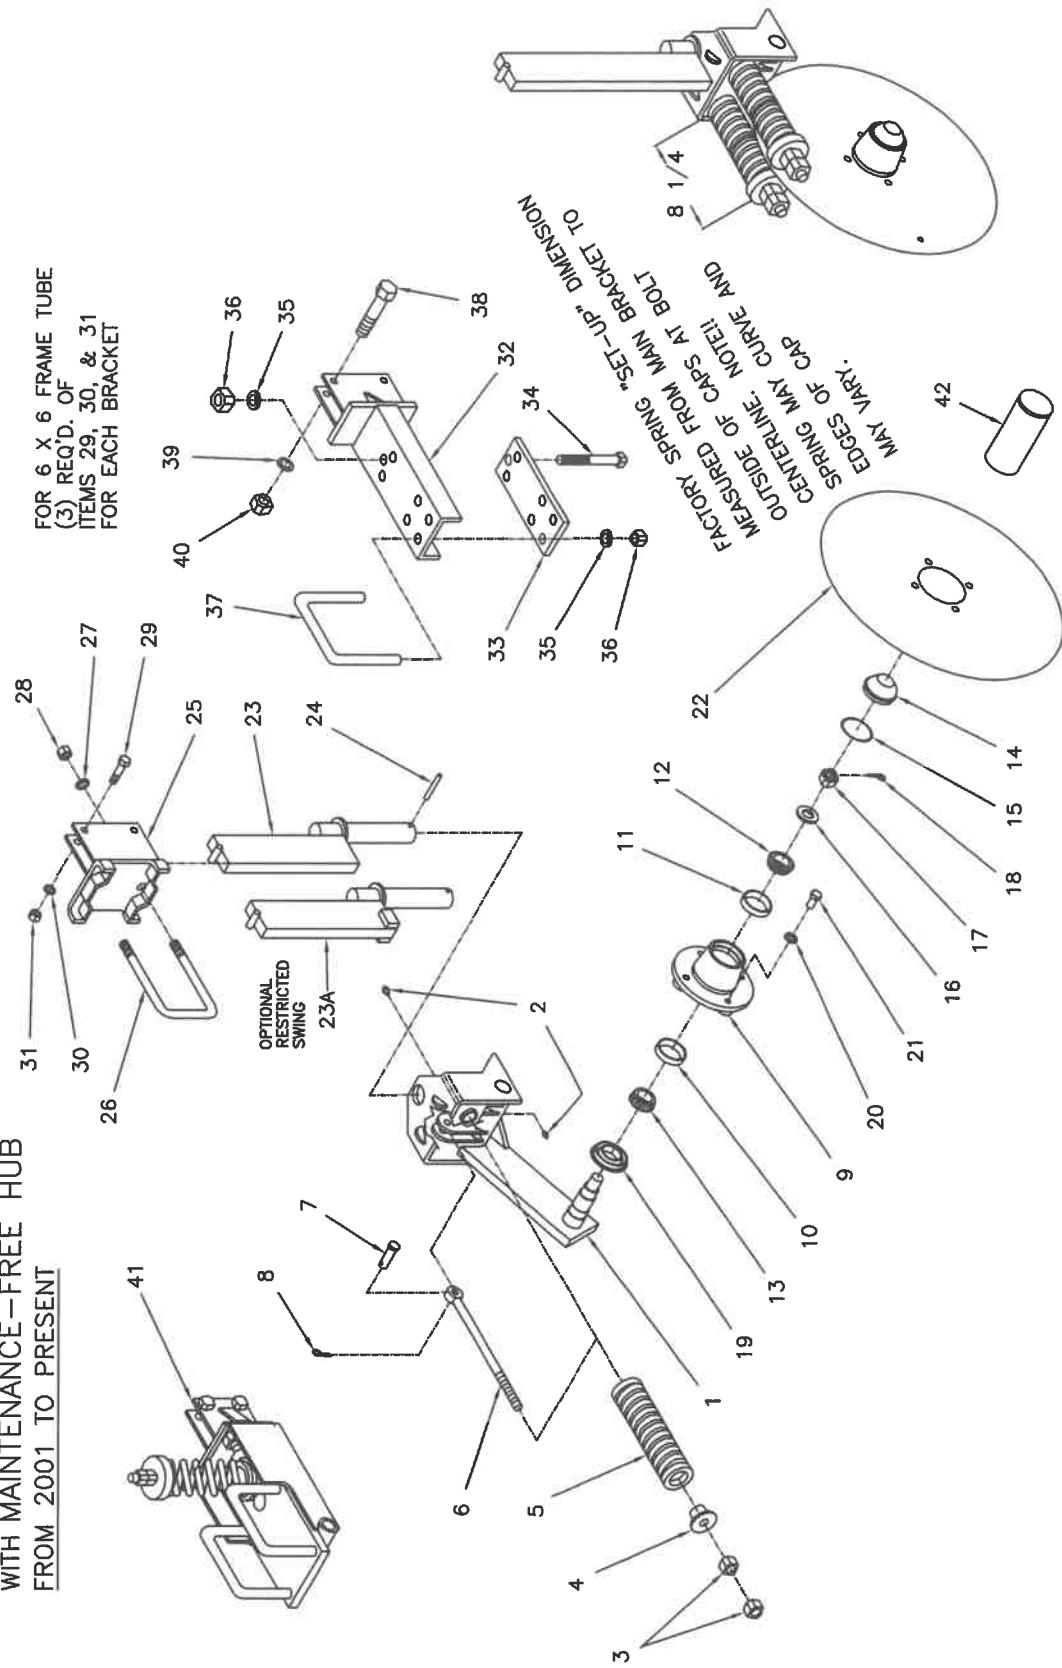

**AG38 COULTER ASSEMBLY (GENERATION II)**  
**with MAINTENANCE-FREE HUB**  
**MOUNTING INSTRUCTIONS AND PARTS LIST**

AG38GN2LS  
 REV.01/28/22


1. Your AG38 main bracket and hub are pre-assembled at the factory, and the trip springs are pre-loaded to provide 525 pounds blade pressure. This should be adequate for normal field conditions. The coulter arm should trip up only when hitting a solid obstruction. During your field operation check to make sure the coulter arm is staying rigid most of the time. Excessive flexing will cause premature spring failure. If repeated tripping is occurring tighten the spring tension till rigid operation is achieved.

2. Assemble the blade (item 22) to the hub.
3. Assemble the swivel bar (item 23) to the main bracket (item 1). Make sure that the 1 x 3 flat bar is positioned between the half moon stops on top of the main bracket. Install the roll pin (item 24).
4. Position the mounting brackets (item 25) at the desired spacing and fasten with the u-bolts (item 26) and hardware (item 27 and item 28).
5. Install the coulter assemblies to the mounting brackets (item 25) and fasten with the bolts (item 29) and hardware (item 30 and item 31). Assemble the hardware snug only.
6. Adjust the coulter blade to the desired depth and tighten the hardware securely.
7. Make sure "all" hardware is tightened securely.
8. During field operation grease the swivel bar journals weekly. And grease for end-of-season storage. The coulter hub is greased-for-life and should need no regular maintenance. Check for damage to the dust cap and grease seal daily.

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
47308805		MAIN BRAKT. & BLADE ASSEMBLY INCLUDES ITEMS 1 TO 22	1	470051471	18" BAR 10' LH RESTRICTED SWING		31	184117400	HEX. NUT, 1/2-13NC.		
47105572		MAIN BRAKT. W/HUB ASSEMBLY INCLUDES ITEMS 1 TO 21 (W/O BLADE)	1	47005147R	18" BAR 10' RH RESTRICTED SWING			47993570	UNIV MT BRKT FOR 1 X 2 COMP. OPTION		
1	47309572	MAIN BRACKET	1	47005149	18" BAR 15' RESTRICTED SWING (BOTH WAYS)			47994604	UNIV MT BRKT FOR 1 X 4 TOOLBARS. UNIV MT BRKT FOR 1 1/4 COMP. OPTION		
2	18901805	GREASE ZERK, STRAIGHT	2	47005149R	18" BAR 15' RH RESTRICTED SWING CALL AG SYSTEMS FOR INFO.				ON 4 X 6 OR 4 X 4 TOOLBARS.		
3	18401900	HEX. NUT, 5/8-11NC.	4	24	18511032 ROLL PIN, 1/4" X 2" 1/4"		1		ALL ITEMS IDENTICAL EXCEPT ITEM 37		
4	47301530	COMPRESSION SPRING CAP	2	25	47308983 MOUNTING BRACKET (4" VERTICAL)		1		INCLUDES ITEMS 32 TO 40		
5	47301524	EYE BOLT SPRING RETAINER	2	26	47006951 U-BOLT, 5/8-11INC. (4"V X 6" H BAR)		1		SHANK HOLDER, (1 X 2 KNIFE SHANK)	1	
6	47301547	CLEVIS PIN, 1/2" X 1 3/4	2	26	44001616 U-BOLT, 5/8-11INC. (4"V X 4" H BAR)		1		CLAMP PLATE	1	
7	18541428	COTTER PIN, 5/32" X 1"	2	26	47008887 OTHER MOUNTING BRACKET OPTIONS		1		BOLT, 5/8-11INC. X 3	1	
8	18560722	HUB COMPLETE (W/O SEAL & BOLTS)	1	25	47008887 MOUNTING BRACKET, (2 1/2" VERTICAL)		1		LOCKWASHER, 5/8	5	
	47300350	INCLUDES ITEMS 9 TO 15	1	26	47006659 U-BOLT, 5/8-11INC. (2 1/2"V X 2 1/2" H BAR)		1		HEX. NUT, 5/8-11INC.	5	
9	47303351	HUB WITH CUPS, ITEMS 10 & 11	1	25	47309732 MOUNTING BRACKET (3" VERTICAL) STD.		1		U-BOLT, 5/8-11INC. (6 X 4 TUBE)	2	
10	47005510	BEARING CUP, INNER	1	25	47309907 MOUNTING BRKT. (3" VERT. EXT.)		1		U-BOLT, 5/8-11INC. (6 X 6 TUBE)	OPT.	
11	47005010	BEARING CUP, OUTER	1	26	47306677 U-BOLT, 5/8-11INC. (3"V X 3" H BAR)		1		BOLT, 1/2-13NC. X 2 1/2	2	
12	47005048	BEARING CONE, OUTER	1	25	47308888 MOUNTING BRACKET, (6" VERTICAL)		1		LOCKWASHER, 1/2	2	
13	47005348	BEARING CONE, INNER	1	26	47010154 U-BOLT, 5/8-11INC. (6"V X 4" H BAR)		1		HEX. NUT, 1/2-13NC.	2	
14	47005513	DUST CAP	1	25	47009847 U-BOLT, 5/8-11INC. (6"V X 6" H BAR)		1		SEE SEPARATE ILLUSTRATION FOR SPRING BUNDLE PARTS		
15	47990351	O-RING DUST SEAL	1	25	47309736 MOUNTING BRACKET, (7" VERTICAL)		1		SPRING BUNDLE COMPLETE (1 SPRING) OPT.		
16	47300352	SPINDLE WASHER	1	26	4730730 U-BOLT, 1/2-13NC. (7" V X 7" H BAR)		1		SPRING BUNDLE COMPLETE (2 SPRINGS)		
17	47300353	SLOTTED NUT, 7/8-14UNF.	1	26	47009847 NOTE for 7" U-BOLT USE 1/2-13NC. HEX. NUTS		1		COULTER MOUNTING BRKT. COMPLETE		
18	18560724	COTTER PIN, 5/32" X 1 1/4	1	27	18891600 LOCKWASHER, 5/8		2				
19	40036326	GREASE SEAL	1	28	18417900 HEX. NUT, 5/8-11INC.		2				
20	18891400	LOCKWASHER, 1/2"	4	29	18054344 BOLT, 1/2-13NC. X 2 1/2		2				
21	18057522	WHEEL BOLT, 1/2-20NF. X 1	4	30	18891400 LOCKWASHER, 1/2		2				
22	4730927	COULTER BLADE, 20" RIPPLED	1								
23	47303811	COULTER SWIVEL BAR, 18" (INCL ITEM 24)	1								
	47308811	COULTER SWIVEL BAR, 12" (INCL ITEM 24) OPT	1								
	OPTIONAL	COULTER BAR W/RESTRICTED SWING	10 DEG. AND 15 DEG. AVAILABLE								
	47005147	18" BAR 10' RESTR. SWING (BOTH WAYS)									

REF 47300300 SPINDLE ONLY

**AG38 COULTER ASSEMBLY**  
 (GENERATION III)  
 MAINTENANCE-FREE HUB AND JOURNALS  
FROM 2003 TO PRESENT

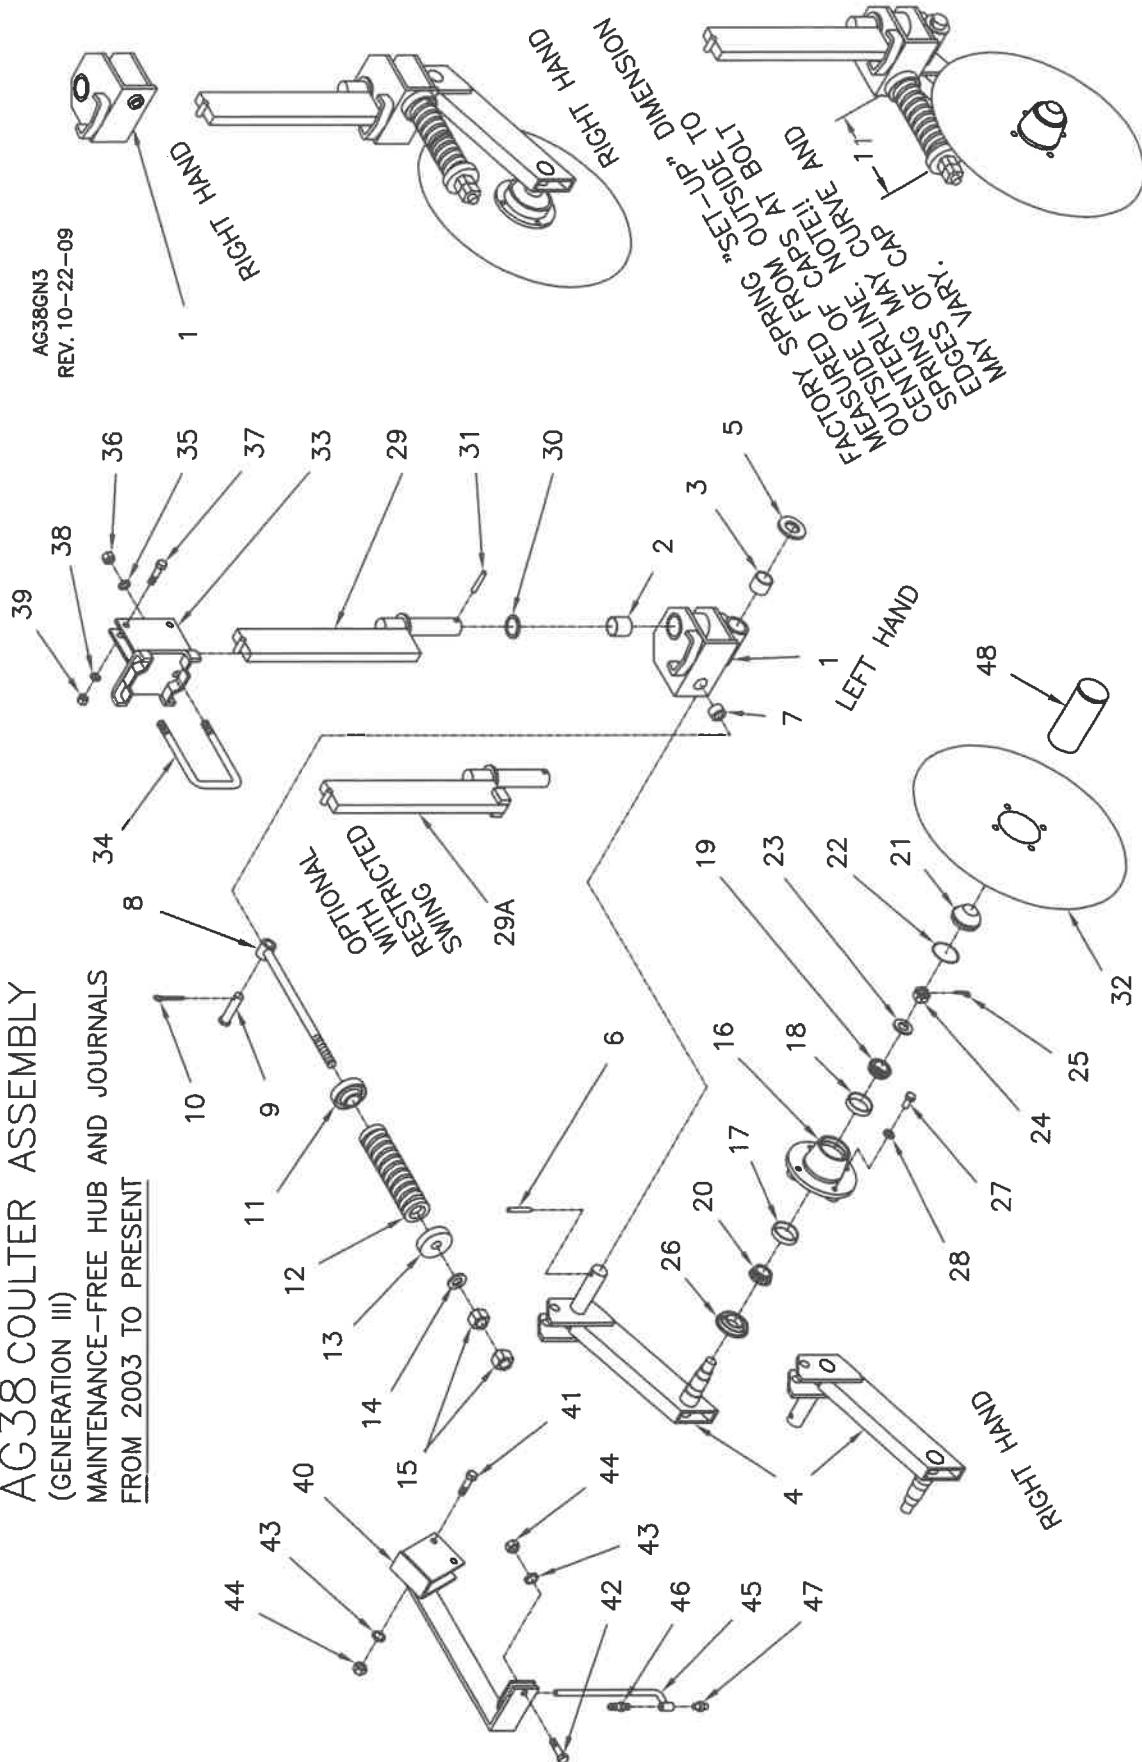

**AG38 COULTER ASSEMBLY (GENERATION III)**  
**with MAINTENANCE-FREE HUB**  
**MOUNTING INSTRUCTIONS AND PARTS LIST**

AG38GN3LS  
 REV. 01/28/22

1. Your AG38 main bracket and hub are pre-assembled at the factory, and the trip springs are pre-loaded to provide 600 pounds blade pressure. This should be adequate for normal field conditions. The coulter arms should trip up only when hitting a solid obstruction. During your field operation check to make sure the coulter arm is staying rigid most of the time. Excessive flexing will cause premature spring failure. If repeated tripping is occurring tighten the spring tension till rigid operation is achieved.
2. Assemble the blade (item 32) to the hub.
3. Assemble the swivel bar (item 29) to the main bracket (item 1). Make sure that the 1 x 3 flat bar is positioned between the u-bracket stop on top of the main bracket. Install the washer (item 30) and roll pin (item 31).
4. Position the mounting brackets (item 33) at the desired spacing and fasten with the u-bolts (item 34)
5. Install the coulter assemblies to the mounting brackets (item 33) and fasten with the bolts (item 37) and hardware (item 38 and item 39). Assemble to the hardware snug only.
6. Adjust the coulter blade to the desired depth and tighten the hardware securely.
7. Make sure "all" hardware is tightened securely.
8. No field operation lubrication is required. The hubs are sealed and greased for life. The swivel journals are assembled with grease-less bushings. For repair procedure, see separate sheet titled PROCEDURE TO SERVICE A COULTER HUB.

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
40350001		MAIN BRKT. & BLADE, L.H. (STANDARD)	1	21	47005613	DUST CAP	1	37	18057434	BOLT, 1/2-13NC, X 2 1/2	2
40351011		MAIN BRKT. & BLADE, R.H. (STANDARD)	1	22	47980351	O-RING DUST SEAL	1	38	18891400	LOCKWASHER, 1/2	2
		INCLUDES ITEMS 1 TO 32	OPT	23	47303532	SPINDLE WASHER	1	39	18471400	HEX. NUT, 1/2-13NC	2
47304508		MAIN BRKT. W/HUB, L.H. (STANDARD)	1	24	47303533	SLOTTED NUT, 7/8-14UNF	1	39	18471400	LOCK NUT, 1/2-13NC	2
47314508		MAIN BRKT. W/HUB, R.H. (STANDARD)	1	25	18560726	COTTER PIN, 5/32 X 1 1/2	1	39	(3)	REF. WITH (6" BAR, VERT.)	1
		INCLUDES ITEMS 1 TO 31 (W/O BLADE)	OPT	26	4030326	GREASE SEAL	1	39	37	ITEMS 37, 38, &	1
1	47004500	HOUSING W/BUSHINGS, L.H. (STD.)	1	27	18057522	WHEEL BOLT, 1/2-20NF. X 1	4	47995062	HI-PRESSURE NOZZLE BRKT. COMPLETE	1	
		HOUSING W/BUSHINGS, R.H. (STD.)	1	28	18891400	LOCK WASHER, 1/2	4	40	47015062	INCLUDES ITEMS 40 TO 45	1
2	47009953	SWIVEL BUSHING, 1 1/2" ID	2	29	47304522	COULTER SWIVEL BAR, 18"	1	41	18057434	BOLT, 1/2-13NC, X 2 1/2	2
3	47009954	PIVOT BUSHING, 1 3/8" ID.	2	29A	OPTIONAL	COULTER BARS W/RESTRICTED SWING	1	42	18057430	BOLT, 1/2-13NC, X 2	2
4	47004508	PIVOT ARM, L.H. (STANDARD)	1		47005144	18" BAR 10 RESTR. SWING BOTH WAYS	1	43	18891400	LOCK WASHER, 1/2	3
47014508		PIVOT ARM, R.H. (STANDARD)	1		47005144L	18" BAR 10 RESTR. SWING LH ONLY	1	44	18471400	HEX. NUT, 1/2-13NC	3
5	18300326	RETAINING WASHER, 1 3/8" I.D.	1		47005144R	18" BAR 10 RESTR. SWING RH ONLY	1	45	47008501	NOZZLE BAR	1
6	18511035	EXPANSION PIN, 3/8" X 2	1		47005145	18" BAR 15 RESTR. SWING BOTH WAYS	1	46	100859	HOSEBARB, 1/4P X 1/2T	1
7	2-6668	EYE BOLT GUIDE	1		47005145L	18" BAR 15 RESTR. SWING LH ONLY	1	47	504017	NOZZLE BODY ASSEMBLY,	1
8	47004518	EYE BOLT, SPRING RETAINER	1		47005145R	18" BAR 15 RESTR. SWING RH ONLY	1			(ORIFICE DISK VARIES) SEE AG 37 ILLUSTRATION	1
9	185411835	CLEVIS PIN, 3/4" X 2 1/2	1			CALL AG SYSTEMS FOR INFO.	1	48	47005500	DUST CAP INSTALLATION TOOL (OPTIONAL)	1
10	18560726	COTTER PIN, 5/32 X 1 1/2	1	30	18511036	EXPANSION PIN, 1 1/2 I.D.	1				
11	47004521	SPRING CAP, WITH COUNTER-BORE	1	31	18511032	RETAINING WASHER, 1 3/8 X 2 1/4	1				
12	47007565	COMPRESSION SPRING	1	32	47305027	COULTER BLADE, 20° RIPPLED	1				
13	47007085	SPRING CAP, STANDARD CASTING	1	33	47309893	COULTER BRACKET, (4" VERTICAL) STD.	1				
14	18851800	FLAT WASHER, 3/4"	1	34	47006951	U-BOLT, 5/8-11NC. (4" V X 6" HORIZ BAR)	1				
15	18446890	HEX. NUT, 3/4-10NC.	2		44001616	U-BOLT, 5/8-11NC. (4" V X 4" HORIZ BAR)	1				
47300350		HUB COMPLETE (W/O SEAL & BOLTS)	1		47309888	COULDING BRACKET, (6" VERTICAL)	1				
		INCLUDES ITEMS 16 TO 22			4710154	U-BOLT, 5/8-11NC. (6" V X 4" HORIZ BAR)	1				
16	47300351	HUB WITH CUPS, ITEMS 17 & 18	1		4700847	U-BOLT, 5/8-11NC. (6" V X 6" HORIZ BAR)	2				
17	47005510	BEARING CUP, INNER	1		35	18891600	LOCKWASHER, 5/8	2			
18	47005010	BEARING CUP, OUTER	1		36	18471900	HEX. NUT, 5/8-11NC.	1			
19	47005048	BEARING CONE, OUTER	1								
20	47005548	BEARING CONE, INNER	1								

REF 47300300 SPINDLE ONLY

## **PROCEDURE TO SERVICE A COULTER HUB “MAINTENANCE-FREE” HUB**

The factory procedure to assemble the coulter hub has been developed to obtain maximum life and to eliminate damage to the components. IT IS IMPORTANT to understand and follow this procedure when servicing the coulter hub. If possible, obtain an illustration of the coulter before proceeding.

### **ASSEMBLE THE COULTER HUB AS FOLLOWS.**


- 1: Pre-pack the inner bearing cone with grease and insert it into the back of the hub.
- 2: Add grease to cover the back of the bearing and cup. CAUTION – CAUTION : Do not “fill” the back of the hub with grease. Do not get any grease on the sealing seat for the grease seal. The seal is treated with a sealing agent and grease or oil on the sealing surface will destroy the effectiveness of the seal. If there is any grease on the sealing surface in the hub wipe it with a degreasing agent.
- 3: Carefully insert the grease seal. Do not get any grease on the outer sealing surface of the seal. Tap or press the seal in place. Make sure the seal is entering and seating squarely.
- 4: Turn the hub over and fill the center cavity with grease. Pre-pack the outer bearing with grease and insert it into the hub.
- 5: Position the hub on the spindle and install the spindle washer and the slotted nut.
- 6: Rotate the hub by hand while tightening the slotted nut until the hub locks-up. This will align and seat the bearing rollers. Back off the nut until you can freely rotate the hub by hand and install the cotter pin. Bend the ends of the cotter pin “down” only. Not one half up and one half down.
- 7: Completely fill the front cavity of the hub with grease.
- 8: Inspect the hub to make sure it is properly assembled and then install the dust cap.  
CAUTION: Once the dust cap is installed it cannot be removed without destroying it. Take care to be sure the dust cap is square to the bore when starting and seating it. An old dust cap or a piece of tubing with the right I. D. and O. D. may be helpful.
- 9: You may now assemble the coulter blade. During field operation check the coulter blade periodically for wobble. This could be a result of hitting rocks and/or normal wear. Re-adjust the bearing tension (see step 6). Wobble in the hub could damage the seal and cause bearing failure. Note that you will need to install a new dust cap after a bearing adjustment. REVIEW step 8.

SRVCLTRHUB

SINGLE  
DISC COVER SEALER


SPRING LOADED  
ASSEMBLY P.N. 40032001  
1996 TO 1999

ITEM	PART NO.	DESCRIPTION	QTY.
1	47008367	Mounting bracket	1
2	47008396	U-Bolt, 1/2-13NC.	2
3	47008397	U-Bolt, 1/2-13NC.	1
4	18811400	Flatwasher, 1/2	4
5	18891400	Lockwasher, 1/2	4
6	18417400	Hex. Nut, 1/2-13NC.	4
7	18057456	Bolt, 1/2-13NC. X 5	1
8	18457650	Hex. Locknut, 1/2-13NC	1
9	18057430	Bolt, 1/2-13NC. X 2	2
10	18811400	Flatwasher, 1/2	3
11	18891400	Lockwasher, 1/2	2
12	18417400	Hex. Nut, 1/2-13NC	2
13	47008370	A-frame bracket	1
14	47008374	Inner bushing	1
15	47008375	Torsion spring, L.H.	1
16	47008376	Torsion spring, R.H.	1
17	47003182	Disc arm, single disc	1
18			
19	18126422	Carriage bolt, 5/16-18NC. X 1	4
20	18881100	Lockwasher, 5/16	4
21	18446400	Hex. Nut, 5/16-18NC	4
22	44501090	Disc blade	1
23	44502547	Gasket, hub	1
24	18048442	Bolt, 3/4-10NC. X 3	1
25	18458400	lock nut, 3/4-10NC	1
26	44501164	grease seal	1
27	44501949	bearing cone	2
28	44501910	bearing race (cup)	2
29	44500175	snap ring	1
30	18901805	grease zerk	1
31	44509107	hub complete, incl. items 26 to 31	1
	44509007	hub, incl. items 29,30 and 31	1

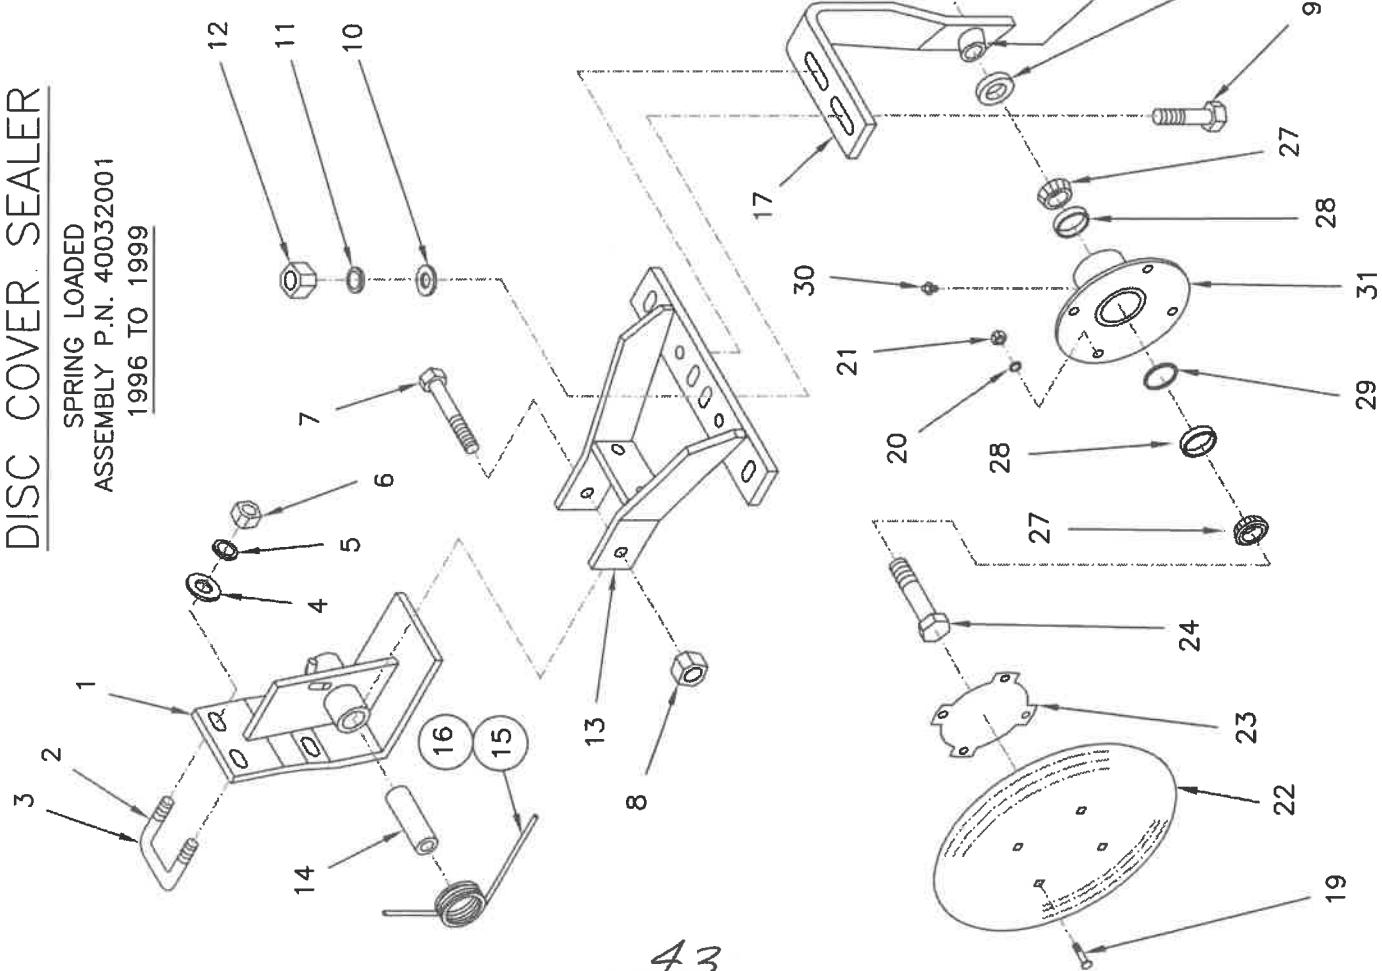

DOUBLE  
DISC COVER SEALER

SPRING LOADED  
ASSEMBLY P.N. 40032000  
1996 TO 1999

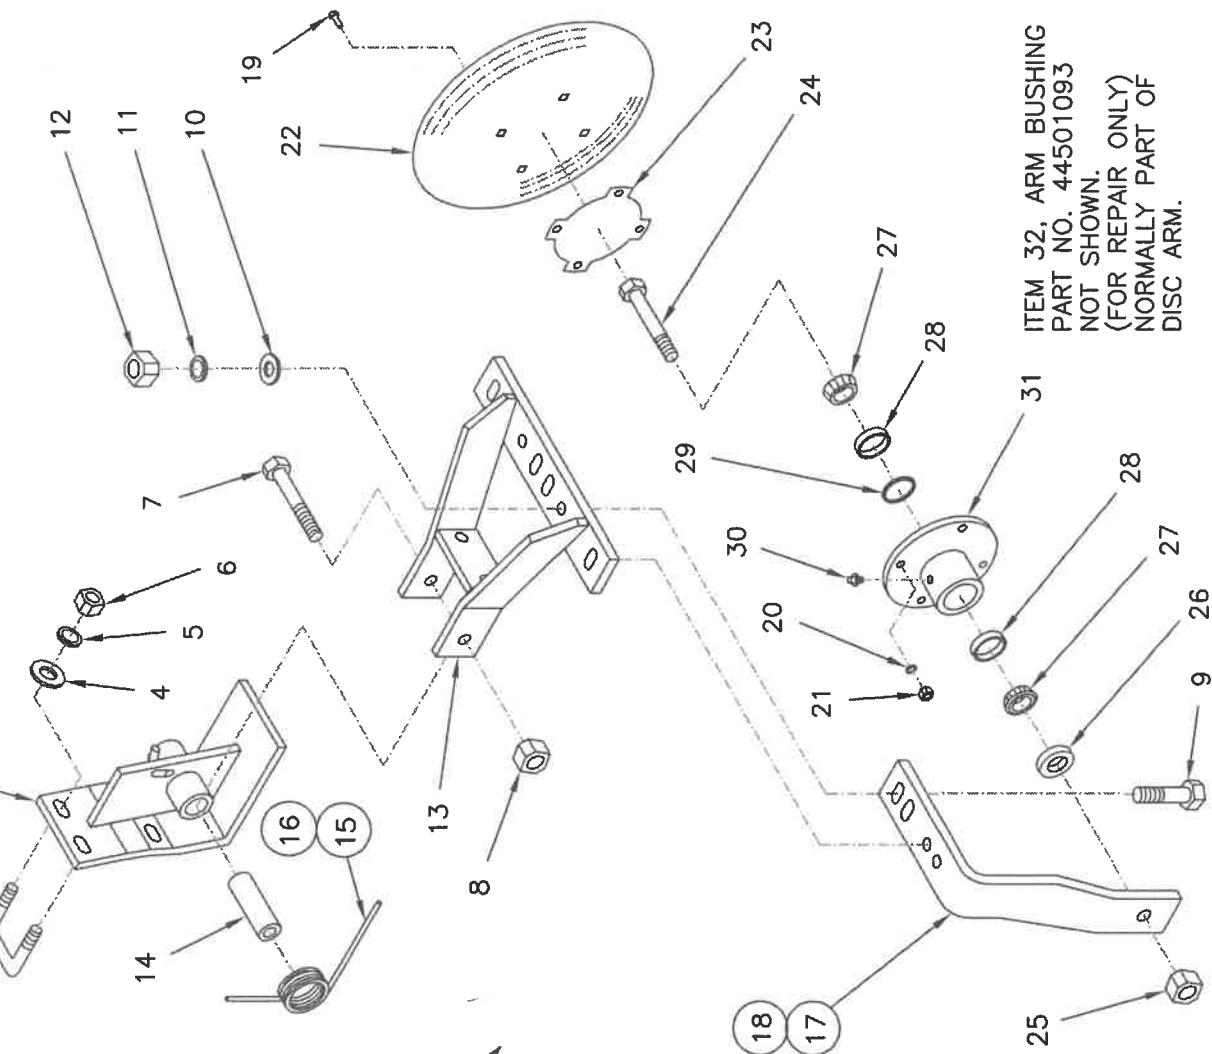



ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	47008367	MOUNTING BRACKET	1
2	47008396	U-BOLT, 1/2-13NC.	2
3	47008397	U-BOLT, 1/2-13NC.	1
4	18811400	FLATWASHER, 1/2	2
5	18891400	LOCKWASHER, 1/2	4
6	18417400	HEX. NUT, 1/2-13NC.	4
7	18057456	BOLT, 1/2-13NC. X 5 1/2	1
8	18457650	HEX. LOCKNUT, 1/2-13NC.	1
9	18057430	BOLT, 1/2-13NC. X 2	4
10	18811400	FLATWASHER, 1/2	4
11	18891400	LOCKWASHER, 1/2	4
12	18417400	HEX. NUT, 1/2-13NC.	4
13	47008370	A-FRAME BRACKET	1
14	47008374	INNER BUSHING	1
15	47008375	TORSION SPRING, L.H.	1
16	47008376	TORSION SPRING, R.H.	1
17	44509038	DISC ARM, L.H.	1
18	44509138	DISC ARM, R.H.	1
19	18126422	CARRIAGE BOLT, 5/16-18NC. X 1	8
20	18881100	LOCKWASHER, 5/16	8
21	18446400	HEX. NUT, 5/16-18NC.	8
22	44501090	DISC BLADE	2
23	44502547	GASKET, HUB	2
24	18048442	BOLT, 3/4-10NC. X 3 1/2	2
25	18458400	LOCK NUT, 3/4-10NC	2
26	44501164	GREASE SEAL	2
27	44501949	BEARING CONE	4
28	44501910	BEARING RACE (CUP)	4
29	44500175	SNAP RING	2
30	18901805	GREASE ZERK	2
31	44509107	HUB COMPLETE, INCL ITEMS 26 TO 31	2
		HUB, INCL ITEMS 29, 30 AND 31	

ITEM 32, ARM BUSHING  
PART NO. 44501093  
NOT SHOWN.  
(FOR REPAIR ONLY)  
NORMALLY PART OF  
DISC ARM.

INVERTED  
DISC COVER SEALER



SPRING LOADED  
DOUBLE DISC REVERSED HUB  
ASSEMBLY P.N. 40032002  
1996 TO 1999

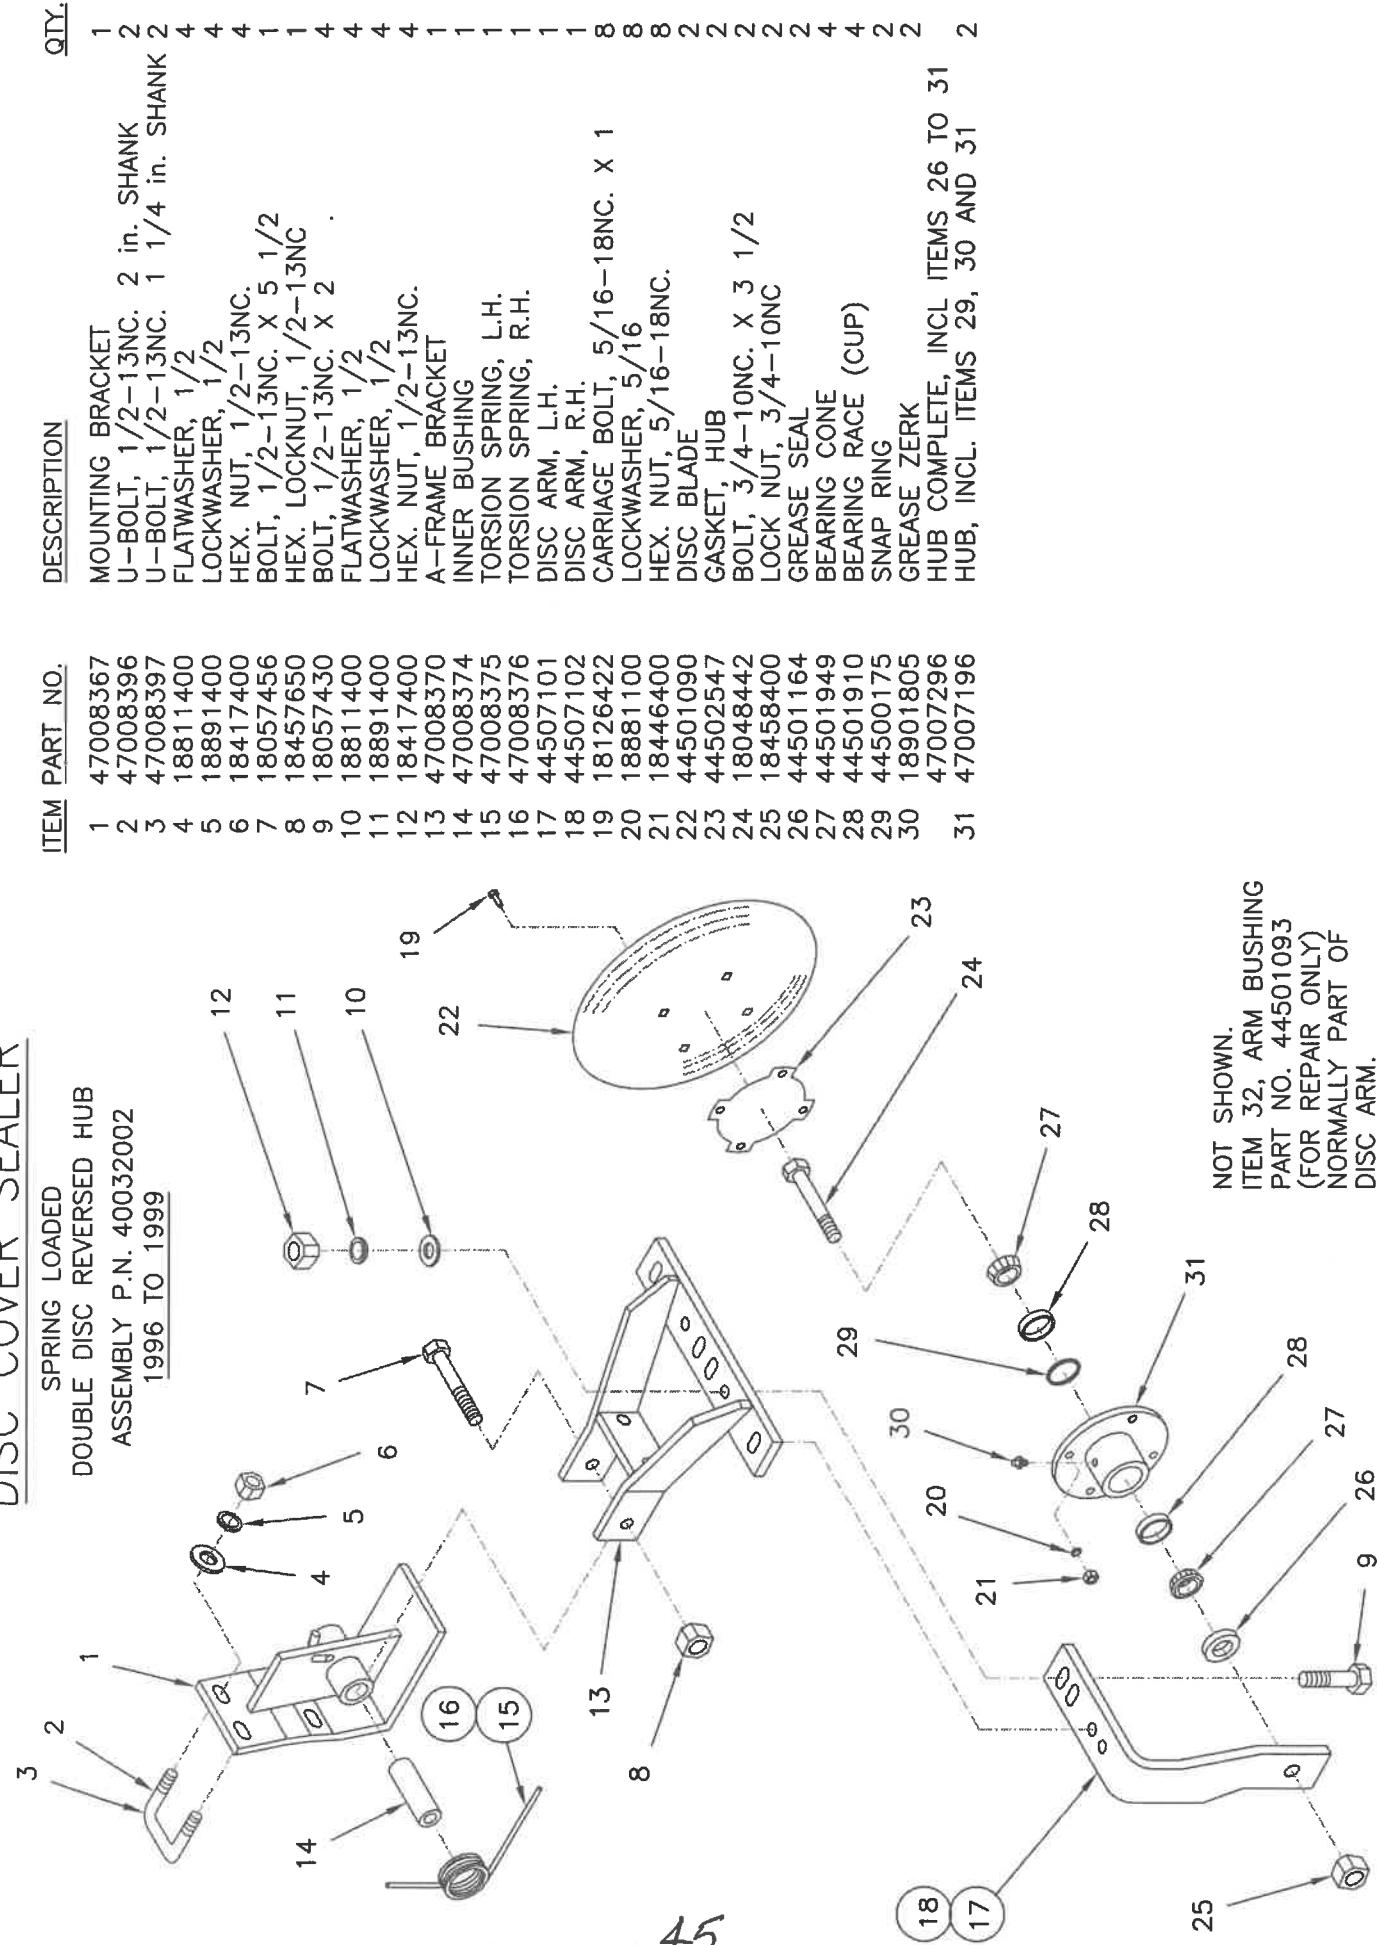

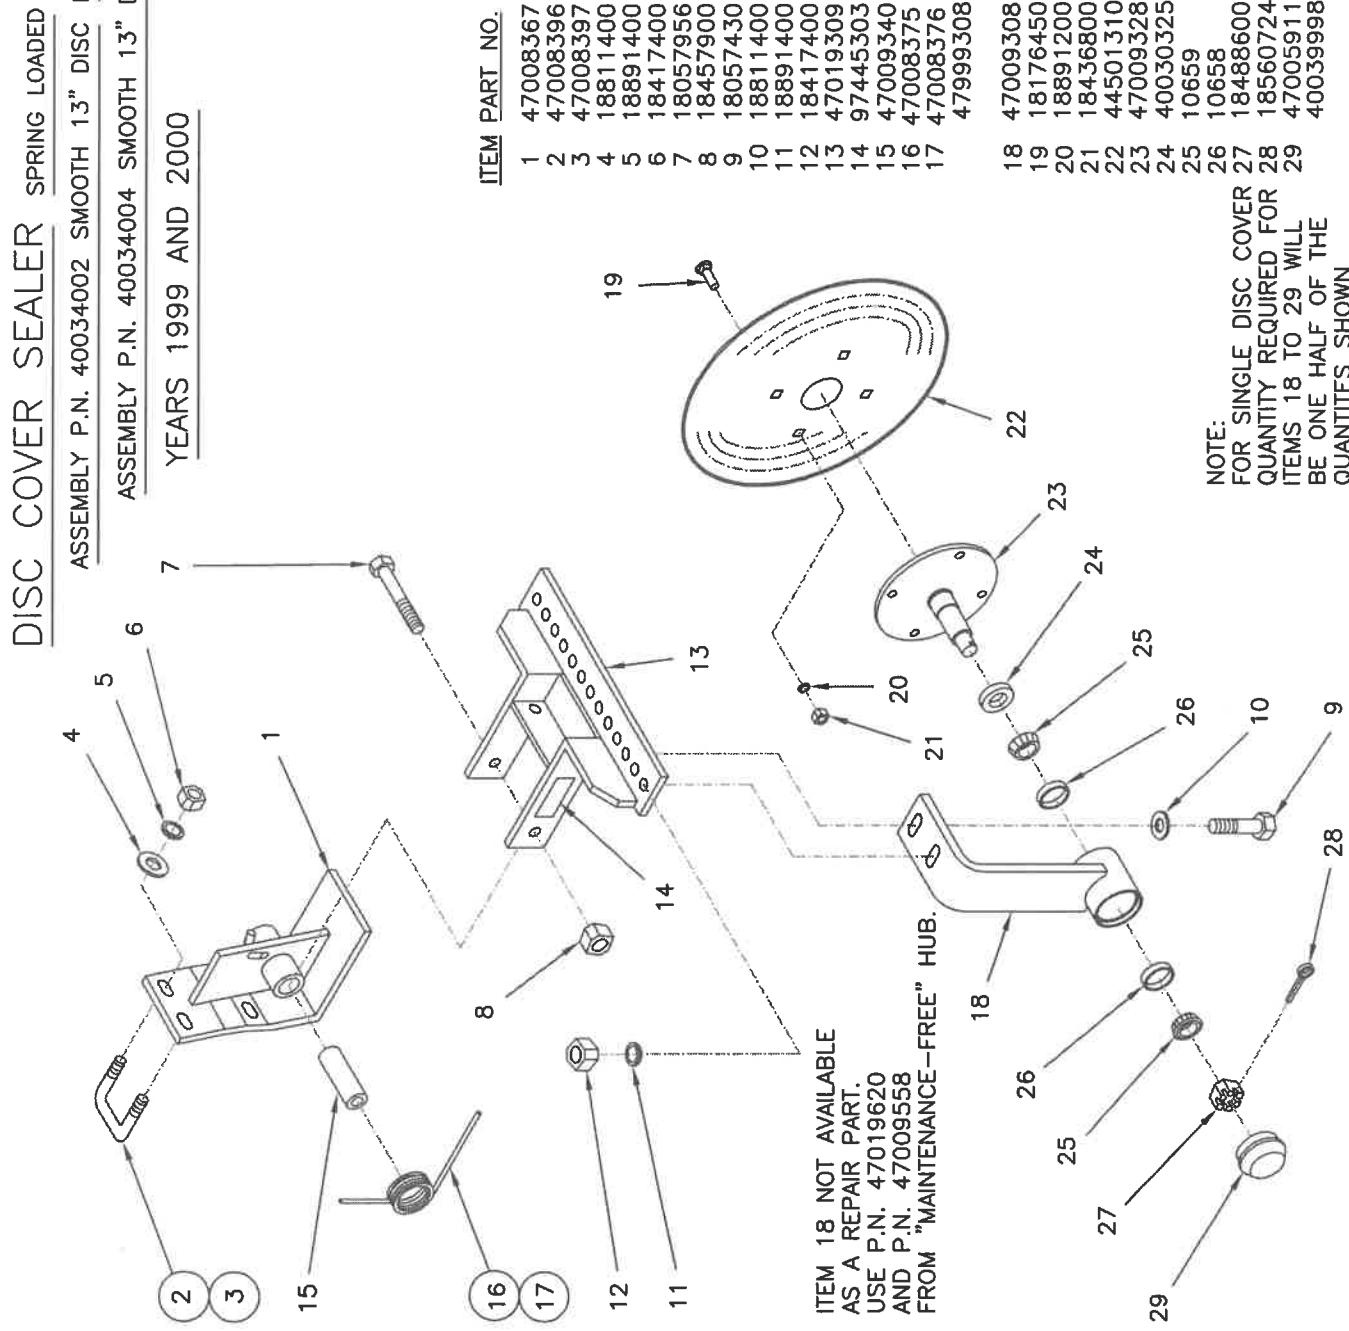

## DOUBLE DISC COVER SEALER

SPRING LOADED ASSEMBLY P.N. 40034000 SMOOTH 18" DISC  
40034001 NOTCHED 18" DISC  
YEARS 1999 AND 2000

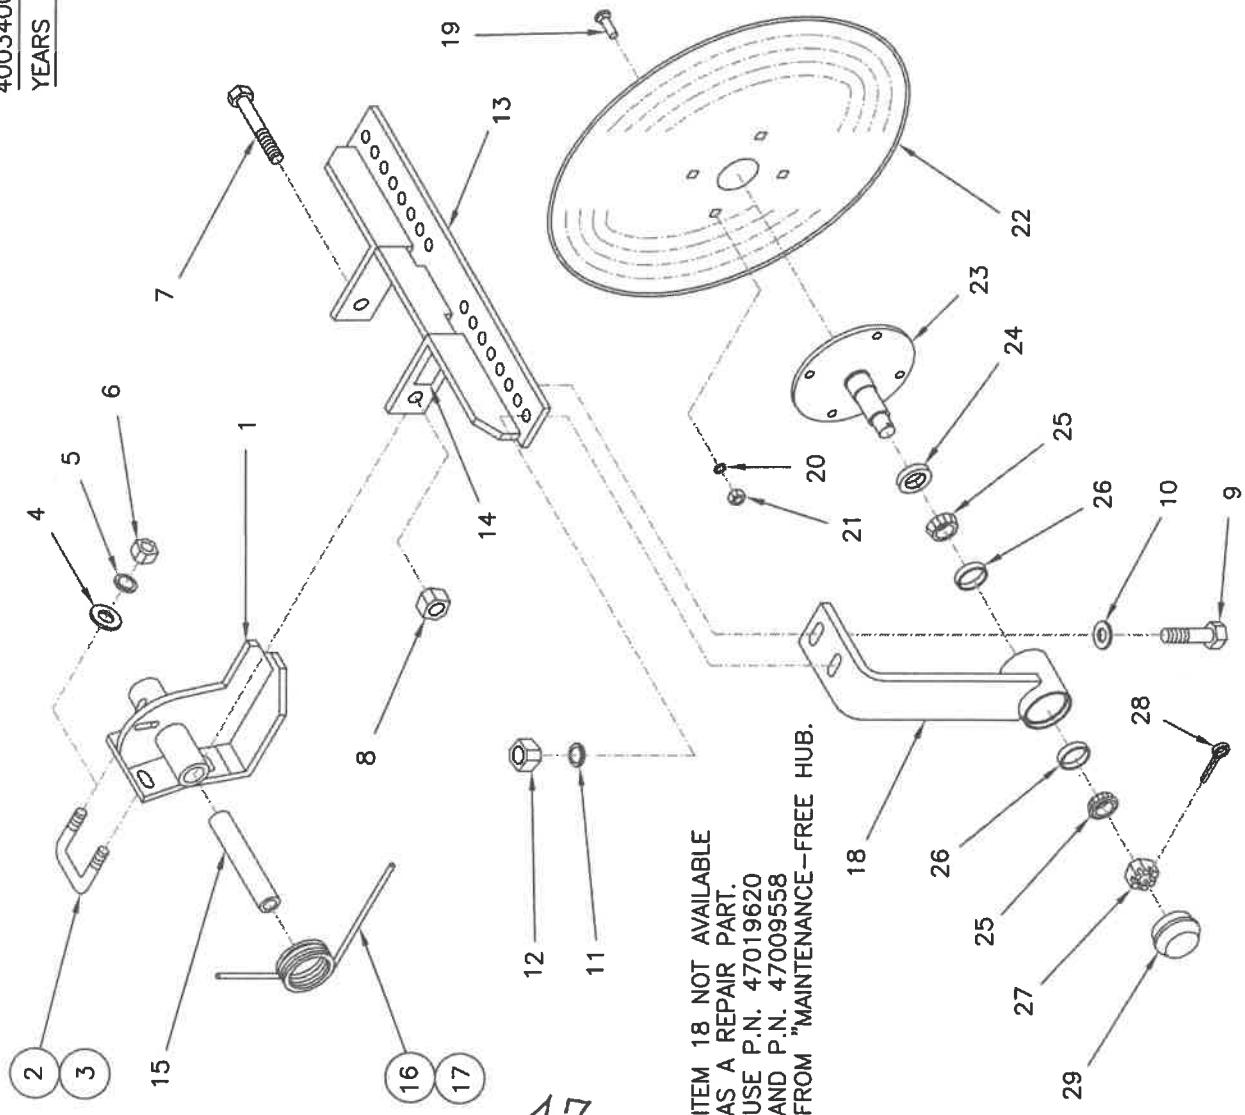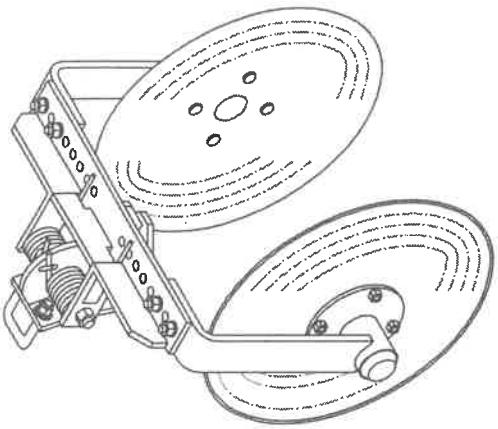

ITEM PART NO.	DESCRIPTION	QTY.
1 47019325	MOUNTING BRACKET	1
2 47008396	U-BOLT, 1 1/2-13NC. 2 in. SHANK	2
3 47008397	U-BOLT, 1 1/2-13NC. 1 1/4 in. SHANK	2
4 18811400	FLATWASHER, 1 1/2	4
5 18891400	LOCKWASHER, 1 1/2	4
6 18417400	HEX. NUT, 1 1/2-13NC.	4
7 18057972	BOLT, 5/8-11NC. X 7 1/2	1
8 18457900	HEX. LOCKNUT, 5/8-11NC.	1
9 18057430	BOLT, 1 1/2-13NC. X 2	4
10 18811400	FLATWASHER, 1 1/2	4
11 18891400	LOCKWASHER, 1 1/2	4
12 18417400	HEX. NUT, 1 1/2-13NC.	4
13 47009317	DISC ARM FRAME	1
14 97445303	DECAL, "AG SYSTEMS" SMALL	1
15 47009320	INNER BUSHING	1
16 47009326	TORSION SPRING, L.H.	1
17 47009327	TORSION SPRING, R.H.	1
18 47009310	DISC ARM ASSEMBLY	1
19 18176450	CARRIAGE BOLT, 3/8-16NC. X 1	2
20 18891200	LOCKWASHER, 3/8	8
21 18436800	HEX. NUT, 3/8-16NC	8
22 44501810	DISC BLADE, SMOOTH EDGE	2
OR 44501811	DISC BLADE, NOTCHED EDGE	2
23 47009328	SPINDLE WITH FLANGE	2
24 40030325	GREASE SEAL	2
25 10659	BEARING CONE	2
26 10658	BEARING RACE (CUP)	4
27 18488600	SLOTTED NUT, 3/4-16NF	2
28 18560724	COTTER PIN, 5/32 X 1 1/4	2
29 47005911	DUST CAP	2
40039999	BOLT PACKAGE INCLUDES ITEMS	2
4 TO 12 & 19 TO 21		


DISC COVER SEALER SPRING LOADED

ASSEMBLY P.N. 40034002 SMOOTH 13" DISC DOUBLE DISC

ASSEMBLY P.N. 40034004 SMOOTH 13" DISC SINGLE DISC


WITH BOLT-ON HUB

YEARS 2001 TO PRESENT

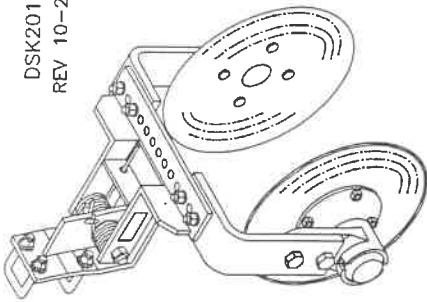

ITEM PART NO.	DESCRIPTION	QTY.
1 47008367	MOUNTING BRACKET	1
2 47008396	U-BOLT, 1 1/2"-13NC.	2
3 47008397	U-BOLT, 1 1/2"-13NC.	1
4 18811400	1 1/4 in. SHANK	2
5 18891400	LOCKWASHER, 1/2	4
6 18417400	HEX. NUT, 1 1/2"-13NC.	4
7 18057956	BOLT, 5/8"-11NC. X 5 1/2	1
8 18457900	HEX. LOCKNUT, 5/8"-11NC.	1
9 18057430	BOLT, 1 1/2"-13NC. X 2	4
10 18811400	FLATWASHER, 1/2	4
11 18891400	LOCKWASHER, 1/2	4
12 18417400	HEX. NUT, 1 1/2"-13NC.	4
13 18057523	BOLT, 1 1/2"-20NF. X 1 1/4	4
14 18891400	LOCKWASHER, 1/2	4
15 18176450	CARRIAGE BOLT, 3/8"-16NC. X 1	8
16 18891200	LOCKWASHER, 3/8	8
17 18436800	HEX. NUT, 3/8"-16NC	8
18 47009340	INNER BUSHING	1
19 47008375	TORSION SPRING, L.H.	1
20 47008376	DISC ARM FRAME	1
21 47019309	DECAL, "AG SYSTEMS" SMALL	1
22 97445302	DISC ARM	2
23 47019620	DISC BLADE, 13 INCH DIA.	2
24 44501310	HUB ASSEMBLY COMPLETE	2
25 47009558	INCLUDES ITEMS 13 & 14 & 25 TO 34	2
26 10658	HUB WITH CUPS ITEM 26	2
27 47009328	BEARING CUP	4
28 40030325	SPINDLE WITH FLANGE	2
29 10659	GREASE SEAL	2
30 18841800	BEARING CONE	4
31 18488600	FLATWASHER, 3/4 SAE (1 1/2 O.D.)	2
32 18560722	SLOTTED NUT, 3/4"-16NF.	2
33 47999558	COTTER PIN, 5/32 X 1	2
34 47005911	O-RING DUST SEAL	2
35 40039999	DUST CAP	2
	BOLT PACKAGE INCLUDES ITEMS - 4 TO 6, 8 TO 12, AND 15 TO 17	1
	DUST CAP INSTALLATION TOOL (OPTIONAL)	1



**NOTE:**  
FOR SINGLE DISK COVER  
QUANTITIES REQUIRED FOR ITEMS  
9 TO 17 AND 23 TO 34 ARE  
ONE HALF OF THE QUANTITIES  
SHOWN. BOLT PACKAGE P.N.  
40039997 INCLUDES ITEMS  
4 TO 12 AND 15 TO 17

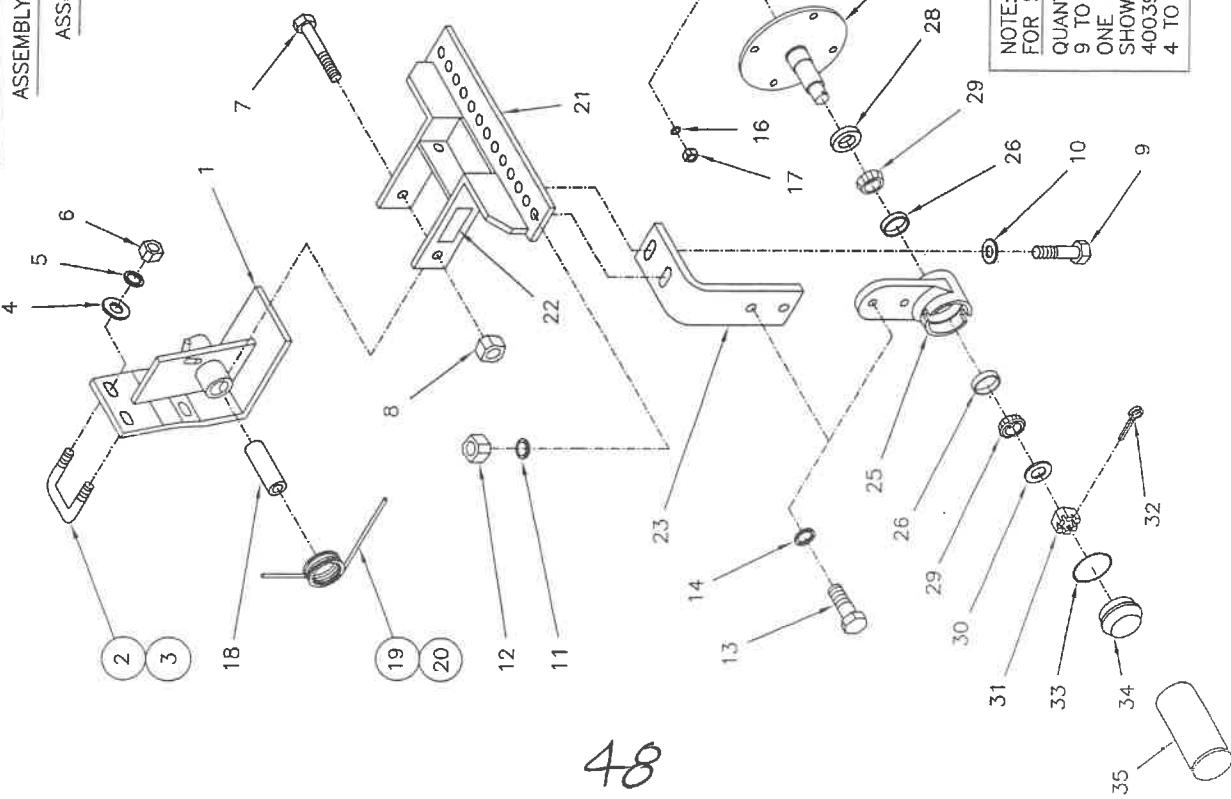

484

**DOUBLE DISC COVER SEALER "SPRING LOADED"**

**ASSEMBLY P.N. 40034000 SMOOTH 18" DISC**  
**40034001 NOTCHED 18" DISC**  
**WITH BOLT-ON HUB**  
**(YEARS 2001 TO PRESENT)**

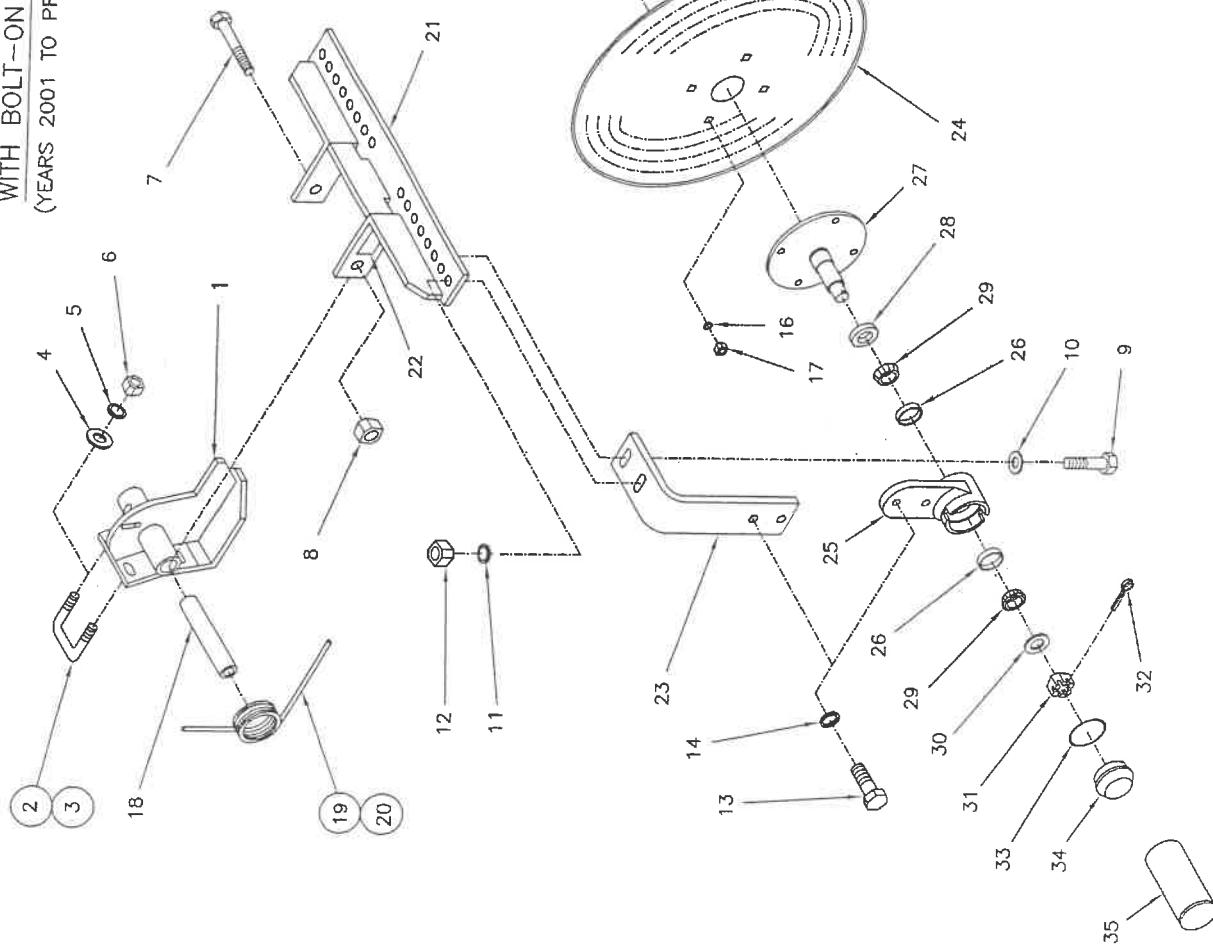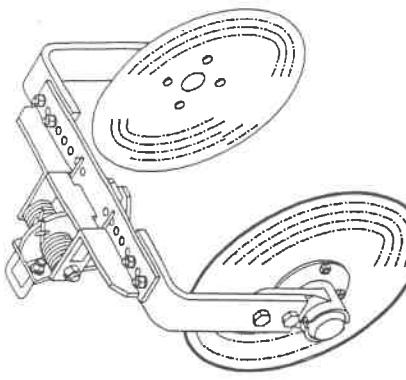

SEE COULTER & DISK SEALER  
MOUNTING INFO #SPGBDLSHK  
DETAILED DIAGRAM TO MOUNT  
DISC SEALER TO SHANK

DSKCVRMT1318  
11-28-07

## ASSEMBLY INSTRUCTIONS

### DISC COVER SEALER

13 inch and 18 inch (WITH BOLT-ON-HUB)


13 INCH (REFER TO DIAGRAM DSK201X13)

18 INCH (REFER TO DIAGRAM DSK201X18)

Your disc cover sealer assembly is partially assembled at the factory.  
The spindle (item 27) and all hub components are pre-assembled and greased for life.

1. Secure the mounting bracket (item 1) in a vise or assemble to the tool shank or some temporary assembly fixture.

2. Insert the bushing (item 18) into the mounting bracket (item 1). Position the torsion springs (item 19) left hand and (item 20) right hand over the pivot tube on the mounting bracket (item 1). The short legs of the springs should be next to the center gusset on the mounting bracket.
3. Position the disc arm frame (item 21) to the mounting bracket (item 1). Insert the long legs of the torsion springs into the holes in the crossbar on the disc arm frame. Assemble all with the bolt (item 7) and the locknut (item 8). Securely tighten the locknut and bolt so that the inner bushing (item 18) and the disc arm frame rotate as one unit.
4. Increase the tension on the torsion springs by hooking the short leg of the spring behind the retaining lugs welded to the gusset on the mounting bracket. A short length of  $3/8$  or  $1/2$  inch pipe will be helpful to bend the spring leg into position behind the lug.
5. Assemble the disc arm (item 23) to the hub assembly with the bolts (item 13) and lock washers (item 14). Secure the disc arm assembly in a vice and assemble the disc (item 24) to the spindle flange with the hardware (items 15, 16 and 17). The disc may be mounted concave to the row or convex (reverse) to the row. There is no difference between left hand or right hand assemblies or single or double disc assemblies.
6. Mount the disc arm assembly to the disc arm frame (item 21) with the bolts (item 9) and the hardware (items 10, 11 and 12) as illustrated with the nut on top of the disc arm frame. The suggested start-up position for a double disc assembly would be to mount the disc arm in the holes in the frame that are farthest to the outside. For a single disc cover or a reversed disc cover, holes farther to the center would be more appropriate. The slotted holes in the disc arm provide the angular adjustment for the disc. Position the disc(s) at the angle desired and securely tighten the hardware.
7. Your disc cover assembly is shipped with (2) U-bolts for a  $1\frac{1}{4}$  square shank and (2) U-bolts for a  $2$  inch wide shank. Select the appropriate U-bolts and mount the disc cover assembly to the shank at the desired operating depth. Securely tighten the hardware.


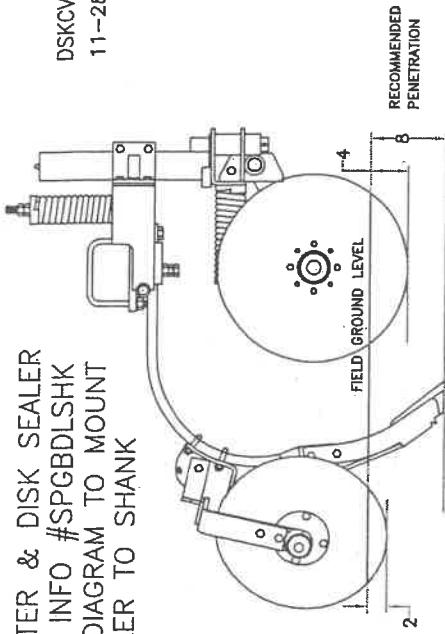


# DOUBLE DISK SEALER ASSEMBLY WITH FLOATING ARMS

ASSEMBLY P.N. 40034010 SMOOTH 18" DISK  
40034011 NOTCHED 18" DISK


KIT TO CONVERT  
EXISTING 18 INCH DISK SEALER  
TO FLOATING ARM STYLE  
P.N. 47994693  
INCLUDES ITEMS 1 TO 10

CASE/DMI  
SHANK  
OPTION

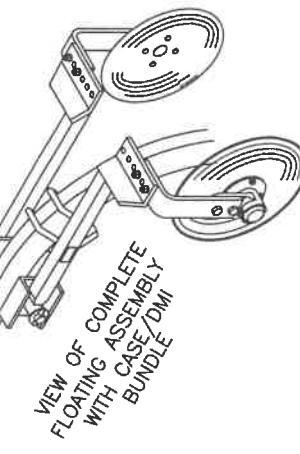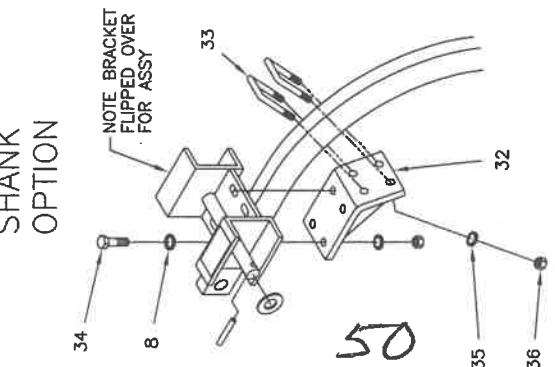

40039996 BOLT PACKAGE INCLUDES ITEMS  
2 & 3, 8 TO 10, 12 TO 15, AND 17 TO 19

FLTGDSKSLR  
REV 02-19-13

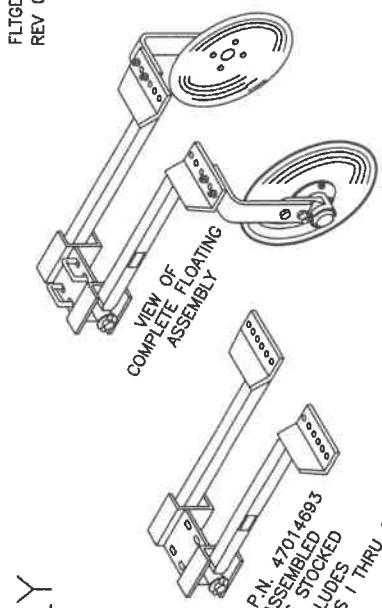

ITEM PART NO.	DESCRIPTION	QTY
1 47004693	MOUNTING BRACKET (W/DECAL)	1
2 18852200	FLAT WASHER, 1" SAE, ZC	2
3 18511036	EXPANSION PIN, 3/8 X 2 1/4	2
4 47004697	PIVOT ARM, L.H. (INCL ITEM 5)	1
5 47009952	PIVOT ARM, R.H. (INCL ITEM 5)	1
6 97445303	FIBER BUSHING, (1" I.D. X 2 1/2") DECAL, AG SYSTEMS" SMALL	2
7 47008396	U-BOLT, 1/2"-13NC. (2" SHANK)	1
8 18811400	FLAT WASHER, 1/2"	4
9 18847400	LOCK WASHER, 1/2"	4
10 18417400	HEX. NUT, 1/2"-13NC.	4
11 47009621	DISK ARM	2
12 18057450	BOLT, 1/2"-13NC. X 2	4
13 18891400	FLAT WASHER, 1/2"	4
14 18891400	LOCK WASHER, 1/2"	4
15 18417400	HEX. NUT, 1/2"-13NC.	4
OR 44501810	DISK BLADE, SMOOTH EDGE	2 OPT.
16 44501811	DISK BLADE, NOTCHED EDGE	2
17 18176450	CARRIAGE BOLT, 3/8-16NC. X 1	8
18 18891200	LOCK WASHER, 3/8	8
19 18436800	HEX. NUT, 3/8-16NC.	8
47109558	HUB ASSEMBLY COMPLETE	1
INCLUDES ITEMS 20 TO 31		
20 47009558	HUB WITH CUPS	2
21 18057523	BOLT, 1/2"-20NF. X 1 1/4	4
22 18891400	FLAT WASHER, 1/2"-16NF	2
23 47009328	SPINDLE WITH FLANGE	2
24 40030325	GREASE SEAL	2
25 10659	O-RING DUST SEAL	2
26 10653	BEARING CONE	4
27 18841800	FLAT WASHER, 3/4 SAE (1 1/2 O.D.)	2
28 18488600	SLOTTED NUT, 3/4	2
29 18560722	COTTER PIN, 5/32 X 1	2
30 47995558	DUST CAP	2
31 47005911	DUST CAP	2
31A 47005562	DUST CAP INSTALLATION TOOL (OPTIONAL)	1
32 47005794	FLOATING ARM BRKT CASE/DMI SHANK	1
33 47008397	U-BOLT-AG 3 1/2 X 1 5/16 W	2
34 18057428	BOLT, HEX HD GR5ZC 1/2 X 3/4	4
35 18891400	LOCK WASHER, 1/2"	4
36 18417400	HEX. NUT, 1/2"-13NC.	4

# ASSEMBLY INSTRUCTIONS

FLTGDIINST

## DISK COVER SEALER

### 18 INCH WITH WITH FLOATING ARMS

Your disc cover sealer assembly is partially assembled at the factory. The spindle (item 22) and all hub components are pre-assembled and "greased" for life.


1. Due to the weight of a complete disk sealer assembly, it is recommended that the disk sealer be assembled to a shank already mounted on a toolbar. Position the mounting bracket (item 1) on the bottom side of the shank (as illustrated) and the u-bolt straddling the top of the shank. The mounting bracket should be located on the flat part of the shank. When using the disk sealer with a "Hi-Trip" spring bundle, position the mounting bracket as far forward on the shank as the spring bundle bracket will allow. Securely tighten the hardware.  
*51*
2. Position the pivot arm (item 4) left hand and right hand, to the mounting bracket (item 1) and assemble with the washers (item 2) and the expansion pins (item 3).
3. Secure the disk arm (item 10) in a vice and assemble the hub assembly to the arm with the bolts (item 21) and lock washers (item 20). Assemble the disk (item 15) to the spindle flange with the bolts (item 16) and hardware items (17 and 18). There is no difference between the left hand and right hand assemblies.
4. Mount the disk arm assemblies to the pivot arms with the bolts (item 11) and the hardware (items 12, 13 and 14) as illustrated with the nut on top of the pivot arm plate. The suggested start-up position would be to mount the disk arm in the holes in the pivot arm plate that are farthest to the outside. The slotted holes in the disk arm provide the angular adjustment for the disk. Position the disks at the desired angle and tighten the hardware securely.



## SAFETY LIGHT KIT FOR TOOLBARS

P/N: 47999316

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	54209-008	DUAL LAMP ASSY, LH	1
2	54209-022	DUAL LAMP ASSY, RH	1
3	71675	35' HD CABLE WITH 7 PIN PLUG	1
4	47009316	LIGHT MOUNTING BRACKET	2
5	47001028	U-BOLT, 3/8-16NC.	4
6	18891200	LOCKWASHER, 3/8 ZC	8
7	18436800	NUT 3/8 NCZC	8
8	18055724	BOLT HX CAP G5 NCZC 1/4 X 1 1/4	8
9	18495700	NUT HX SER FLG 1/4 NC ZC	8
10	504560	NYLON TIE STRAP	5

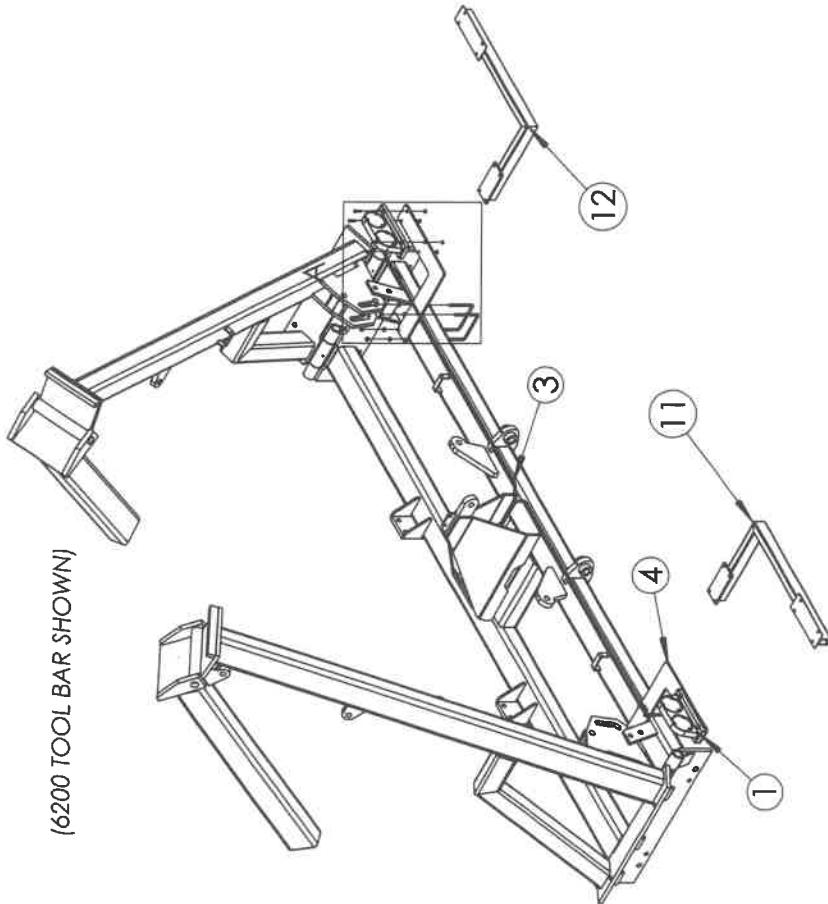

ITEMS 11 AND 12 ARE OPTIONAL

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
11	47009789	LITE BRACKET, LH	1
12	47009790	LITE BRACKET, RH	1

AMBER REPLACEMENT LENS PN 802650  
RED REPLACEMENT LENS PN 802651




# NH3 DISTRIBUTION STAND AND BREAK-AWAY COUPLING DEVICE INSTALLATION, OPERATION AND MAINTAINENCE INSTRUCTIONS

NH3STNDKIT2  
REV 08-28-12

## BREAK-AWAY COUPLING DEVICE & NH3 STAND

THE PURPOSE OF THE BREAK-AWAY COUPLING DEVICE IS THAT IN THE EVENT OF A TRAILING NURSE TANK WAGON BECOMING INADVERTENTLY UNHITCHED AND DISCONNECTED FROM THE TOOLBAR, THE BREAK-AWAY COUPLING DEVICE IS INSTALLED TO PROVIDE AN AUTOMATIC VALVE CLOSURE TO REDUCE THE AMOUNT OF NH3 THAT IS RELEASED INTO THE AIR AND REDUCE THE HAZARD TO THE TOOLBAR OPERATOR AND OTHERS.

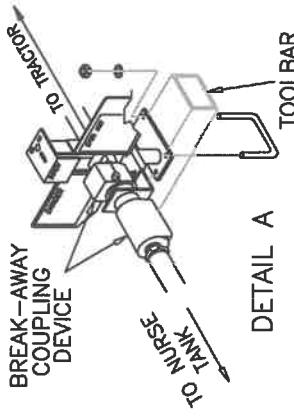


DETAIL A

THE NH3 STAND MOUNTS THE BREAK-AWAY COUPLING DEVICE TO THE TOOLBAR SECURELY BUT ALLOWS THE COUPLING DEVICE TO SWIVEL FREELY AND ALLOWS IT TO SAFELY DISCONNECT DURING AN INCIDENT WITHOUT CAUSING DAMAGE TO THE BREAK-AWAY COUPLING DEVICE. THE HOSE OR FITTINGS ATTACHED TO THE COUPLER AT THE SWIVEL BRACKET MUST NOT CATCH ON ANYTHING THAT WOULD PREVENT THE REQUIRED MOVEMENT DURING A PULL AWAY EVENT.


## NH3 STAND / BREAK AWAY COUPLER INSTALLATION PROCEDURE

1. BOLT THE PRE-ASSEMBLED NH3 STAND ASSEMBLY TO THE REAR OF THE TOOLBAR CENTERED OVER THE FIELD HITCH USING U-BOLTS OR SUPPLIED BRACKETS. SEE YOUR SPECIFIC TOOLBAR MODEL OWNERS MANUAL AND NH3 STAND ILLUSTRATION FOR PARTS REQUIRED. (REF DETAIL A) MAKE SURE THE NH3 STAND DECALS CAN BE EASILY READ FACING THE REAR OF THE TOOLBAR. IMPORTANT! INSTALL THE BREAK-AWAY COUPLING MANUFACTURERS WARNING DECAL ON THE TOOLBAR CENTERED OVER THE FIELD HITCH WHERE IT CAN BE EASILY READ.
2. MOUNT THE BREAK-AWAY COUPLER PER THE INSTRUCTIONS INCLUDED BY THE SPECIFIC COUPLERS MANUFACTURER. THE MOUNTED COUPLER MUST BE ABLE TO FREELY SWIVEL APPROXIMATELY 80 DEGREES TO EACH SIDE AND ABOUT 30 DEGREES UP AND DOWN. (REFERENCE DETAILS B AND C) BE SURE TO READ AND FOLLOW ALL MANUFACTURERS SAFETY PRECAUTIONS. THIS MUST BE DONE SO THE COUPLER WILL BE PRESENTED WITH A STRAIGHT PULL BY THE HOSE IN THE EVENT OF A SITUATION WHERE THE NURSE TANK COMES FREE OF ITS ATTACHMENT TO THE TOOLBAR.

IF THE COUPLER CANNOT SWIVEL PROPERLY, THE HOSE MAY PULL AT AN ANGLE WHICH CAUSES THE SEPARATION FORCE TO INCREASE GREATLY AND MAY BIND THE COUPLER PREVENTING SEPARATION. SINCE PULL AWAY EVENTS OFTEN OCCUR DURING A TURN, THE ABILITY OF THE COUPLER TO SWIVEL IS DESCRIBED AS CRITICAL TO THE OPERATION OF THE BREAK-AWAY COUPLING DEVICE. ALL PIPING AND VALVES IN THE SYSTEM SHOULD BE ABLE TO WITHSTAND A PULL FORCE GREATER THAN 450 POUNDS. READ ALL MANUFACTURERS OPERATING INSTRUCTIONS AND DECALS BEFORE WORKING WITH ANY CONNECTIONS. READ AND FOLLOW THE BREAK-AWAY DEVICE MANUAL FOR CONNECTION AND DISCONNECTION PROCEDURES AND SAFETY PRECAUTIONS.

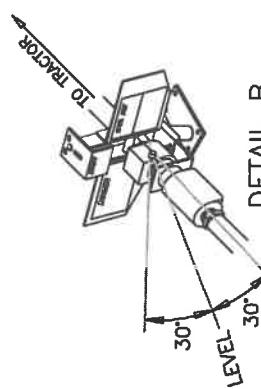

DETAIL B  
MUST SWIVEL A MINIMUM OF  
30° UP AND 30° DOWN  
(VERTICAL MOVEMENT)  
(SHOWN 30° DOWN)

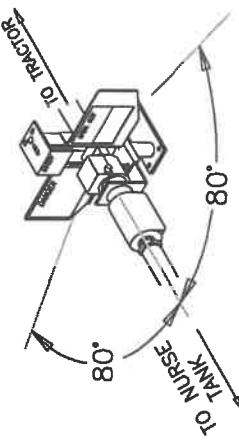

DETAIL C  
MUST SWIVEL A MINIMUM OF  
80 DEGREES RIGHT AND 80° LEFT  
(HORIZONTAL MOVEMENT)

**SAFETY**  
WHEN WORKING WITH NH3 CONNECTIONS, WEAR PROTECTIVE CLOTHING, GOGGLES AND GLOVES AND HAVE EMERGENCY WATER AVAILABLE FOR WASHING. ALWAYS STAND ON THE UPWIND SIDE AND AVOID BREATHING IN ANY CHEMICAL VAPORS.

**Maintenance**  
BEFORE EACH USE, VISUALLY INSPECT THE BREAK-AWAY COUPLING FOR LEAKS, DAMAGED OR BROKEN COMPONENTS. ALSO CHECK THAT THE NH3 STAND OPERATES PROPERLY, THAT THE VERTICAL SPRING IS NOT BROKEN, AND ALLOWS FREE SWIVEL MOVEMENT AS SHOWN IN DETAILS B & C AND SPRINGS BACK INTO THE NORMAL OPERATING POSITION AS SHOWN IN DETAIL A. CHECK AND TIGHTEN ALL HARDWARE AS NEEDED. THE BREAK AWAY COUPLING DEVICE SHOULD BE FULLY INSPECTED AT LEAST ONCE A YEAR OR REPLACED OR REPAIRED AS REQUIRED. REPLACE ENTIRE COUPLER BASED ON EXPIRATION DATES ON COUPLER DECALS.

**MANUALLY DISCONNECT OR RECONNECT INSTRUCTIONS**  
**DANGER!** DO NOT DISCONNECT OR RECONNECT UNDER PRESSURE


READ AND UNDERSTAND THE BREAK-AWAY COUPLING DEVICE MANUFACTURERS INSTRUCTIONS, WARNINGS AND SPECIFICATIONS BEFORE ATTEMPTING TO MANUALLY DISCONNECT OR RECONNECT THE COUPLING. FOLLOW THE BREAK-AWAY COUPLING DEVICE MANUFACTURERS BLEEDING THE SYSTEM PROCEDURES LISTED IN THEIR OWNERS MANUAL OR ON THEIR DANGER DECAL. ALWAYS WEAR PROTECTIVE GOGGLES, CLOTHING AND HAVE EMERGENCY WATER AVAILABLE FOR WASHING WHEN WORKING WITH NH3. ALWAYS DIRECT BLOODS AWAY FROM YOUR FACE OR BODY.



**WARNING!** FAILURE TO READ AND UNDERSTAND THE INSTRUCTIONS CONTAINED IN THESE INSTALLATION, OPERATION, AND MAINTENANCE INSTRUCTIONS COULD LEAD TO PROPERTY DAMAGE, SERIOUS INJURY OR DEATH! READ AND UNDERSTAND THE BREAK-AWAY COUPLING AND NH3 STAND MANUFACTURERS MANUALS COMPLETELY.

# NH3 QUICK COUPLER STAND KIT (2015)

## for NH3 TOOLBARS (swing arm style)

NH3STND2014  
1/6/16

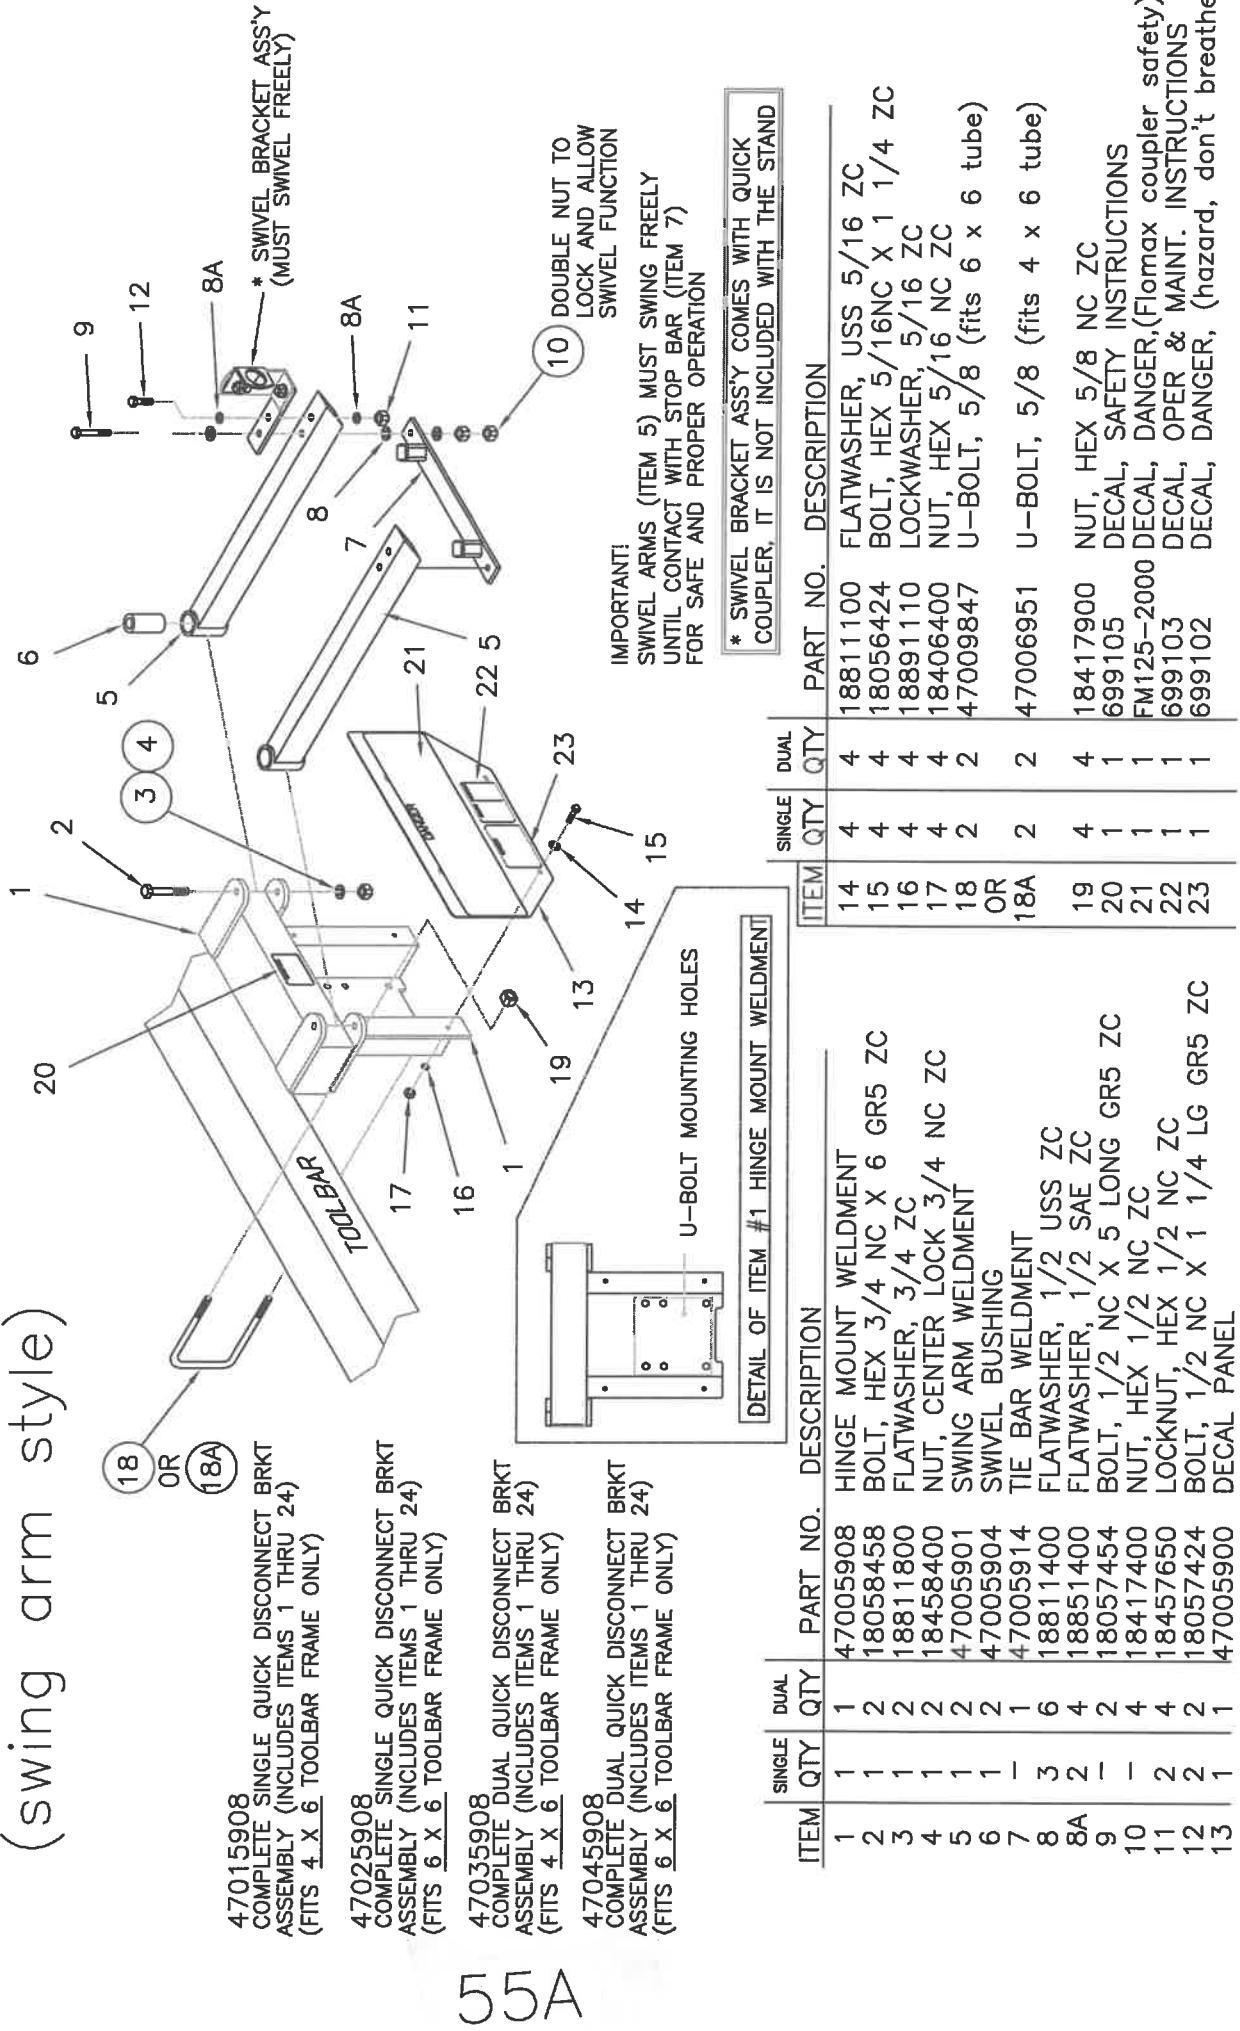

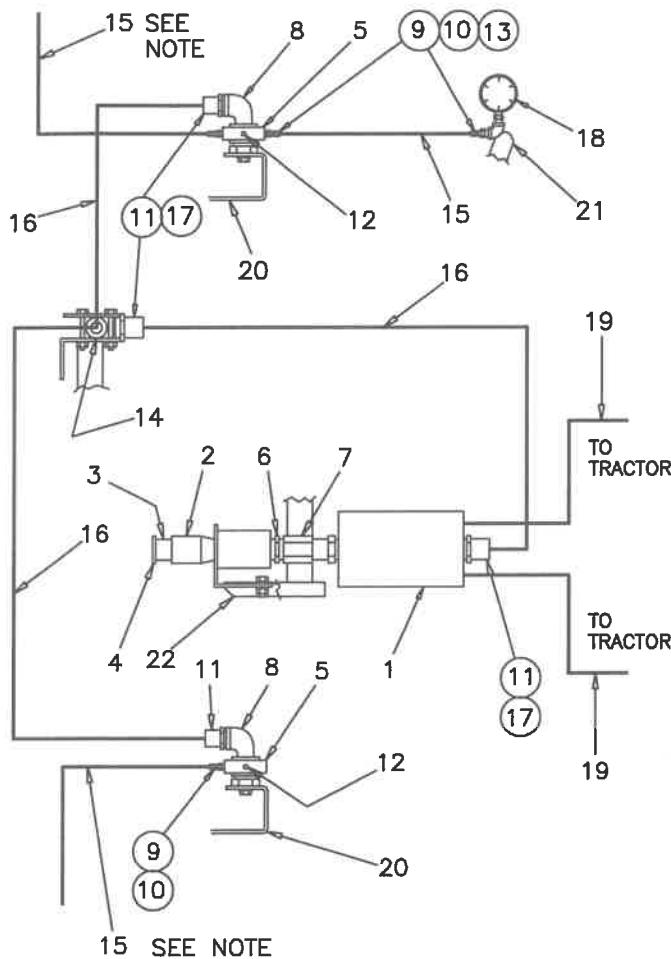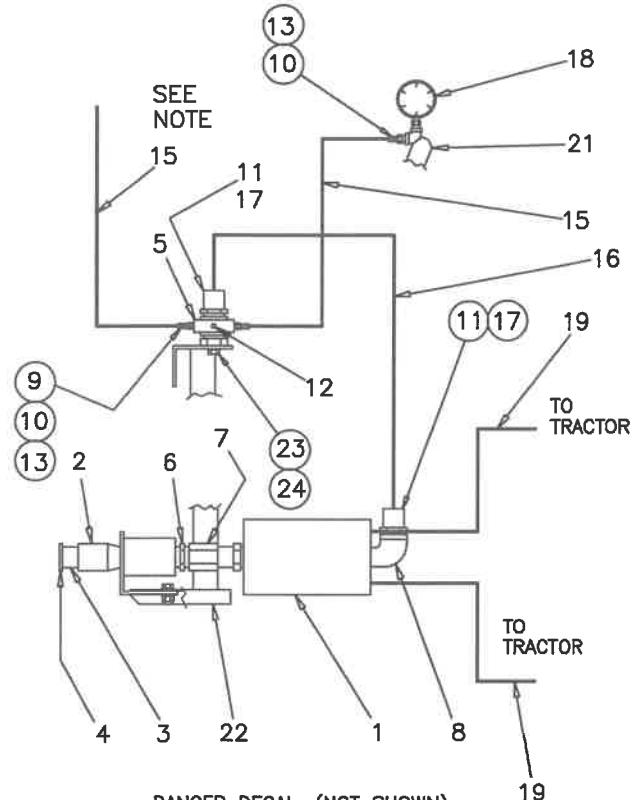NH3 APPLICATION SCHEMATIC  
WITH 2 MANIFOLDSNH3 APPLICATION SCHEMATIC  
WITH ONE MANIFOLD

DANGER DECAL, (NOT SHOWN)  
WHICH IS SUPPLIED WITH  
ITEM 2, (QUICK COUPLER)  
ATTACH TO FIELD HITCH

NOTE: FOR ITEM 15  
CUT IDENTICAL LENGTHS OF TUBING  
FOR EACH KNIFE.


ITEM	PART NO.	DESCRIPTION	34 FT. TOOLBAR SHANK SPACING			42 FT. TOOLBAR SHANK SPACING			52 FT. TOOLBAR SHANK SPACING				
			15"	18"	30"	36"	15"	18"	30"	36"	15"	18"	30"
1	100186	B-9500 METER	1	—	ALL								
2	100399	QUICK COUPLER	1	—	ALL								
3	111430	ACME ADAPTER	1	—	ALL								
4	111585	DUST CAP W/CHAIN	1	—	ALL								
5	111259	MANIFOLD, 1/4 X 16 PORT	X	X	1	1							
5	100147	MANIFOLD, 1/8 X 18 PORT	2	X	X	X	2	2	1	1			
5	100170	MANIFOLD, 1/8 X 24 PORT	X	1	1	X	X	X	X	2	2	X	2
6	5404-20	HEX. PIPE NIPPLE, 1 1/4"	1	—	ALL								
7	5000-20-HEX	HEX. COUPLING, 1 1/4"	1	—	ALL								
8	72306	STREET ELBOW, 1" NPT	2	1	1	2	2	1	1	2	2	2	2
9	100172	HOSE BARB, 1/8 X 3/8 HOSE	28	24	X	X	36	29	18	16	42	35	22
10	111510	HOSE BARB, 1/4 X 3/8 HOSE	1	1	15	13	1	1	1	1	1	1	1
11	200277	HOSE BARB, 1 X 1 HOSE	3	2	2	2	3	3	2	2	3	3	3
12	72025	PIPE PLUG, 1/8 NPT	8	X	X	X	7	X	2	6	1	14	18
12	72019	PIPE PLUG, 1/4 NPT	X	X	3	5							
13	602305	HOSE CLAMP, (WIRE TYPE)	56	48	28	24	72	58	36	32	85	70	44
14	72292	TEE, 1" NPT	1	X	X	X	1	1	X	X	1	1	1
15	15017005	TUBING 3/8" (FT.=)	325	440	280	240	545	450	440	390	840	700	440
16	15018576	TUBING 1" (FT.=)	31	3	3	3	31	31	3	3	31	31	31
17	200252	HOSE CLAMP, (SCREW TYPE)	6	2	2	2	6	6	2	2	6	6	6
18	100352	GAUGE, (0-60)											
19	609220	HYD. HOSE, 1/4 X 22 FT.											
20	70245	MANIFOLD STAND											
21	47010168	GAUGE BRACKET											
22	47010175	NH3 STAND ASSEMBLY											
23	18056822	3/8-16 NC X 1" BOLT	X	X	2	2							
24	18406800	3/8 LOCKWASHER	X	X	2	2							

## DICKEY-john TTU ASSEMBLY

(THERMAL TRANSFER UNIT)

REFER TO THE NH<sub>3</sub>  
PLUMBING ILLUSTRATION  
IN YOUR OWNERS  
MANUAL, (ITEM 14 ETC.)

REFER TO THE NH<sub>3</sub>  
PLUMBING ILLUSTRATION  
IN YOUR OWNERS  
MANUAL, (ITEM 7 ETC.)

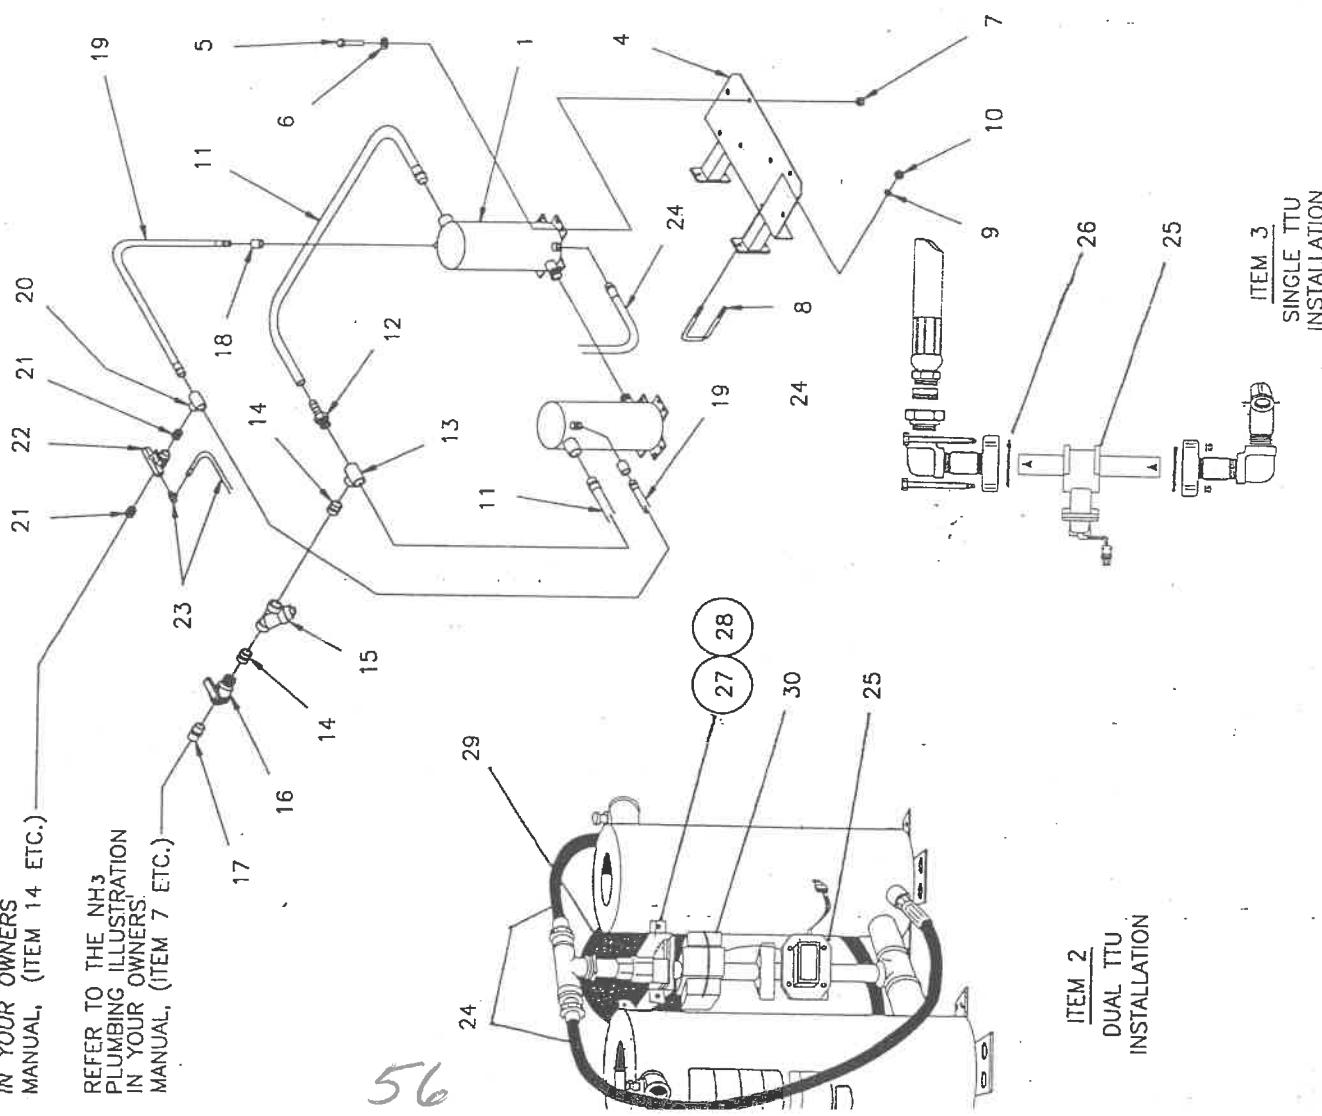

ITEM	PART NO.	DESCRIPTION	QTY.
1	457902500A	DICKEY-john THERMAL TRANSFER UNIT, (GANISTER ONLY)	1
2	600906	DICKEY-john DUAL TTU INSTALLATION KIT WITH FLO-METER	2
3	600910	DICKEY-john SINGLE TTU INSTALLATION KIT WITH FLO-METER	1
4	47010236	QUANTITIES SHOWN ARE FOR DUAL TTU INSTALLATION 4.7020236 MOUNTING BRACKET COMPLETE INCLUDES ITEMS 4 TO 10	1
5	18057424	BOLT, 1/2-13NC, X 1 1/4	4
6	18811400	FLAT WASHER, 1/2	4
7	18497400	FLANGE NUT, 1/2-13NC.	4
8	47006951	U-BOLT, 5/8-11NC	2
9	18891600	LOCKWASHER, 5/8	4
10	18417900	HEX. NUT, 5/8-11NC.	4
11	10079004	NH <sub>3</sub> HOSE ONLY, 1 1/4 I.D. (2 PC. @ 96") ADD HOSE ENDS	16 FT.
12	100375	HOSE END, 1 1/4 HOSE X 1 1/4MPT	4
13	100650	PIPE TEE, 1 1/4 NPT	1
14	100532	CLOSE NIPPLE, 1 1/4 NPT	2
15	100518	IN-LINE STRAINER, 1 1/4 FPT	1
16	20010018	BALL VALVE, 1/4 TURN, 1 1/4 NPT	1
17	5404-20	HEX. CLOSE NIPPLE, 1 1/4 NPT	1
18	100711	PIPE COUPLING, 1" NPT	2
19	10078506	NH <sub>3</sub> HOSE ONLY, 1" I.D. (2 PC. @ 90") ADD HOSE ENDS (HOSE ENDS 1" X 1" MPT)	15 FT.
20	72315	PIPE TEE, 1" NPT	1
21	100530	CLOSE NIPPLE, 1" NPT	1
22	10070	GROMMET VALVE, 1" FPT	1
23	610264	HOSE PACKAGE, INCL. (2) EA. 1/8 HYD. HOSE X 22 FT. PLUS BUSHINGS AND ELBOW FITTINGS	2
24	145404	NH <sub>3</sub> HOSE, 1" I.D. X 30" WITH 1" MPT FITTINGS EACH END	2
25	457901610	REPLACEMENT HOSE (INCLUDED IN ITEM 2 OR 3)	1
26	457901620	FLO-METER GASKET, FOR FLO-METER	1
27	981127	BALL VALVE ASSEMBLY	2
28	42786	BALL VALVE COUPLING DISK	1
29	981126	BALL VALVE ACTUATOR	1
30	46431-001051	VAPOR DETECTOR	1


# 8000 52 FT TOOLBAR (STANDARD)

30 INCH SPACING, ODD NUMBER OF ROWS  
WITH 18 INCH DISK COVERS




IN MANUAL

NOTE:  
FOR 13" DISKS, EXTRA-LONG BRACKETS  
WOULD BE ADEQUATE

BK30STD  
REVJAD3

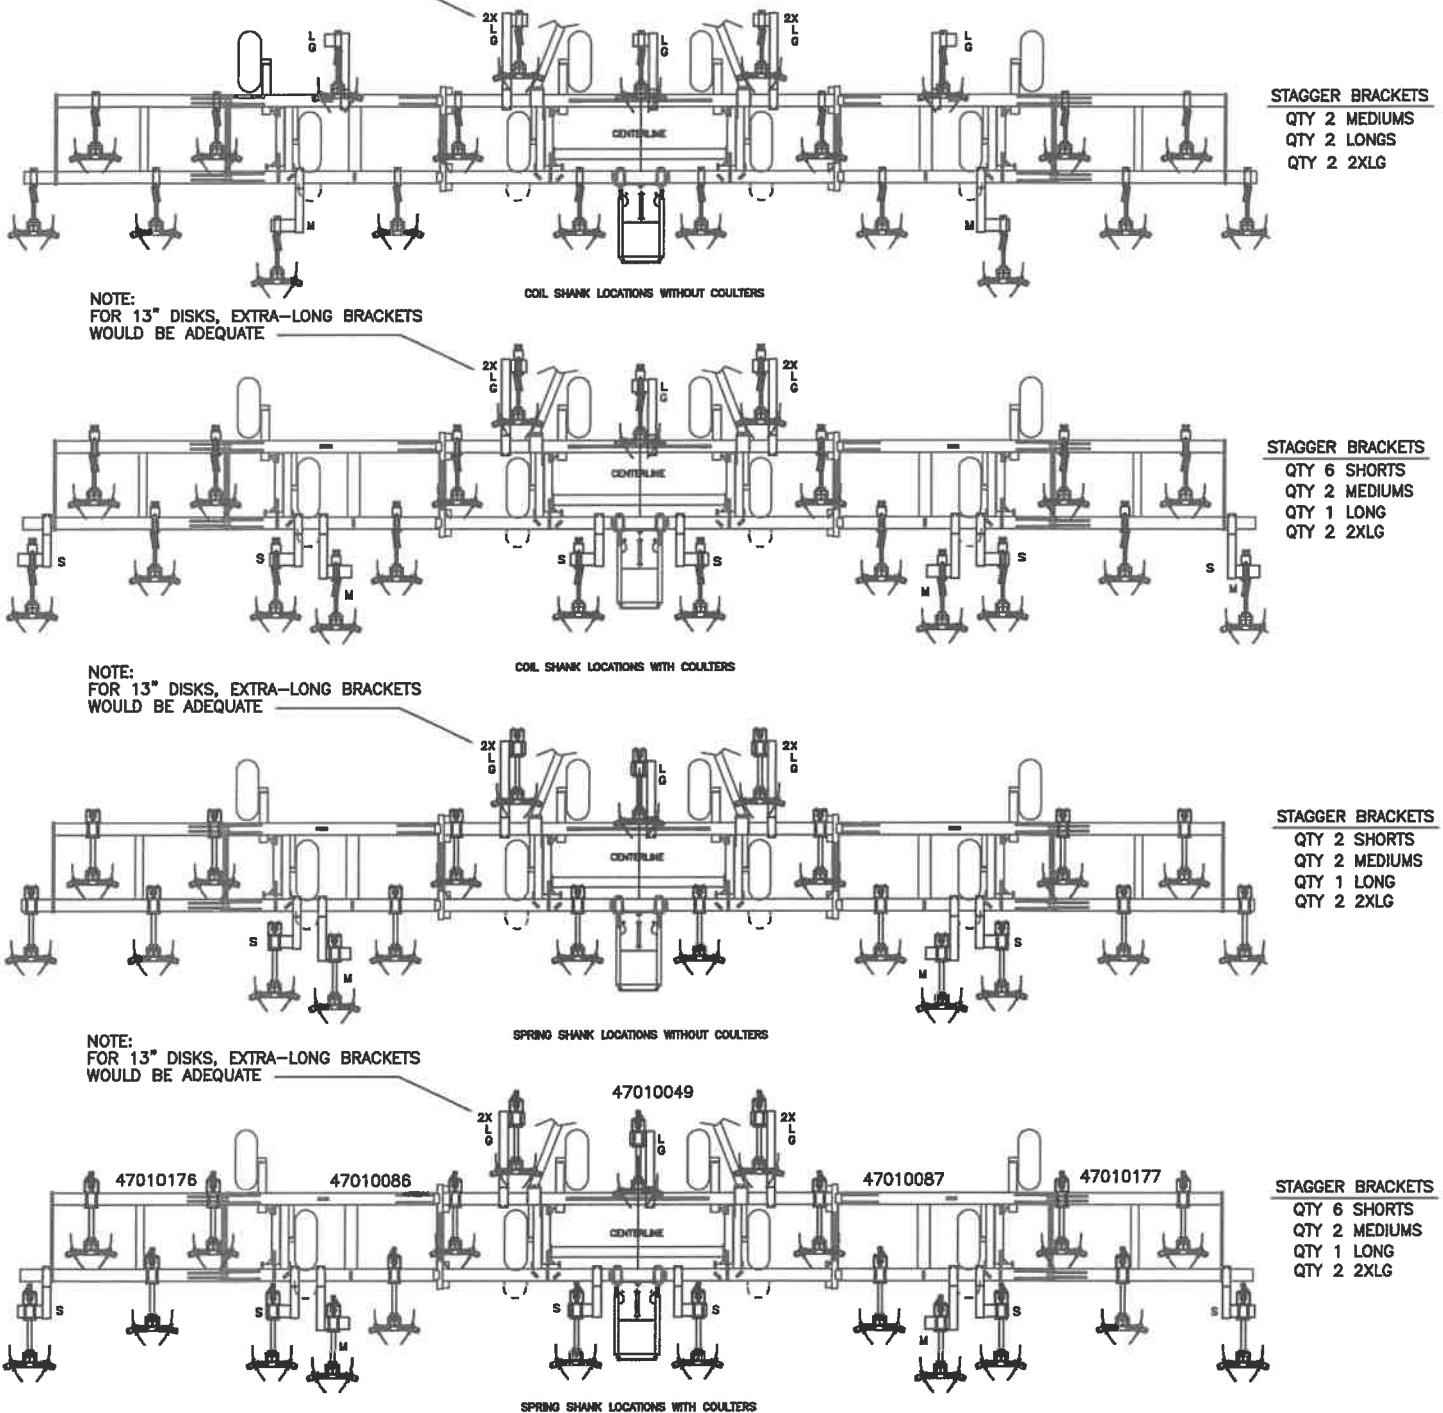

# 8000 TOOLBAR (SPECIAL) SHANK ARRANGEMENTS

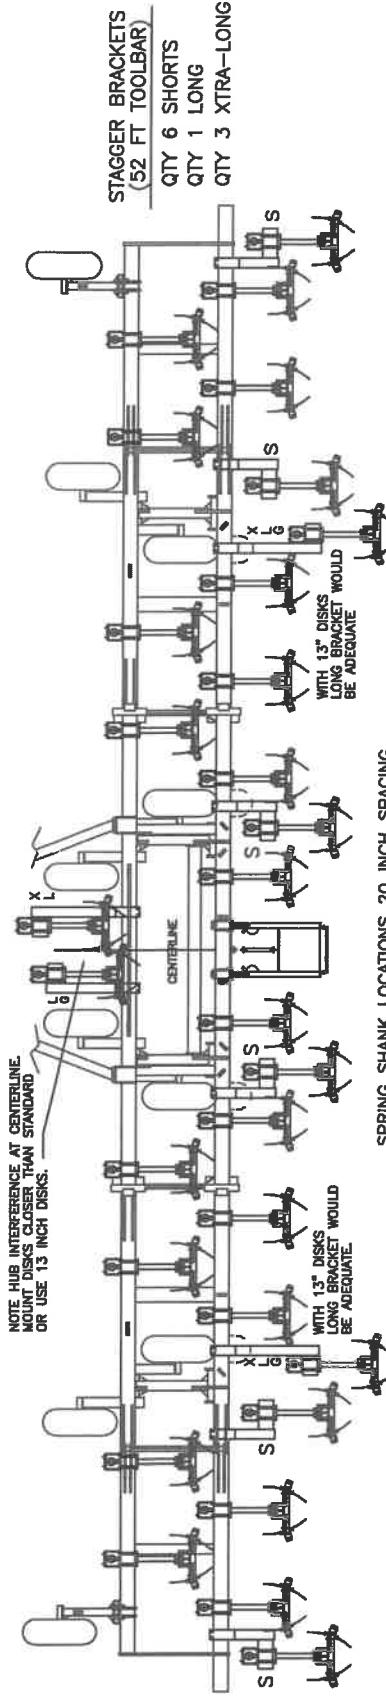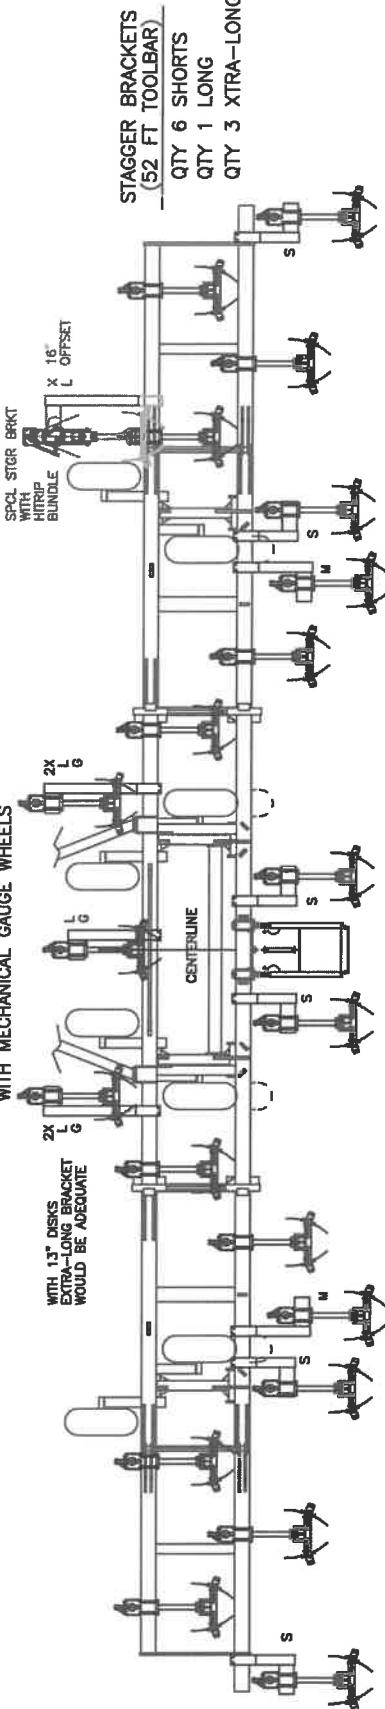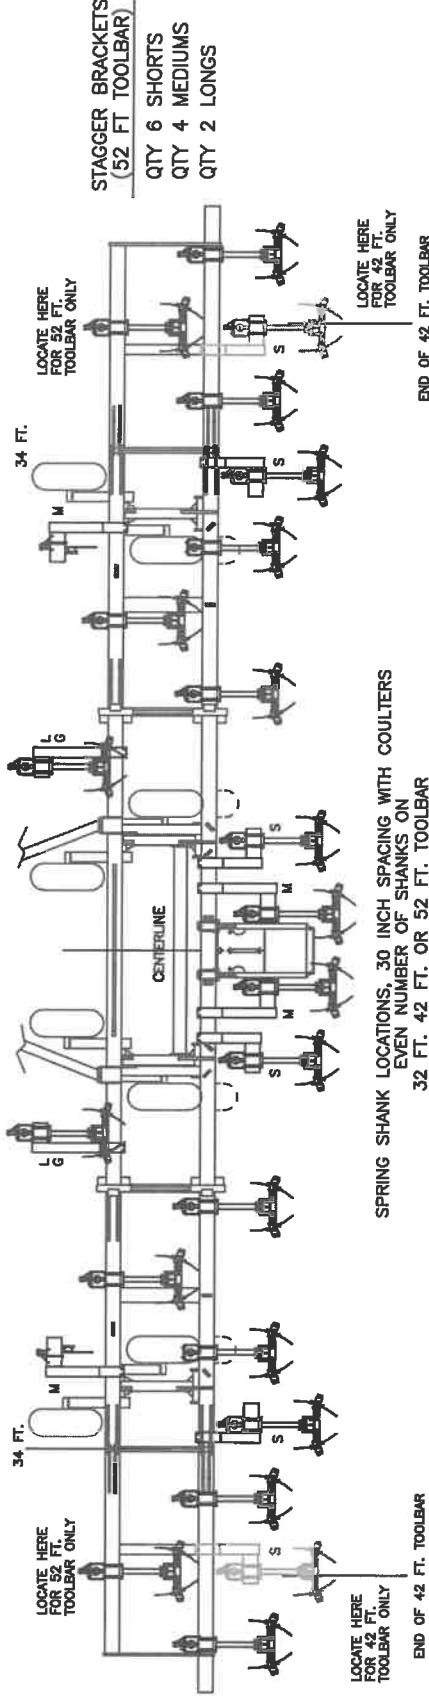8KSPCL1  
REVNO03SPRING SHANK LOCATIONS 20 INCH SPACING  
EVEN NUMBER OF SHANKS, 52 FT. TOOLBAR  
WITH MECHANICAL GAUGE WHEELSSPRING SHANK LOCATIONS, 30" SPACING WITH COULTERS  
FOR 52 FT. TOOLBAR WITH HYDRAULIC GAUGE WHEELS


**8000 TOOLBAR (52 FT TOOLBAR)**

IN MANUAL

39 ROWS AT 15 INCH SPACING  
SPRING SHANK LOCATIONS WITHOUT COULTERS  
WALKERS ON CENTER & PRIMARY WINGS  
AND MANUAL GUAGE WHEELS ON SECONDARY WINGS

8K15X39SBSFH  
PRO 04-22-11

50

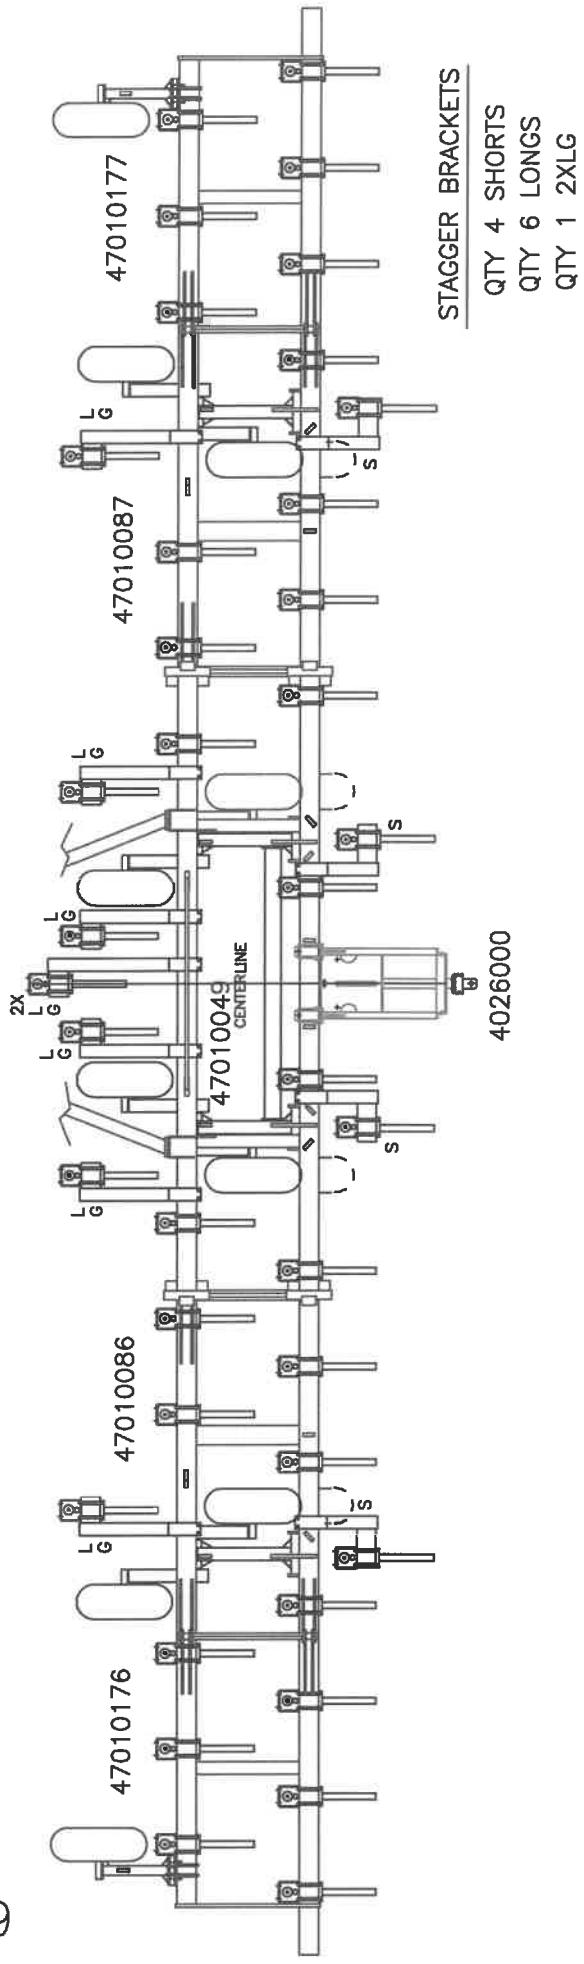

WITH OPTIONAL SINGLE DELUXE FIELD HITCH

(NOTE: MOUNTING DISK COVERS AT 15 INCH SPACING IS NOT RECOMMENDED)


# 8000 TOOLBAR

---

W / HI-TRIP BUNDLES  
30 INCH SPACING G, 21 ROWS  
WITH COULTERS AND DISK SEALERS  
AND FLOATING ARMS


IN MANUAL

8K30HTRP  
REV. A 08/01/07  
REV. B 04/22/08  
REV. C 08-25-11  
REV. D 11-08-11

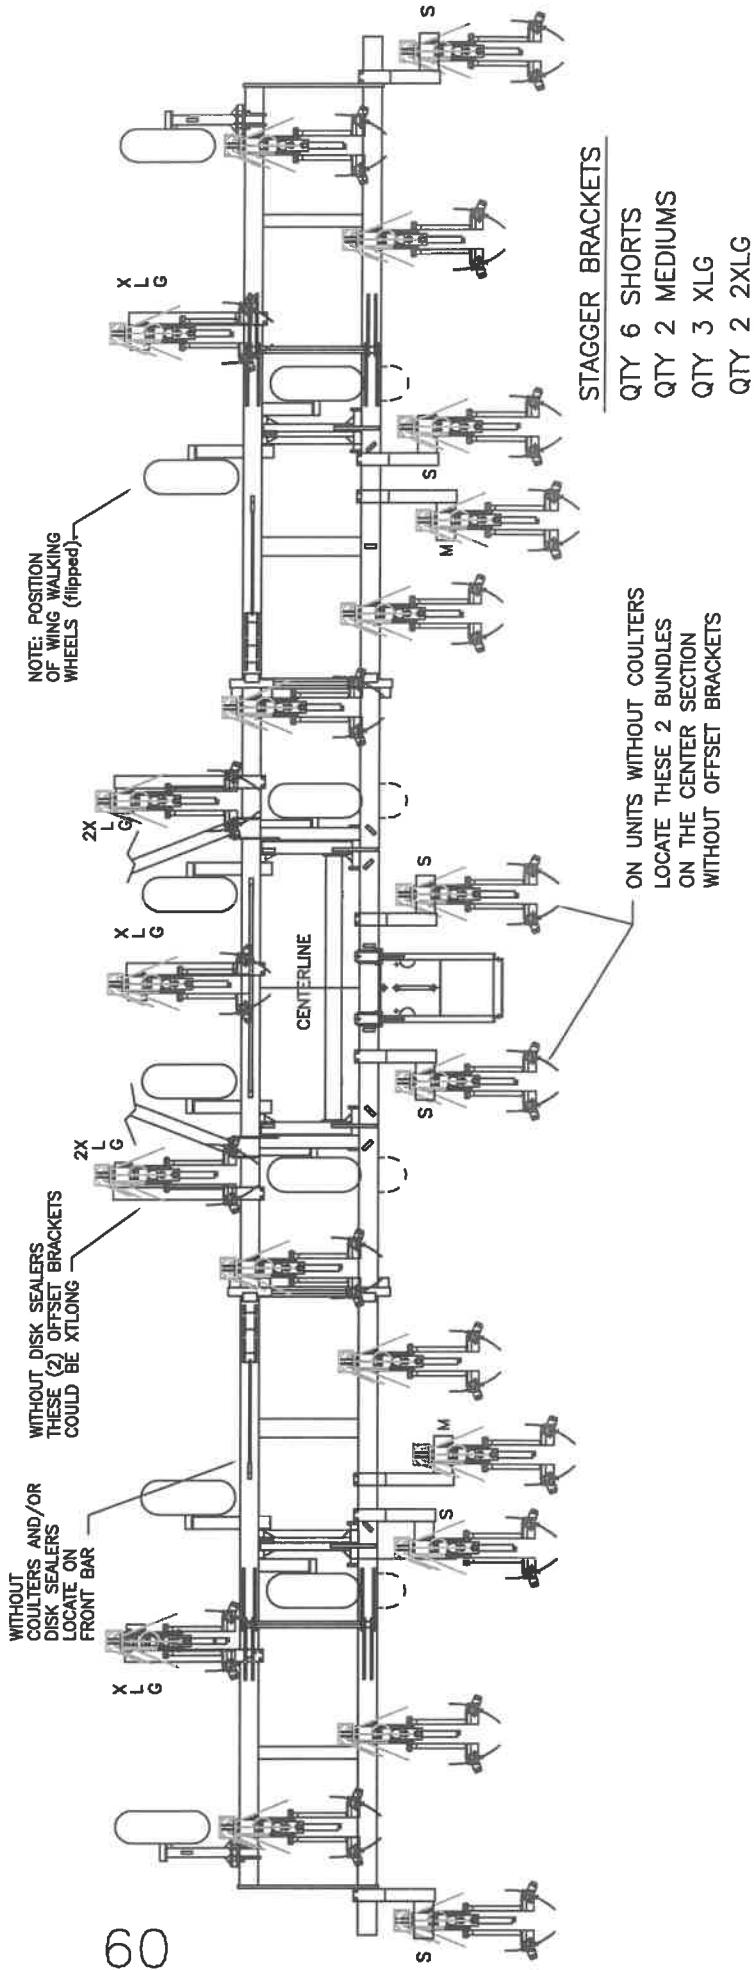

# TWIN BALL HITCH MOUNT

FOR MONTAG STEERABLE CART  
ON A 7200 OR 8000 TOOLBAR

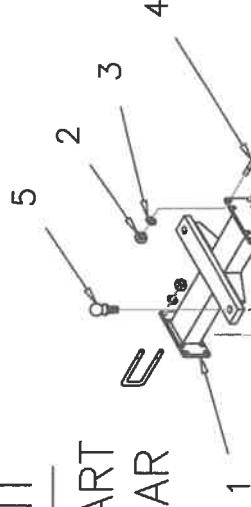

1 MOUNTS TO CENTER  
OF TOOLBAR

6 AG26 MONTAG CART FIELD HITCH  
MOUNTS TO REAR OF MONTAG  
STEER CART ONLY



72KMONTAGCART  
09-17-10


O 1

7200 TOOLBAR SHOWN  
FOR ASSY REFERENCE ONLY

ITEM	PART NO.	DESCRIPTION	QTY
	47995298	32" BALL HITCH ASSY (INCLUDES ITEMS 1 TO 4)	1
1	47005298	32" BALL HITCH WELDT (FITS AG SYSTEMS 7200/8000)	1
2	18417900	HEXNUT, 5/8	16
3	18891600	LOCKWASHER, 5/8	16
4	47007083	U-BOLT, 5/8 (7200)	8
5	47002516	HITCH BALL W HARDWARE (included with Montag Autosteer cart)	2
6		FIELD HITCH (separate item)	

AG26 FIELD HITCH ASSEMBLY  
FOR MONTAG STEERING CART

7 & 10 TON HITCH FITS 8 X 8 & 8 X 12 TUBULAR FRAME  
 7 TON ONLY HITCH (OBSOLETE) FITS 8 X 8 TUBULAR FRAME  
 NOTE: 7 TON ONLY HITCH OBSOLETE DEC 2006

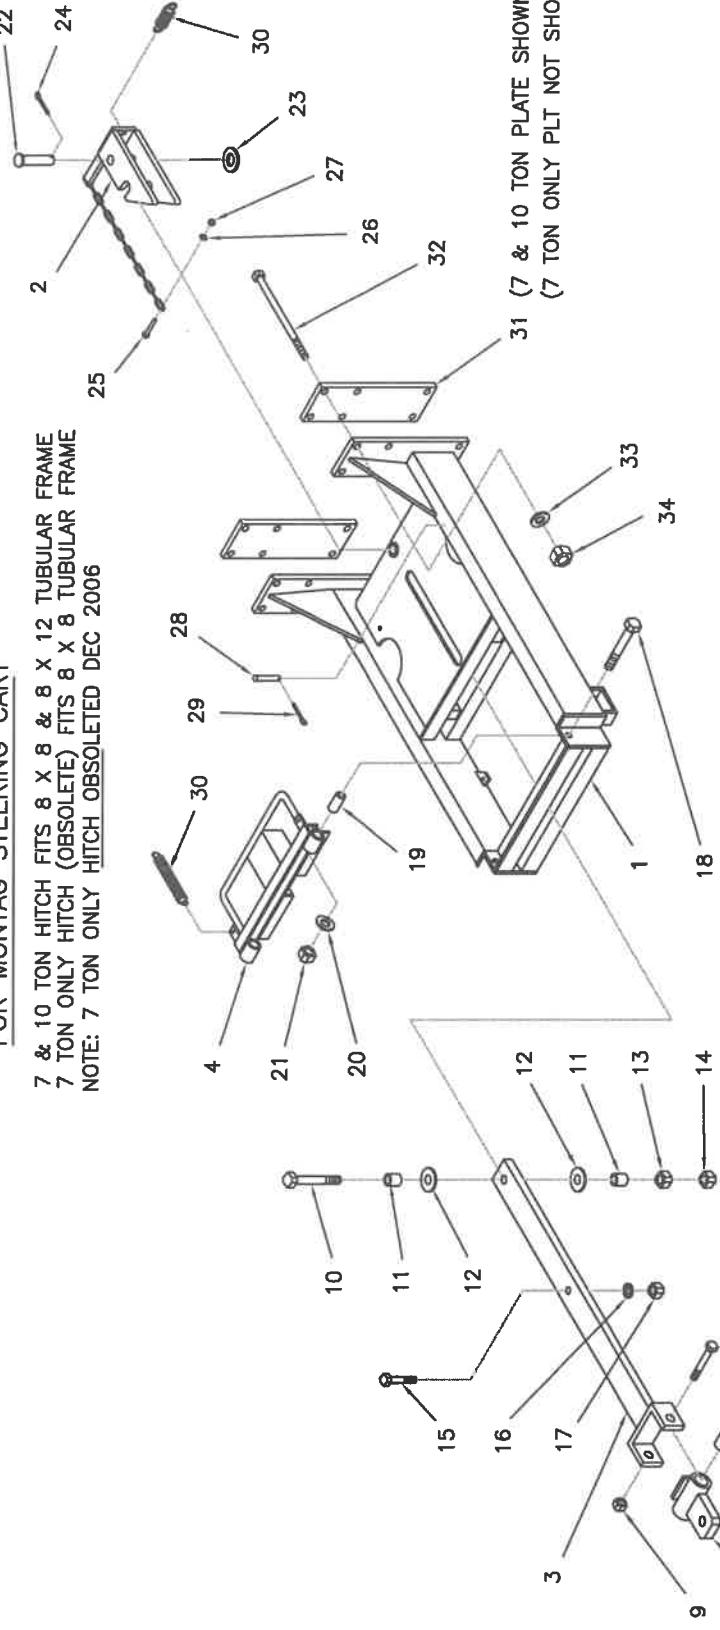

AG26MONTAG  
 02-05-09

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
40269900	40269900	HITCH ASSY (7 TON ONLY)	15	18058430	BOLT, 3/4-10 NC. X 2
40268599	40268599	HITCH ASSY (7 & 10 TON) COMPLETE	16	18891800	LOCKWASHER, 3/4
		INCLUDES ITEMS, 1 THRU 34	17	18418400	HEX. NUT, 3/4-10NC.
40269901	40269901	HITCH ASSY, (7 TON ONLY) LESS MTG	18	18057940	BOLT, 5/8-11INC. X 3 1/2
		BOLTS OBSOLETE 2006	19	47008877	PIVOT BUSHING,
40268598	40268598	HITCH ASSY, (7 & 10 TON) LESS MTG	20	18851600	FLATWASHER, 5/8 IN. ID. SAE.
		BOLTS INCLUDES ITEMS, 1 THRU 30	21	18457900	LOCKNUT, 5/8-11INC.
1	47005153	MAIN FRAME, 7 TON ONLY	22	18451551	CATCH PIVOT PIN.
	47005227	MAIN FRAME, 7 & 10 TON MONTAG	23	18842200	FLATWASHER, 1", SAE
2	47008852	DRAWBAR CATCH	24	18560826	COTTER PIN, 3/16 X 1 1/2
3	47008853	DRAWBAR (SEE NOTE 1)	25	18055722	BOLT, 1/4-18NC. X 1
4	47008854	DRAWBAR LOCK	26	18891000	LOCKWASHER, 1/4 NOM. I.D.
5	47008914	DRAWBAR HITCH, INCLUDES ITEMS, 6 AND 7	27	18435700	HEX. NUT, 1/4-18NC.
6	47008918	FIBER BUSHING	28	18541147	CLEVIS PIN, 5/16 X 2 1/4
7	47008919	SPACER BUSHING	29	18560622	COTTER PIN, 1/8 X 1
8	47008920	SPECIAL BOLT, 1-8NC. X 6 7/8	30	000018	EXTENSION SPRING
9	18459000	HEX. LOCKNUT, 1-8NC.	31	47005155	CLAMPING PLATE (7 TON ONLY)
10	18098539	BOLT, 7/8-9NC. X 5 1/2	32	40269998	CLAMPING PLATE (7 & 10 TON )
11	47009459	CATCH BUSHING, 7/8 I.D. (SAE)	33	18058486	BOLT PKG. INCL. ITEMS 32 THRU 34
12	18852400	FLATWASHER, 1 1/4 NOM. I.D.	34	18891800	BOLT HEX 3/4-10 X 11 GR 5
13	18417800	HEX. NUT, 7/8-9NC.	35	18418400	LOCKWASHER, 3/4 NOM. I.D.
14	18458000	LOCKNUT, 7/8-9NC.			HEX. NUT, 3/4-10NC.



**Earth  
Ag Systems**  
Agriculture, LLC

## WARRANTY CLAIM FORM



**Heartland  
AG SYSTEMS** EQUIPMENT

**Warranty** **C**  
November 4, 2020  
Heartland Agriculture LLC, dba Heartland AG Systems